

VNS-15W01

Panel PC

Quick Reference Guide

4th Ed – 20 March 2019

Copyright Notice

Copyright © 2019 Avalue Technology Inc., ALL RIGHTS RESERVED.

FCC Statement



THIS DEVICE COMPLIES WITH PART 15 FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.

(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS "B" DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES.

THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE IN WHICH CASE THE USER WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT HIS OWN EXPENSE.

A Message to the Customer

Avalue Customer Services

Each and every Avalue's product is built to the most exacting specifications to ensure reliable performance in the harsh and demanding conditions typical of industrial environments. Whether your new Avalue device is destined for the laboratory or the factory floor, you can be assured that your product will provide the reliability and ease of operation for which the name Avalue has come to be known.

Your satisfaction is our primary concern. Here is a guide to Avalue's customer services. To ensure you get the full benefit of our services, please follow the instructions below carefully.

Technical Support

We want you to get the maximum performance from your products. So if you run into technical difficulties, we are here to help. For the most frequently asked questions, you can easily find answers in your product documentation. These answers are normally a lot more detailed than the ones we can give over the phone. So please consult the user's manual first.

To receive the latest version of the user's manual; please visit our Web site at:

<http://www.avalue.com.tw/>

Content

1.	Getting Started	4
1.1	Safety Precautions	4
1.2	Packing List.....	4
1.3	System Specifications	5
1.4	System Overview	8
1.4.1	Front View.....	8
1.4.2	Rear View	9
1.5	System Dimensions	10
2.	Hardware Configuration	11
2.1	VNS-15W01 connector mapping.....	12
2.1.1	Serial port connector (COM).....	12
3.	Handset Feature	13
3.1	VNS-15W01 handset function	14
3.1.1	The voice come out from speaker, When the handset is on the cradle.	14
3.1.2	The voice come out from the handset, when it is lifted up.	14
4.	LED Instruction	15
4.1	VNS-15W01 LED Programmer's Reference manual.....	16
4.1.1	Android Studio	16
4.1.2	Sample code.....	16
4.2	For win 10 LED instruction	17
4.2.1	GENERICEC Library API Programmer's Reference	17
4.2.1.1	GENERICEC_Open.....	17
4.2.1.2	GENERICEC_Close	17
4.2.1.3	GENERICEC_Close	17
4.2.1.4	GENERICEC_Write	18
4.2.2	Standard Operating Procedures.....	19
4.2.2.1	Apps	19
4.2.2.2	Bin	20
4.2.2.3	Driver.....	20
4.2.2.4	Sample	20
4.2.2.5	Demo.....	21
5.	Front Touch Button /Handset Function Instruction	24
5.1	Handset Function / Front Touch Button Instruction	25

1. Getting Started

1.1 Safety Precautions

Warning!



Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges. Only experienced electronics personnel should open the PC chassis.

Caution!



Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.

Risk of Explosion if Battery is replaced by an Incorrect Type. Dispose of Used Batteries According to the Instructions.

Français:

Attention!



Débranchez le câble d'alimentation de votre châssis chaque fois que vous travaillez avec le matériel. Ne faites pas de connexion lorsque le système est allumé. Les composants électroniques sensibles peuvent être endommagés par les surtensions soudaines. Seule les personnels expérimentés de l'électronique peuvent ouvrir le châssis du PC.

Précaution!



Il faut toujours mettre à la masse pour éliminer l'électricité statique avant de toucher la carte CPU. Les appareils électroniques modernes sont très sensibles aux électricité statique. Pour des raisons de sécurité, utilisez un bracelet électrostatique. Placez tous les composants électroniques sur une surface antistatique ou dans un sac antistatique quand ils ne sont pas dans le châssis.

Risque d'explosion si la batterie est remplacée par un type incorrect. Jetez les piles usagées selon les instructions

1.2 Packing List

- 1 x VNS-15W01
- 1 x AC/DC adapter 12V/5A 90 Screw Type (Option)
- 1 x power cord (Option)



If any of the above items is damaged or missing, contact your retailer.

1.3 System Specifications

Component	
CPU	Intel Atom Z8350
CPU Cooler (Type)	Heatsink
Memory	2GB / 4GB DDR3L
Power Supply	DC Input, 12~24V / Powered LAN 802.3AT
Microphone	1 x A-MIC
Speaker	2 x 4Ω 2.0W/2.5W(MAX) speaker(L & R)
Camera	2.0MP Camera
Wireless LAN	WIFI 802.11 b/g/n
Operating System	Windows10 IoT 2016 64bit / Android 5.1 64bit
Storage	
Other Storage Device	32GB/64GB eMMC
External I/O	
Serial Port	1 x RJ45 for RS232/422/485(configurable by BIOS setting)
USB Port	2 x USB 2.0 Type A
LAN Port	1 x 10/100/1000 Ethernet
Indicator Light	LED indicating bar
Others	1 x Headphone- 1 x 3.5mm Audio Jack (4 rings)
Mechanical	
Power Type	DC-IN(12~24V)/ Powered LAN 802.3T)
Power Connector Type	DC-IN : DC Jack 5.7mm Powered LAN+ : RJ45
Dimension	472.1 x 269 x 70.1 mm
Weight	2.5kg
Color	white
Option	1 x Handset
Software	
BIOS	64 bit
Reliability	
EMI Test	CE/ FCC class B
Dust and Rain Test	Front Panel IP65
Vibration Test	<u>Sine Vibration test (Non-operation)</u> Reference IEC60068-2-6 Testing procedures Test Fc : Vibration sinusoidal 1 Test Acceleration : 2G 2 Test frequency : 5~500 Hz


VNS-15W01

	3 Sweep : 1 Oct/ per one minute. (logarithmic) 4 Test Axis : X,Y and Z axis 5 Test time :30 min. each axis 6 System condition : Non-Operating mode <u>Package Vibration Test</u> Reference IEC60068-2-64 Testing procedures Test Fh : Vibration boardband random Test 1. PSD: 0.026G²/Hz , 2.16 Grms 2. Non-operation mode 3. Test Frequency : 5-500Hz 4. Test Axis : X,Y and Z axis 5. 30 min. per each axis <u>Random Vibration Operation</u> Reference IEC60068-2-64 Testing procedures Test Fh : Vibration boardband random Test 1. PSD: 0.00454G²/Hz , 1.5 Grms 2. Operation mode 3. Test Frequency : 5-500Hz 4. Test Axis : X,Y and Z axis 5. 30 minutes per each axis 6. IEC 60068-2-64 Test:Fh
Mechanical Shock Test	<u>Bump Test</u> Reference IEC 60068-2-29 Testing procedures Test Eb : Bump Test 1. Wave form : Half Sine wave 2. Acceleration Rate : 10g for operation mode 3. Duration Time : 11ms 4. No. of Shock : Z axis 300 times 5. Test Axis: Z axis 6. Operation mode
Drop Test	1. One corner , three edges, six faces 2. ISTA 2A, IEC-60068-2-32 Test:Ed
Operating Temperature	0°C ~ 40°C
Operating Humidity	0% ~ 90% Relative Humidity, Non-condensing
Storage Temperature	-20°C ~ 60°C


Quick Reference Guide



Note: Specifications are subject to change without notice.

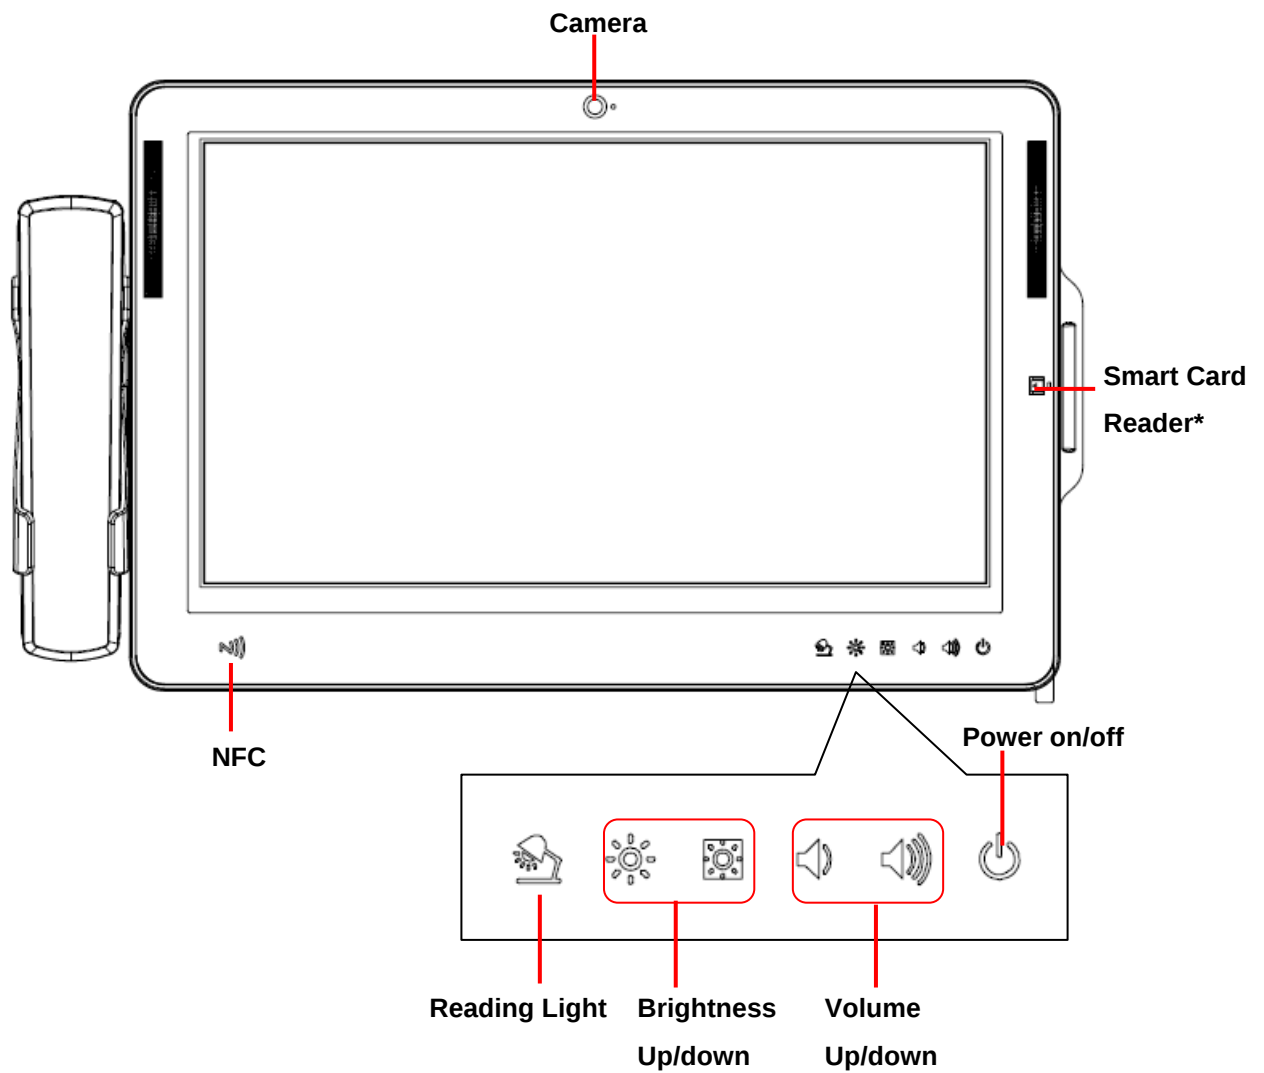VNS-15W01**1.4 System Overview****1.4.1 Front View*****Note:**


Insert the IC card (face down) into the Smart Card Reader slot.

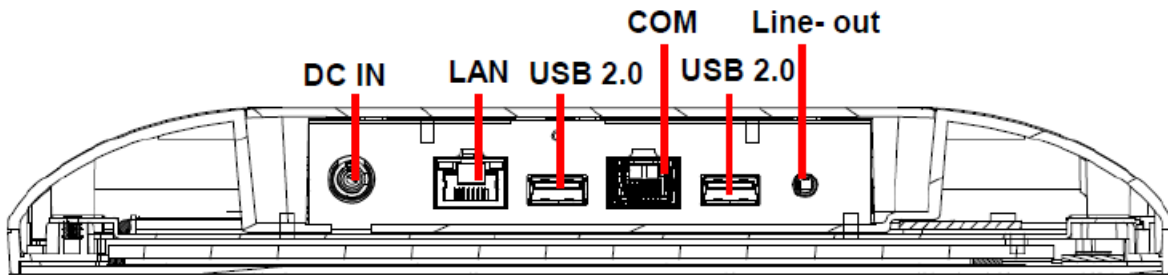Quick Reference Guide**1.4.2 Rear View****Connectors**

Label	Function	Note
DC IN	DC-IN power connector	
LAN	RJ-45 Ethernet	
COM	Serial port connector	
USB	2 x USB2.0 connector	
Line-out	Line-out audio jack	

VNS-15W01

1.5 System Dimensions

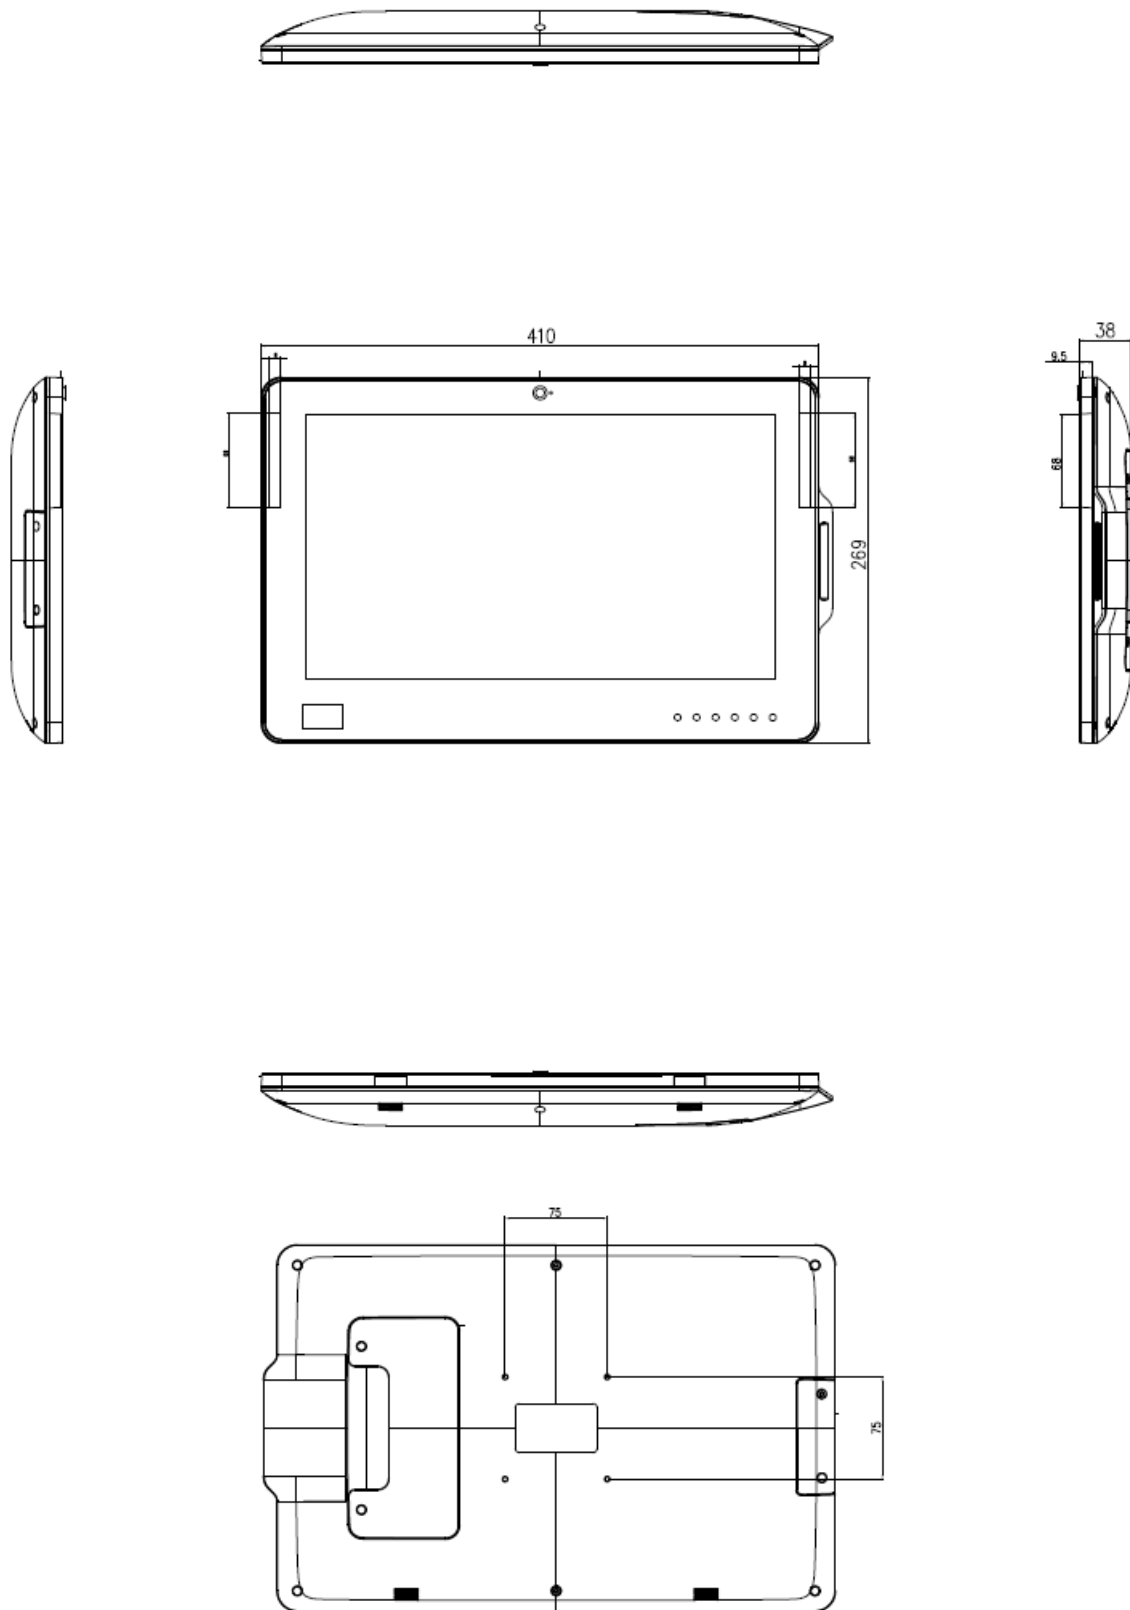



(Unit: mm)

2. Hardware Configuration



Note: If you need more information, please visit our website:

<http://www.avalue.com.tw>

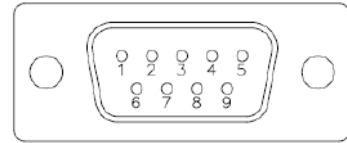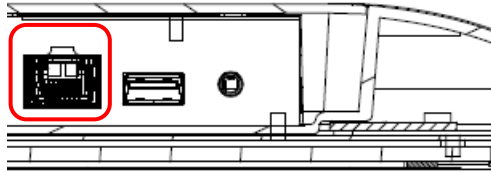VNS-15W01**2.1 VNS-15W01 connector mapping****2.1.1 Serial port connector (COM)****RS-485**

Signal	PIN	PIN	Signal
DATA-	1	6	NC
DATA+	2	7	NC
NC	3	8	NC
NC	4	9	NC
GND	5		

RS-232

Signal	PIN	PIN	Signal
DCD	1	6	DSR
RXD	2	7	RTS
TXD	3	8	CTS
DTR	4	9	RI
GND	5		

RS-422

Signal	PIN	PIN	Signal
TX-	1	6	NC
TX+	2	7	NC
RX+	3	8	NC
RX-	4	9	NC
GND	5		

3. Handset Feature



Note: If you need more information, please visit our website:

<http://www.avalue.com.tw>

VNS-15W01

3.1 VNS-15W01 handset function

- 3.1.1 The voice come out from speaker, When the handset is on the cradle.**
- 3.1.2 The voice come out from the handset, when it is lifted up.**

4. LED Instruction



Note: If you need more information, please visit our website:


<http://www.avalue.com.tw>

VNS-15W01

4.1 VNS-15W01 LED Programmer's Reference manual

4.1.1 Android Studio

- Put the ledlib.jar into the app "libs" folder
- Set the jar file as library

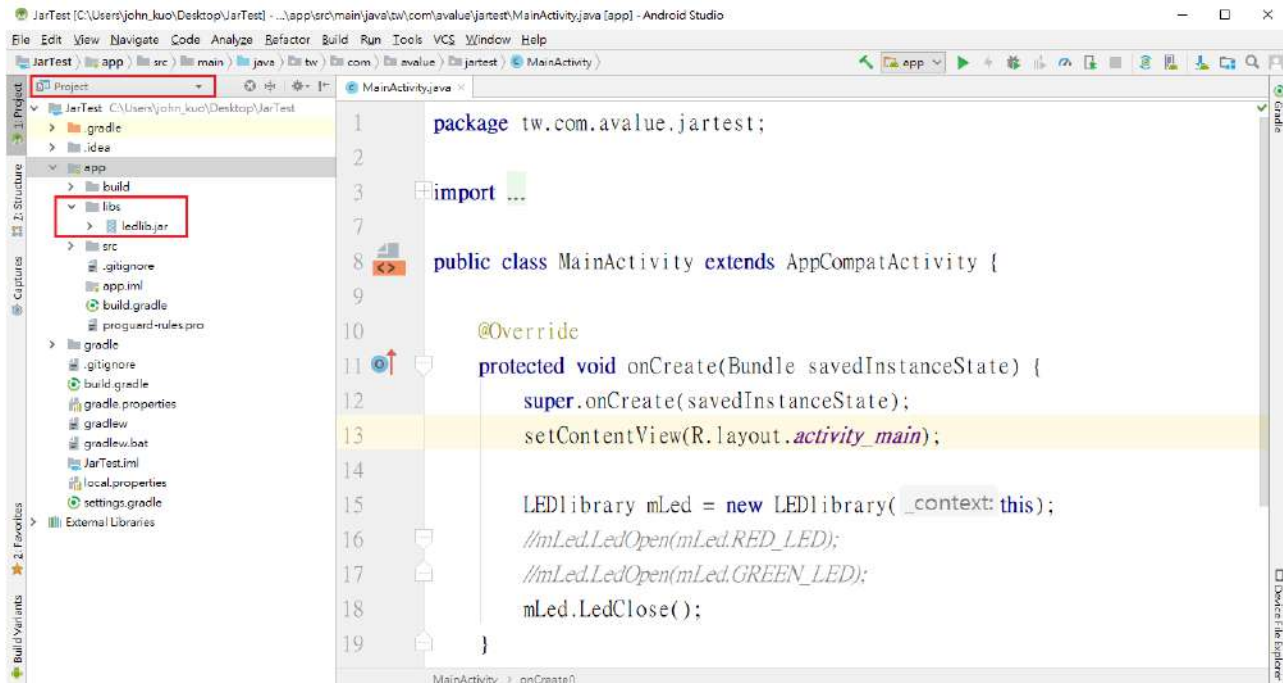

4.1.2 Sample code

- import this library in java file
- You can use the sample code to run any super user command as follows.

```
import tw.com.avalue.ledlibrary.LEDlibrary;
```

```
@Override
```

```
protected void onCreate(Bundle savedInstanceState) {
    super.onCreate(savedInstanceState);
    setContentView(R.layout.activity_main);
```

```

    LEDlibrary mLed = new LEDlibrary(this);
    //mLed.LedOpen(mLed.RED_LED);
    //mLed.LedOpen(mLed.GREEN_LED);
    mLed.LedClose();
}

```

4.2 For win 10 LED instruction

4.2.1 GENERICEC Library API Programmer's Reference

After install the GENERICEC driver on the board, the API DLL file also install into Windows system directory. The functions of API provide are list as below, refer to each function's description to get more detail information.

4.2.1.1 GENERICEC_Open

bool GENERICEC_Open()

Return Value:

True on success and **False** on failure.

Remarks:

The function will loading or initial the GENERICEC driver, for use by the application. If the return value is **False**, it indicates the driver is not installing yet.

4.2.1.2 GENERICEC_Close

bool GENERICEC_Close()

Return Value:

True on success and **False** on failure.

Remarks:

This function will close and unload the GENERICEC driver, it must be called before the application terminates. If the return value is **False**, it indicates the driver is not installing successfully.

4.2.1.3 GENERICEC_Read

bool GENERICEC_Read(unsigned char *wbuf, int wlen, unsigned char *rbuf, int rlen)

Return Value:

True on success and **False** on failure.

Parameters:

<i>wbuf</i>	Write buffer.
<i>wlen</i>	Write buffer length.
<i>rbuf</i>	Read buffer.
<i>rlen</i>	Read buffer length.

Remarks:

Write the **wbuf** data and read the result from the **rbuf**. If the return value is **False**, it indicates the driver is not installing successfully or not uses the **GENERICEC_Open** function first.

VNS-15W01**4.2.1.4 GENERICEC_Write**

bool GENERICEC_Write(unsigned char *wbuf, int wlen)

Return Value:

True on success and **False** on failure.

Parameters:

wbuf Write buffer.


wlen Write buffer length.

Remarks:

Write the **wbuf** data. If the return value is **False**, it indicates the driver is not installing successfully or not uses the **GENERICEC_Open** function first.

4.2.2 Standard Operating Procedures

After have extracted Venus.zip, it can see folder structure as follow.

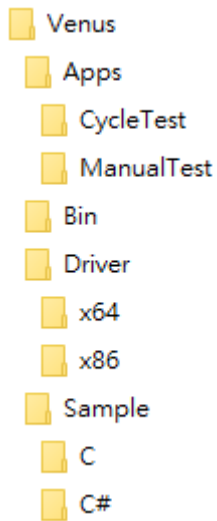


4.2.2.1 Apps

a. CycleTest


Cycle Test LED ON/OFF, auto minimizes the app after executing the program.

Timer Interval: set LED ON/OFF interval seconds.

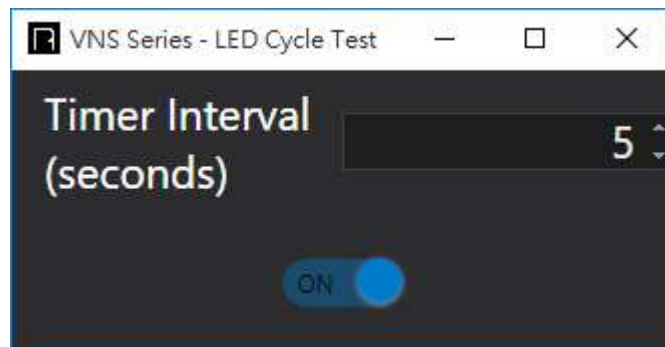

b. ManualTest

Manual test LED ON/OFF, move the app to the center of screen after executing the program.

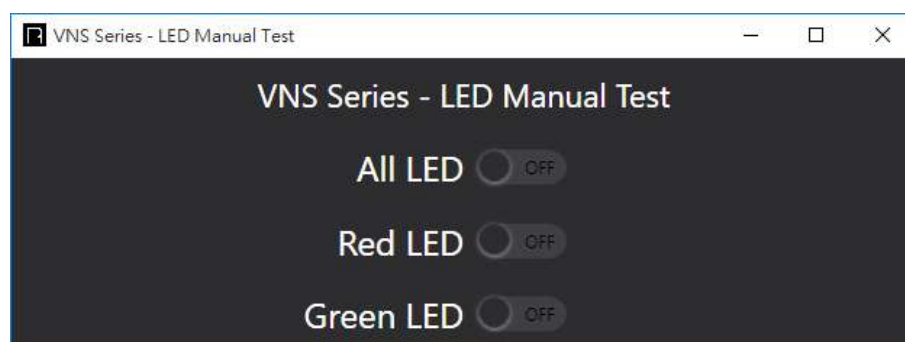

VNS-15W01

4.2.2.2 Bin


GENERICEC.dll, Dynamic-Link Library x86 Architecture.

Communicate with Generic EC Driver via this library.

4.2.2.3 Driver

GENERICEC Driver, x86/x64 Architecture.

This is Venus Series EC Driver. Please make sure target device has installed it.

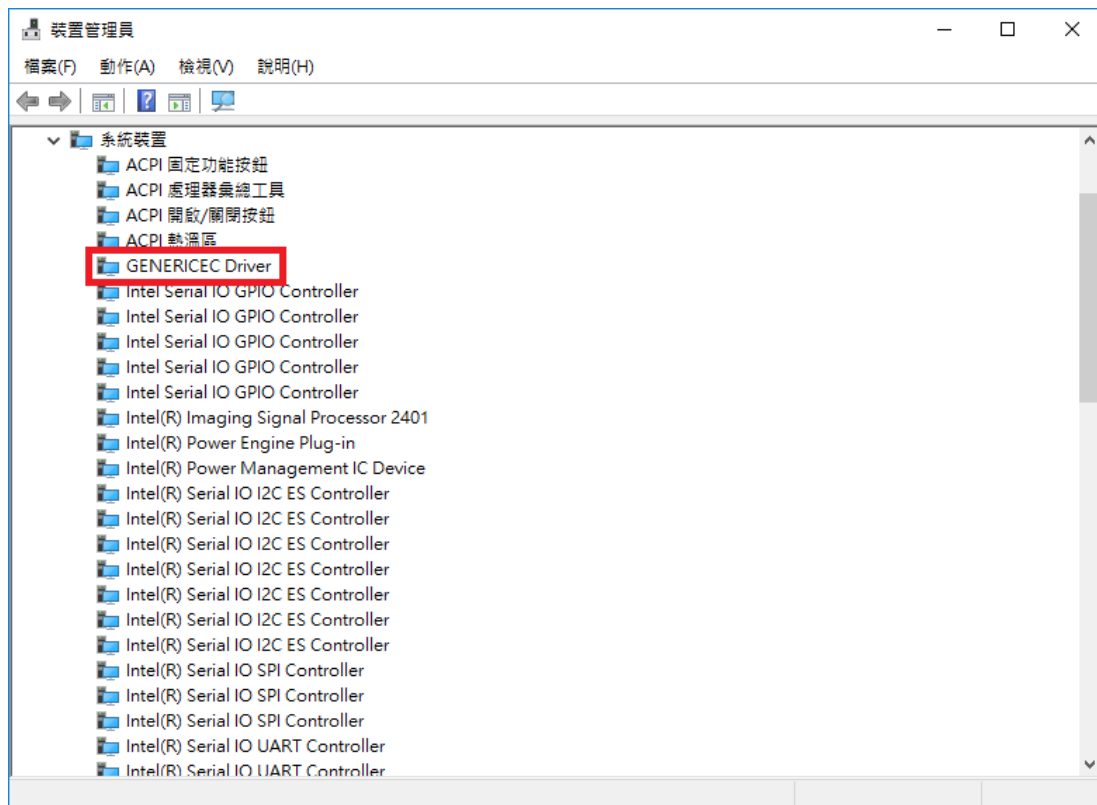

4.2.2.4 Sample

C or C# Language sample code.

Reference this sample code to know how to control LED via GENERICEC.dll.

P.S. The project use Microsoft Visual Studio 2017 to develop sample code. If don't have that, it can download community version to reference sample code.

(<https://imagine.microsoft.com/en-us/Catalog/Product/530>)

CAUTION. Because only provide x86 Dynamic-Link Library, so please create x86 application.

CAUTION. All the test app and sample are only execute on the Venus Series which is installing the GENERICEC Driver.


Quick Reference Guide

4.2.2.5 Demo

- a. Run the Sample\C\Tutorial\Debug\Tutorial.exe and it will show as below picture.




- b. Press enter key to turn all LED on.

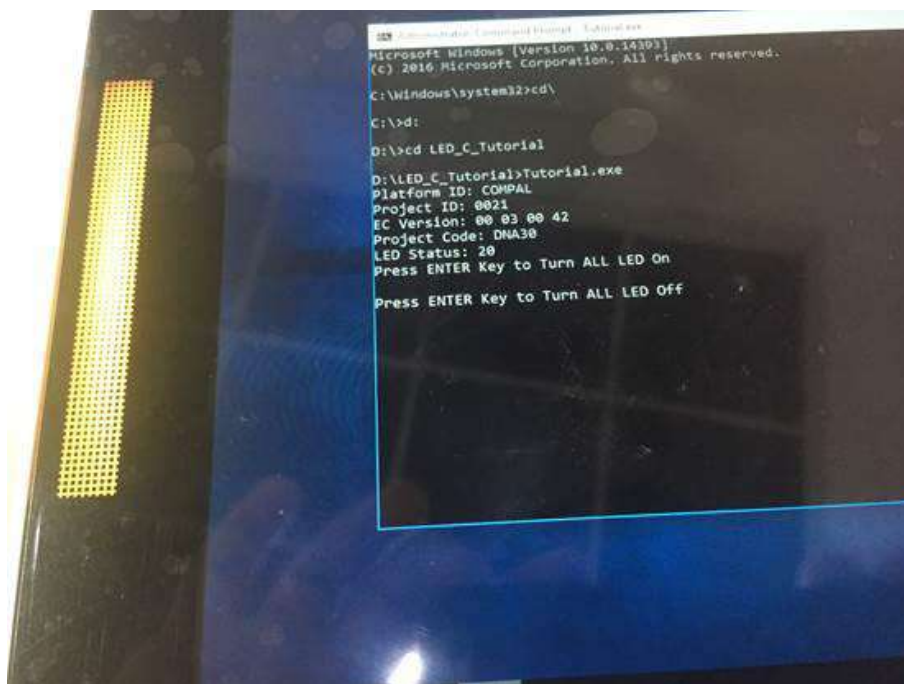

VNS-15W01

c. Press enter key to turn all LED off.

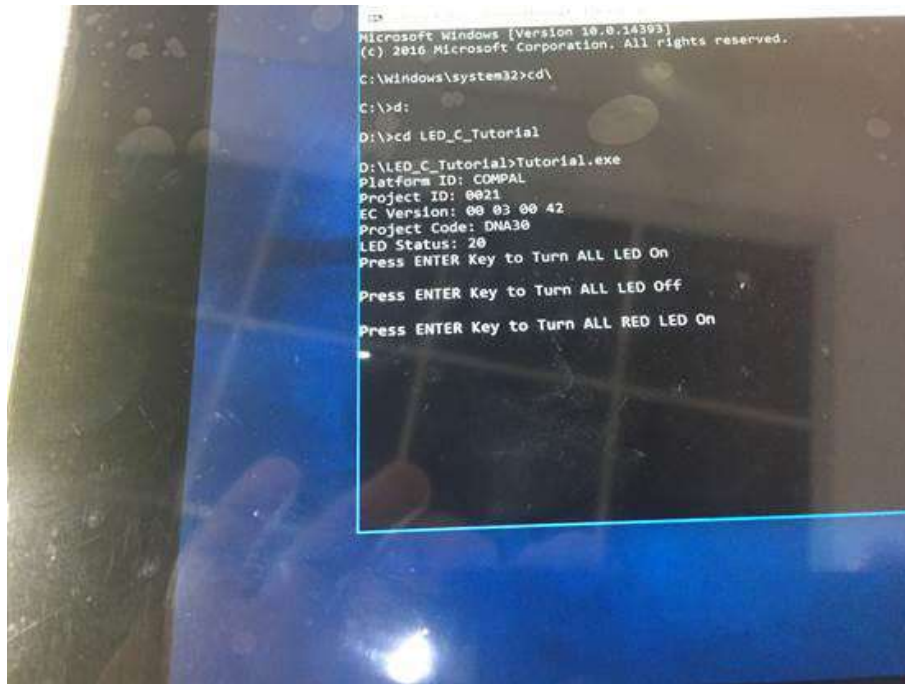

Quick Reference Guide

Note:

- Under Android OS, when shut down by power button, the power light is from green to orange, then will be green after few seconds, the display off after shown "INTEL" again, meanwhile the power light is orange, shut down successfully.
- When get into OS under Android system, the LED on the Smart Card Reader Module is still red light, that LED will be green after insert card.
- If you MUST flash OS, Avalue allows that from Android to Win10 only, the license label is NOT Avalue's responsibility.

5. Front Touch Button /Handset Function Instruction



Note: If you need more information, please visit our website:


<http://www.avalue.com.tw>

5.1 Handset Function / Front Touch Button Instruction


1. Handset function disable as default.

1.1 Press "F2" key into BIOS setup screen.

BIOS path: **Main/Touch Button: Enabled** as default.

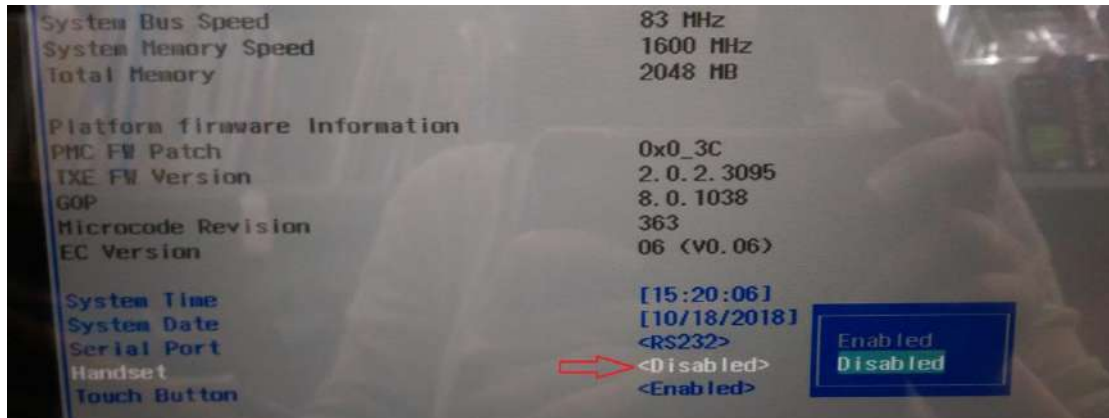

1.2. Change Handset item from Disable to "Enabled".

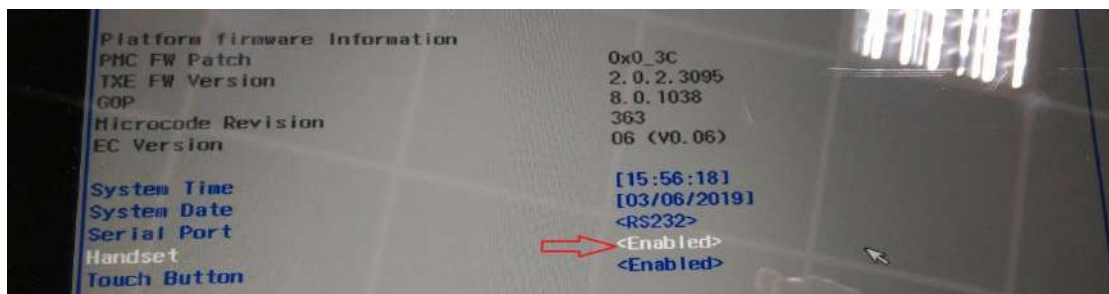

1.3. Press "F10" key to save BIOS setting.




VNS-15W01

2. Front touch button function as Enable.

2.1 Press "F2" key into BIOS setup screen.

BIOS path: Main/Touch Button: Enabled as default.

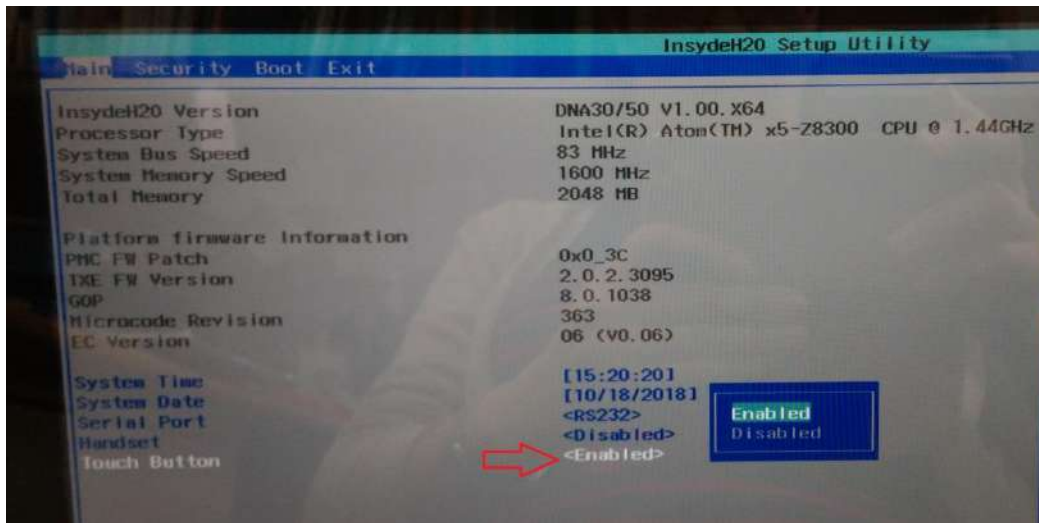

2.2. Change Front touch Button item from Enable to "Disabled".



2.3. Press "F10" key to save BIOS setting.



2.4. Restart VNS system the front touch button function will be turned off.

