
FPC-7700 Series

Robust Box Computer with Intel® Ivy Bridge /
Sandy Bridge Platform

User's Manual

Version 1.3



This page is intentionally left blank.

Revision History

Version	Release Time	Description
1.0	2013 Jan	Initial release
1.1	2013 May	<ol style="list-style-type: none">1. FPC-7700 supports the 2nd HDD/SSD storage device. The changes involved are:<ul style="list-style-type: none">• 1.3. Specifications• 4.1.1.2. Remove the Bottom Cover• 4.1.4. Install SATA Storage Devices2. Appendix C: 3G Module HSPA-SI1400 Hardware/Software Installation is added.3. Appendix D: Wi-Fi Module WIFI-IN1300 Hardware/Software Installation is added.4. Due to the additional appendices C and D, the original section "4.1.3. Install MiniCards" is simplified and changed to 4.1.8. Install Wireless Modules.
1.2	2013 Dec	FPC-7703 is newly featured to support two PCI slots. Related changes are applied throughout the manual.
1.3	2018 Jan	<ul style="list-style-type: none">• RS-422/485 pin definition for COM3 & COM4 of CN1 connector is added to 3.2.3. Connectors• Updated CBL-7100-COM (COM Converter Cable) description in 3.2.3. Connectors

Revision History	i
Contents	ii
Preface.....	v
Copyright Notice.....	v
Declaration of Conformity.....	v
CE	v
FCC Class A.....	v
RoHS.....	vi
SVHC / REACH.....	vi
Important Safety Instructions	vii
Warning.....	viii
Replacing Lithium Battery	viii
Technical Support.....	viii
Warranty.....	ix
Chapter 1 - Introduction.....	1
1.1. The Computer	2
1.2. About this Manual.....	2
1.3. Specifications	3
1.4. Inside the Package.....	5
1.5. Ordering Information	6
1.5.1. Optional Accessories.....	6
1.5.2. Configure-to-Order Service.....	7
Chapter 2 - System Overview.....	9
2.1. Dimensions	10
2.1.1. FPC-7700.....	10
2.1.2. FPC-7701/7702/7703.....	11
2.2. Take A Tour.....	12
2.2.1. Front Views	12
2.2.2. Rear Views.....	14
2.2.3. Side Views	15
2.3. Driver Installation Notes	17
Chapter 3 - System Configuration	19
3.1. Board Layout.....	20
3.2. Jumpers, Connectors and DIP Switches.....	22
3.2.1. Jumpers	22
3.2.2. DIP Switch SW9.....	26
3.2.3. Connectors.....	31
Chapter 4 - Installation and Maintenance.....	49
4.1. Install Hardware	50
4.1.1. Open the Computer.....	50
4.1.2. Install/uninstall Memory Modules.....	56

4.1.3. Install Internal USB Drives	58
4.1.4. Install SATA Storage Devices.....	59
4.1.5. Install PCI and PCI Express Cards	65
4.1.6. Install/uninstall CFast Card	68
4.1.7. Install/uninstall SIM Card	70
4.1.8. Install Wireless Modules	72
4.2. Mount the Computer	73
4.3. Ground the Computer	74
4.4. Wire DC-in Power Source.....	75
Chapter 5 - BIOS	77
5.1. Main	80
5.2. Advanced	81
5.2.1. ACPI Settings.....	82
5.2.2. SS RTC Wake Settings.....	83
5.2.3. CPU Configuration	85
5.2.4. SATA Configuration	86
5.2.6. USB Configuration	89
5.2.8. F81866 H/W Monitor	94
5.2.9. CPU PPM Configuration	95
5.3. Chipset.....	96
5.3.1. PCH-IO Configuration	97
5.3.2. System Agent (SA) Configuration	99
5.4. Boot.....	101
5.4.1. CSM Parameters.....	103
5.5. Security	105
5.6. Save & Exit.....	106
Appendices	107
A: Digital I/O Setting.....	108
B: Watchdog Timer (WDT) Setting	110
C: 3G Module HSPA-SI1400 Hardware/Software Installation.....	111
C.1. Install HSPA-SI1400	111
C.2. Install Device Driver.....	117
C.3. Install Application Program	119
D: Wi-Fi Module WIFI-IN1300 Hardware/Software Installation	122
D.1. Install WIFI-IN1300.....	122
D.2. Install Device Driver & Application Program	128

This page is intentionally left blank.

Copyright Notice

All Rights Reserved.

The information in this document is subject to change without prior notice in order to improve the reliability, design and function. It does not represent a commitment on the part of the manufacturer.

Under no circumstances will the manufacturer be liable for any direct, indirect, special, incidental, or consequential damages arising from the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this document may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Declaration of Conformity

CE

The CE symbol on the computer indicates that it is in compliance with the directives of the Union European (EU). A Certificate of Compliance is available by contacting Technical Support.

This product has passed the CE test for environmental specifications when shielded cables are used for external wiring. We recommend the use of shielded cables. This kind of cable is available from ARBOR. Please contact your local supplier for ordering information.

Warning

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

FCC Class A

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Preface

NOTE:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

RoHS

ARBOR Technology Corp. certifies that all components in its products are in compliance and conform to the European Union's Restriction of Use of Hazardous Substances in Electrical and Electronic Equipment (RoHS) Directive 2002/95/EC.

The above mentioned directive was published on 2/13/2003. The main purpose of the directive is to prohibit the use of lead, mercury, cadmium, hexavalent chromium, polybrominated biphenyls (PBB), and polybrominated diphenyl ethers (PBDE) in electrical and electronic products. Member states of the EU are to enforce by 7/1/2006.

ARBOR Technology Corp. hereby states that the listed products do not contain unintentional additions of lead, mercury, hex chrome, PBB or PBDB that exceed a maximum concentration value of 0.1% by weight or for cadmium exceed 0.01% by weight, per homogenous material. Homogenous material is defined as a substance or mixture of substances with uniform composition (such as solders, resins, plating, etc.). Lead-free solder is used for all terminations (Sn(96-96.5%), Ag(3.0-3.5%) and Cu(0.5%)).

SVHC / REACH

To minimize the environmental impact and take more responsibility to the earth we live, Arbor hereby confirms all products comply with the restriction of SVHC (Substances of Very High Concern) in (EC) 1907/2006 (REACH --Registration, Evaluation, Authorization, and Restriction of Chemicals) regulated by the European Union.

All substances listed in SVHC < 0.1 % by weight (1000 ppm)

Important Safety Instructions

Read these safety instructions carefully

1. Read all cautions and warnings on the equipment.
2. Place this equipment on a reliable surface when installing. Dropping it or letting it fall may cause damage
3. Make sure the correct voltage is connected to the equipment.
4. For pluggable equipment, the socket outlet should be near the equipment and should be easily accessible.
5. Keep this equipment away from humidity.
6. The openings on the enclosure are for air convection and protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
7. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
8. Never pour any liquid into opening. This may cause fire or electrical shock.
9. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
10. If one of the following situations arises, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.
 - d. The equipment does not work well, or you cannot get it to work according to the user's manual.
 - e. The equipment has been dropped or damaged.
 - f. The equipment has obvious signs of breakage.
11. Keep this User's Manual for later reference.

Warning

The Box PC and its components contain very delicately Integrated Circuits (IC). To protect the Box PC and its components against damage caused by static electricity, you should always follow the precautions below when handling it:

1. Disconnect your Box PC from the power source when you want to work on the inside.
2. Use a grounded wrist strap when handling computer components.
3. Place components on a grounded antistatic pad or on the bag that came with the Box PC, whenever components are separated from the system.

Replacing Lithium Battery

Incorrect replacement of the lithium battery may lead to a risk of explosion.

The lithium battery must be replaced with an identical battery or a battery type recommended by the manufacturer.

Do not throw lithium batteries into the trash can. It must be disposed of in accordance with local regulations concerning special waste.

Technical Support

If you have any technical difficulties, please consult the user's manual first at: <ftp://ftp.arbor.com.tw/pub/manual>

Please do not hesitate to call or e-mail our customer service when you still cannot find out the answer.

<http://www.arbor.com.tw>

E-mail: info@arbor.com.tw

Warranty

This product is warranted to be in good working order for a period of one year from the date of purchase. Should this product fail to be in good working order at any time during this period, we will, at our option, replace or repair it at no additional charge except as set forth in the following terms. This warranty does not apply to products damaged by misuse, modifications, accident or disaster.

Vendor assumes no liability for any damages, lost profits, lost savings or any other incidental or consequential damage resulting from the use, misuse of, or inability to use this product. Vendor will not be liable for any claim made by any other related party.

Vendors disclaim all other warranties, either expressed or implied, including but not limited to implied warranties of merchantability and fitness for a particular purpose, with respect to the hardware, the accompanying product's manual(s) and written materials, and any accompanying hardware. This limited warranty gives you specific legal rights.

Return authorization must be obtained from the vendor before returned merchandise will be accepted. Authorization can be obtained by calling or faxing the vendor and requesting a Return Merchandise Authorization (RMA) number. Returned goods should always be accompanied by a clear problem description.

This page is intentionally left blank.

Chapter 1

Introduction

1.1. The Computer

The FPC-7700 Series are ARBOR's new generation of industrial box computers based on Intel® 3rd generation processors Core™ i7, i5 or i3 with chipset Intel® QM77 to deliver low power consumption and high performance.



Integrated with Intel® HD 4000 graphics, the computer supports DirectX 11 to deliver superb video and audio. The RAID-capable computer with dual display ports (DVI-I and DVI-D) suffices for the sophisticated applications such as security surveillance.

The computer features the rich I/O ports including six USB 2.0 ports and four USB 3.0 ports, PCI and PCIe buses, four COM ports for RS232/422/485 protocols, three LAN ports, one SIM card socket and one MiniCard socket for powerful networking and data connections.

The modularized mechanical design makes the computer easy-to-install and easy-to-maintain, and the simple and sturdy design makes the computer ideal for almost every industrial application. This computer is a powerful and reliable system for your infrastructure to deliver uncompromised control over your work network.

1.2. About this Manual

This manual is meant for the experienced users and integrators with hardware knowledge of personal computers. If you are not sure about the description herein, consult your vendor before further handling.

We recommend that you keep one copy of this manual for the quick reference for any necessary maintenance in the future. Thank you for choosing ARBOR products.

1.3. Specifications

System Kernel	
Processor	Intel® 3rd generation Core™ i7 / i5 / i3 processor in rPGA socket
BIOS	AMI UEFI BIOS
Chipset	Intel® QM77 (Ivy Bridge) Chipset
Graphics	Integrated Intel® HD 4000
System Memory	2 x 204-pin DDR3 SO-DIMM sockets supporting up to 16GB at 1333/1600 MHz
Serial ATA	2 x Serial ATA ports for RAID 2 x eSATA
Ethernet Controller	2 x Intel® WG82583V Gigabit Ethernet controllers 1 x Intel® WG82579LM Gigabit Ethernet controller, supporting iAMT
Watchdog Timer	1 ~ 255 levels reset
I/O Ports	
Serial Port	1 x DB-44 female connector for COM1~4 COM1/2 are RS-232 w/ 5v power output COM3/4 are RS-232/422/485 selectable, w/ 2.5 kv isolation protection.
*Selectable Port	1 x DB25 connector for 1 x DIO (8 x IN, 8 x OUT) port or 1 x LPT port (Either one, DIO is the default, but changeable to LPT)
USB Port	6 x USB 2.0 ports, 4 x USB 3.0 ports 2 x internal USB dongles for software license key (configure-to-order for FPC-7701/7702 only)
LAN Port	3 x RJ-45 ports for Gigabit Ethernet
Video Port	1 x DVI-I female connector for digital/analog video output 1 x DVI-D female connector for digital video output
Audio	Mic-in/Line-out
Expansion Bus	1 x MiniCard socket for optional Wi-Fi or HSUPA module 1 x SIM slot / 1 x CFAST slot (both outside accessible) FPC-7701 - 1 x PCIe x16 slot and 1 x PCI slot FPC-7702 - 1 x PCIe x16 slot and 1 x PCIe x8 slot FPC-7703 - 2 x PCI slots

Introduction

Storage	
Type	2 x 2.5" drive bays
	1 x CFAST slot
Qualification	
Certification	CE, FCC Class A
Environment	
Operating Temp.	-20 ~ 55°C (-4 ~ 131°F), ambience w/ air flow
Storage Temp.	-40 ~ 85°C (-40 ~ 185°F)
Operating Humidity	10 ~ 95% @ 55°C (non-condensing)
Vibration	3 Grms/5 ~ 500Hz/random operation w/ SSD
Shock	Operating 20G (11ms); Non-operating 40G with HDD Operating 50G (11ms); Non-operating 80G with SSD
	Crash 100G, 11ms
Mechanical	
Construction	Aluminum alloy
Mounting	Wall mounting
Weight	6.4 kg (14.1 lb) for FPC-7700 7 kg (15.43 lb) for FPC-7701/7702/7703
Dimensions (W x D x H)	225 x 267 x 90 mm for FPC-7700 225 x 267 x 120 mm for FPC-7701/7702/7703
Power Requirement	
Power Input	DC 9~36V input w/ 4-pin terminal block
Power Consumption	3.51A/19V, max. 67W (i7-3610QE)

1.4. Inside the Package

Upon opening the package, carefully inspect the contents. If any of the items is missing or appears damaged, contact your local dealer or distributor. The package should contain the following items:



FPC-7700



Or FPC-7701/7702/7703

1 x FPC-7700 Series
Robust System



1 x Driver CD
1 x User's Manual

1.5. Ordering Information

FPC-7700	Fanless system w/o expansion bus
FPC-7701	Fanless system w/ 1 x PCI and 1 x PCIe16
FPC-7702	Fanless system w/ 1 x PCIe8 and 1 x PCIe16
FPC-7703	Fanless system w/ 2 x PCI

1.5.1. Optional Accessories

The following items are normally optional, but some vendors may include them as a standard package, or some vendors may not carry all the items.

PAC-B120W-FSP
(P/N: 6960301200040P) 120W AC/DC adapter kit



WMK-7000
(P/N: 6940070000000P) Wall-mount kit for FPC-7XXX Series



CBL-7100-COM
(P/N: 3432022000050P) COM converter cable



1.5.2. Configure-to-Order Service

Make the computer more tailored to your needs by selecting one or more components from the list below to be fabricated to the computer.

SSD-25080
Intel® 2.5" 80GB SATAII SSD kit



HSPA-SI1400
HSUPA 3.75G module kit & internal wiring



WiFi-IN1300
Intel® Centrino® Advanced-N 6205 WiFi module w/ 20cm internal wiring



ANT-H11
2dBi HSUPA antenna kit



ANT-D11
1 x WiFi Dual-band 2.4G/5G antenna

P/N: 5001642491492P
Intel® Core i3-3120ME, L2/3M, 2.4G


P/N: 5001642791490P
Intel® Core i5-3610ME, L2/3M, 2.7G



P/N: 5001642391490P
Intel® Core i7-3610QE, L2/6M, 2.3G

MK-3C-4G-1
DDR3-1333 4GB SDRAM DIMM1 kit

MK-3C-4G-2
DDR3-1333 4GB SDRAM DIMM2 kit



MK-3C-8G-1
DDR3-1333 8GB SDRAM DIMM1 kit

MK-3C-8G-2
DDR3-1333 8GB SDRAM DIMM2 kit

UDK-7702
Internal USB dongle kit for FPC-7701/7702



This page is intentionally left blank.


Chapter 2

System Overview

2.1. Dimensions


The following illustration shows the dimensions of each FPC-7700 and FPC-7701/7702/7703, with the measurements in width, depth, and height called out.

2.1.1. FPC-7700

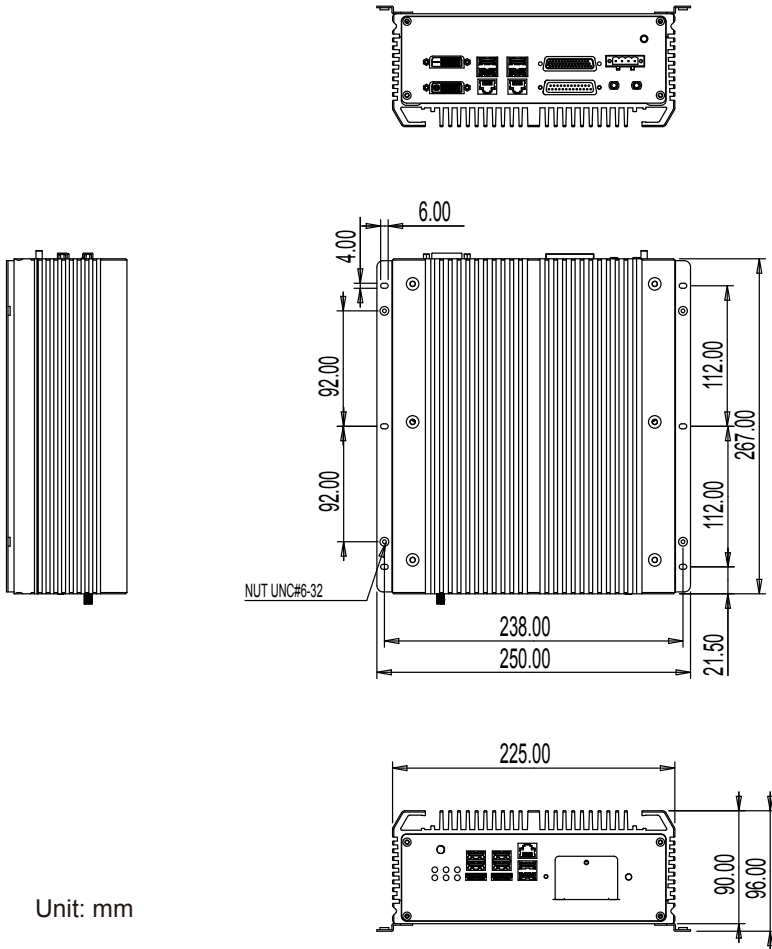

Unit: mm

2.1.2. FPC-7701/7702/7703

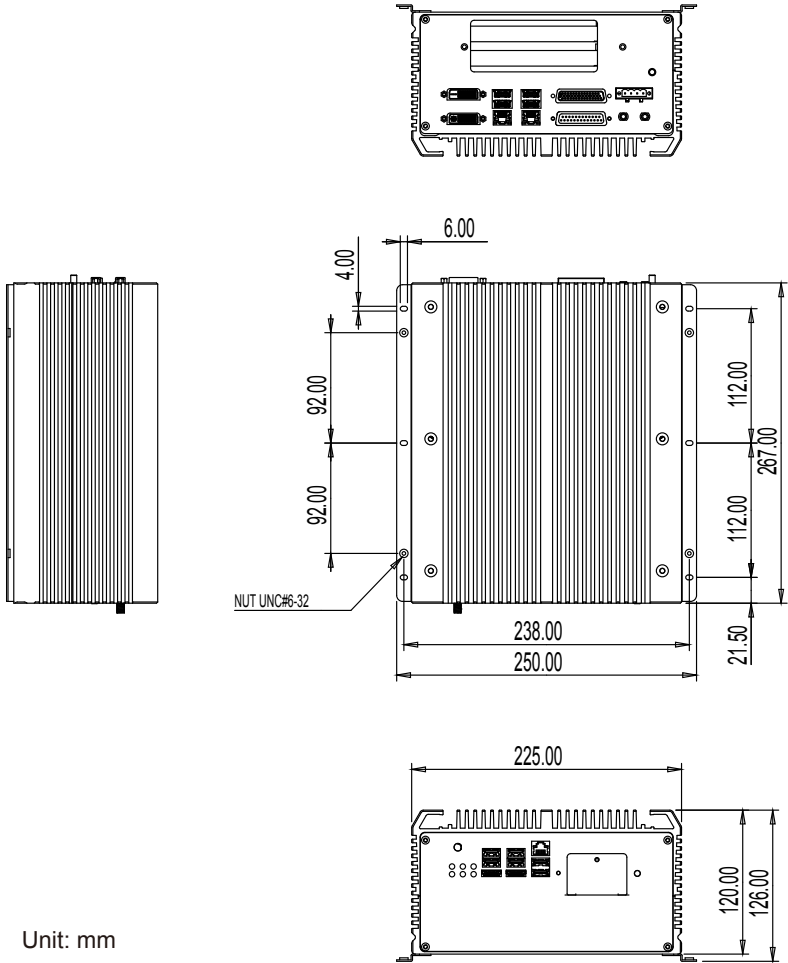

Unit: mm


System Overview

2.2. Take A Tour

The computer has some I/O ports, status LED lights and controls on the front and rear panels. The following illustrations show all the components called out for all FPC-7700 and FPC-7701/7702/7703.


2.2.1. Front Views

- FPC-7700 Front

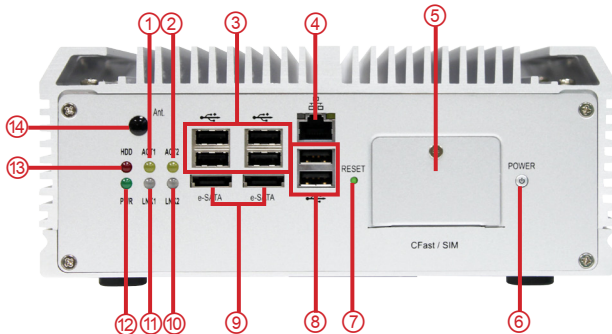

No.	Description	No.	Description
①	LAN1 Active LED	⑧	USB 2.0 ports
②	LAN2 Active LED	⑨	eSATA ports
③	USB 2.0 ports	⑩	LAN2 Link LED
④	LAN port	⑪	LAN1 Link LED
⑤	CFast/SIM slots	⑫	Power LED
⑥	Power button	⑬	HDD status LED
⑦	Reset toggle	⑭	Antenna hole

- FPC-7701/7702/7703 Front

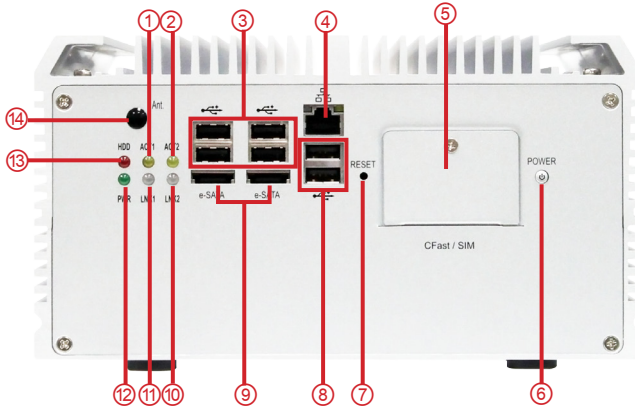


No.	Description	No.	Description
①	LAN1 Active LED	⑧	USB 2.0 ports
②	LAN2 Active LED	⑨	eSATA ports
③	USB 2.0 ports	⑩	LAN2 Link LED
④	LAN port	⑪	LAN1 Link LED
⑤	CFast/SIM slots	⑫	Power LED
⑥	Power button	⑬	HDD status LED
⑦	Reset toggle	⑭	Antenna hole


2.2.2. Rear Views

Take a look at the rear sides of FPC-7700 and FPC-7701/7702/7703.

- FPC-7700 Rear

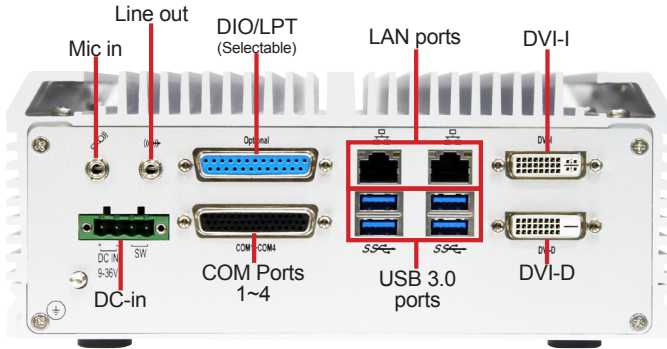

- FPC-7701/7702/7703 Rear

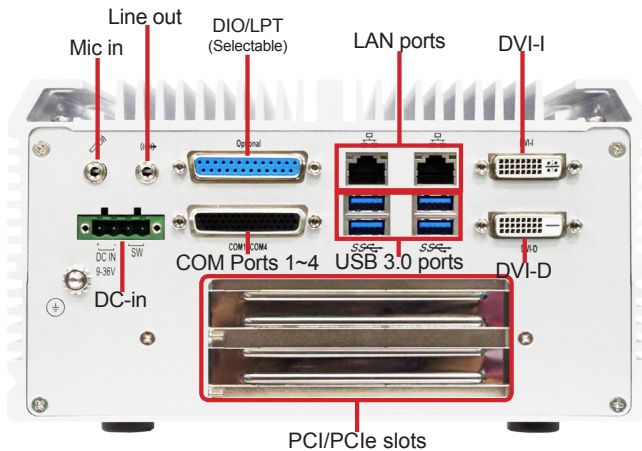

2.2.3. Side Views

- FPC-7700 Front-right



FPC-7700 Rear-left



System Overview

- FPC-7701/7702/7703 Front-right



FPC-7701/7702/7703 Rear-left



2.3. Driver Installation Notes

The FPC-7700 Series support the operating systems of Windows XP, Windows 7 and Linux. For Windows O.S., find the necessary device drivers on the CD that comes with your purchase. For different O.S., the installation of drivers/ utilities may vary slightly, but generally they are similar. **DO** follow the sequence below to install the drivers to prevent errors:

Chipset→.NET Framework→VGA→Audio→LAN→ME→USB 3.0

To install AHCI driver, the system's SATA configuration needs to change to AHCI first. See [5.2.4. SATA Configuration](#) on page [86](#) to know how to change the setting.

This computer supports Intel® Management Engine, a microcontroller embedded in the PCH chipset, which joins the associated firmware to form the architecture of Intel® AMT (Active Management Technology) for a remote management console to connect to a client through the network. Intel® Management Engine is able to work even in the absence of the O.S. (the “out-of-band” capability) To make Intel® ME work correctly on the computer, install the driver included on the CD.

Paths to find various drivers on the CD:

Windows XP

Driver	Path
Chipset	INF\Intel Chipset Software Installation Utility
VGA	Graphic driver\XP\winxp Graphic driver\XP\winxp64
LAN	LAN\XP_WIN7_SERIES\32 LAN\XP_WIN7_SERIES\64
Audio	AUDIO\XP
Intel® Management Engine	ME\ME
.NET Framework	Framework 3.5
AHCI	AHCI\Intel_RST_F6_floppy_Installer_WinXP_ v11.1.0.1006

Windows 7

Driver	Path
Chipset	INF\Intel Chipset Software Installation Utility
VGA	Graphic driver\WIN7\Graphic_win7_64_V8.15.10.2795 Graphic driver\WIN7\Intel HD Graphics Driver - 32 Bit
LAN	LAN\XP_WIN7_SERIES\32 LAN\XP_WIN7_SERIES\64
Audio	AUDIO\WIN7
USB 3.0	USB 3.0\Intel_USB_3.0_xHC_Driver_ENG_1.0.4.225\ Intel(R) USB 3.0 eXtensible Host Controller Driver ENG 1.0.4.225\Driver_Installer
Intel® Management Engine	ME\ME
.NET Framework	Framework 3.5


Chapter 3

System Configuration

3.1. Board Layout

The main board FMB-i77M1 forms the engine of the FPC-7700 Series computers. This section will provide an thorough view of this board.

FMB-i77M1: Board Top

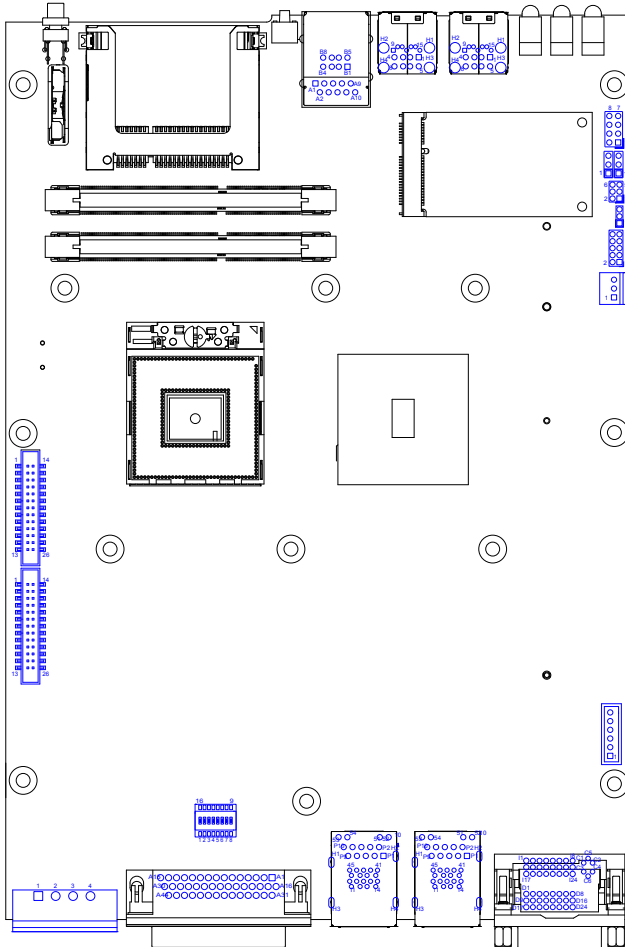

3.2. Jumpers, Connectors and DIP Switches

The main board FMB-i77M1 comes with some connectors to join cables to other devices and some jumpers and DIP switches to alter hardware configuration. The following in this chapter will explicate each of the components one-by-one.



3.2.1. Jumpers

JBAT1


Function: CMOS Setting

Jumper Type: Onboard 2.54mm pitch
1x3-pin header

Setting:

Pin	Function	Setting
1-2	Keeps CMOS (Default)	
2-3	Clears CMOS	

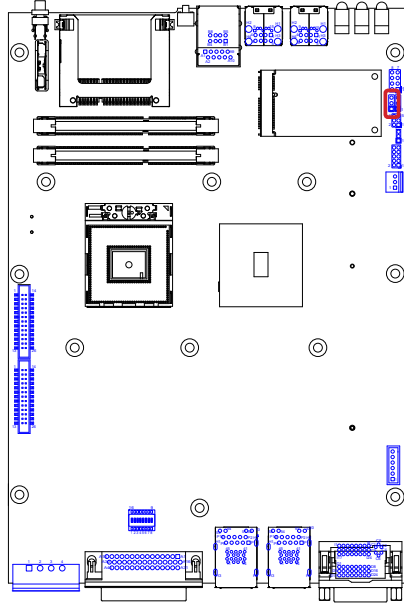

Board Top




JME1

Function: Enables/disables Intel® Management Engine
Jumper Type: Onboard 2.00mm pitch 1x3-pin header

Setting:

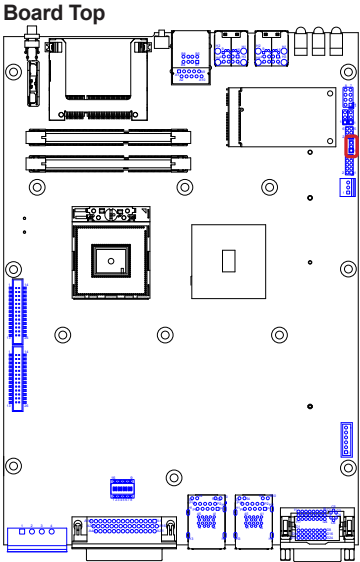

Pin	Description	Setting
1-2	Enables ME (default)	
2-3	Disables ME	



J1


Function: Controls power supply mode
Jumper Type: Onboard 2.54mm pitch 1x3-pin header

Setting:

Pin	Description	Setting
1-2	Sets power supply to AT mode	
2-3	Sets power supply to ATX mode (default)	

- ▶ Note this setting should be consistent with **BIOS | Advanced | ACPI Settings | Power-Supply Type** to prevent conflict. See [5.2.1. ACPI Settings](#) on page [82](#).



Board Top

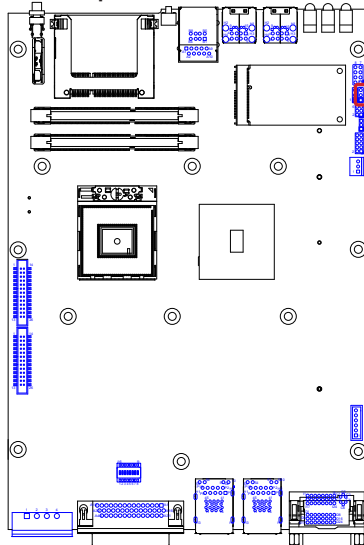

JPIC1

Description: External PIC programming pin header
Jumper Type: Onboard 2.00mm pitch 3x2-pin header



Pin	Description
1	
2	ICSP-CLK
3	ICSP-DAT
4	GND
5	VCC5_PIC
6	MCU_RST

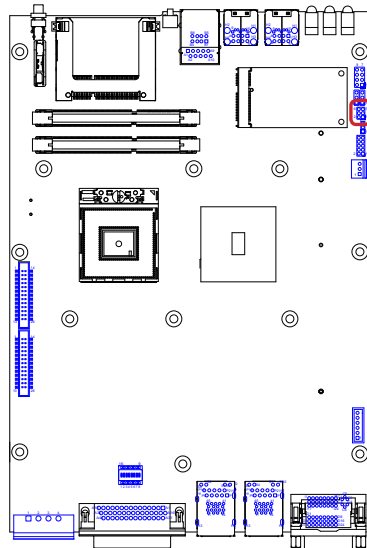

LPC11

Function: Board debugging
Jumper Type: Onboard 2.00mm pitch 2x5-pin header


Pin	Description
1	PCLK_FWH
2	GND
3	LFRAME#
4	LAD0
5	BUF_PLTRST_N
6	NC
7	LAD3
8	LAD2
9	3V3S
10	LAD1

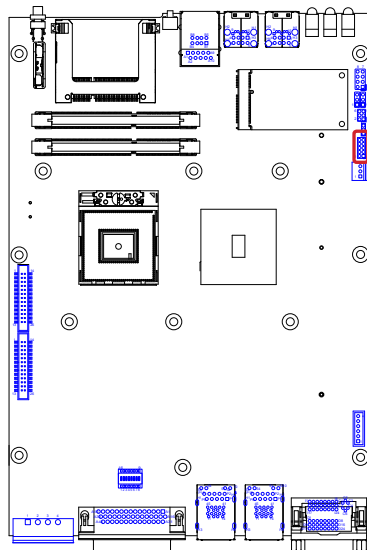


3.2.2. DIP Switch SW9

The computer comes with a DB44 female connector for COM ports 1~4. COM1 and COM2 are fixed to RS232 while COM3 and COM4 can be switched between loopback, RS232, RS485 half-duplex and RS485/RS422 full-duplex. The main board is provided with a 8-toggle (16-pin) DIP switch on the top side to switch COM3 and COM4 among the available protocols

Board Top

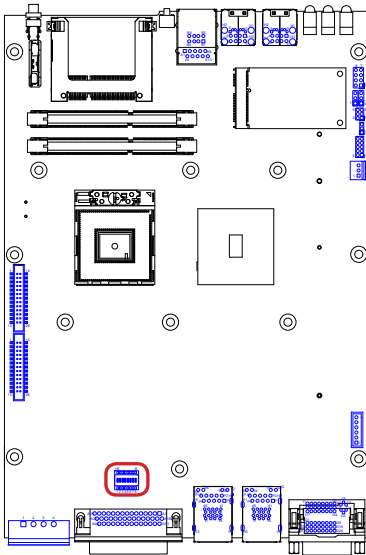


Among the toggles: Toggles 1, 2 and 3 control COM3. Toggles 4, 5 and 6 control COM4.

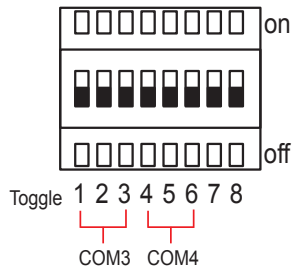

Signal Control

Toggle	Low	High
	Position	Position
1	off	on
2	off	on
3	off	on
4	off	on
5	off	on
6	off	on
7	off	on
8	off	on

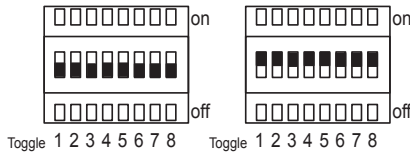

Follow the guide below to switch COM3 and COM4 between loop-back, RS232, RS485 Half-Duplex and RS485/422 Full Duplex.

Note the DIP switch setting here needs to be consistent with **BIOS | Advanced Menu | F81866 Second Super IO Configuration | Serial Port 3 Configuration and Serial Port 4 Configuration** to prevent possible conflict. See [5.2.7. F81866 Super IO Configuration](#) on page 90.

- COM3 Settings**

COM3		Toggle	Position	Setting
Loop-back	1		off	
	2		off	
	3		off	
	4		not applicable	
	5		not applicable	
	6		not applicable	
	7		not applicable	
	8		not applicable	

COM3	Toggle	Position	Setting
RS232	1	on	
	2	off	
	3	off	
	4	not applicable	
	5	not applicable	
	6	not applicable	
	7	not applicable	
	8	not applicable	

COM3	Toggle	Position	Setting
RS485 Half-Duplex	1	off	
	2	on	
	3	off	
	4	not applicable	
	5	not applicable	
	6	not applicable	
	7	not applicable	
	8	not applicable	

- ▶ Note this setting should be consistent with **BIOS | Advanced menu | F81866 Second Super IO Configuration | Serial Port 3 Configuration** to prevent conflict. See [Serial Port 3 Configuration](#) on page 91.

COM3	Toggle	Position	Setting
RS485/RS422 Full-Duplex	1	on	
	2	on	
	3	off	
	4	not applicable	
	5	not applicable	
	6	not applicable	
	7	not applicable	
	8	not applicable	

- ▶ Note this setting should be consistent with **BIOS | Advanced menu | F81866 Second Super IO Configuration | Serial Port 3 Configuration** to prevent conflict. See [Serial Port 3 Configuration](#) on page 91.

- COM4 Settings

COM4	Toggle	Position	Setting
Loop-back	1	not applicable	<p>on</p> <p>off</p> <p>Toggle 1 2 3 4 5 6 7 8</p>
	2	not applicable	
	3	not applicable	
	4	off	
	5	off	
	6	off	
	7	not applicable	
	8	not applicable	

COM4	Toggle	Position	Setting
RS232	1	not applicable	<p>on</p> <p>off</p> <p>Toggle 1 2 3 4 5 6 7 8</p>
	2	not applicable	
	3	not applicable	
	4	on	
	5	off	
	6	off	
	7	not applicable	
	8	not applicable	

COM4	Toggle	Position	Setting
RS485 Half-Duplex	1	not applicable	<p>on</p> <p>off</p> <p>Toggle 1 2 3 4 5 6 7 8</p>
	2	not applicable	
	3	not applicable	
	4	off	
	5	on	
	6	off	
	7	not applicable	
	8	not applicable	

- ▶ Note this setting should be consistent with **BIOS | Advanced menu | F81866 Second Super IO Configuration | Serial Port 4 Configuration** to prevent conflict. See [Serial Port 4 Configuration](#) on page 91.

COM4		Setting							
Toggle	Position								
1	not applicable								
2	not applicable								
3	not applicable								
4	on								
5	on								
6	off								
7	not applicable								
8	not applicable								

- ▶ Note this setting should be consistent with **BIOS | Advanced menu | F81866 Second Super IO Configuration | Serial Port 4 Configuration** to prevent conflict. See [Serial Port 4 Configuration](#) on page [92](#).


3.2.3. Connectors

SATA1 & SATA2


Description: Serial ATA connectors for storage devices

Connector Type: 7-pin Serial ATA connector

Pin	Description
1	GND
2	TX+
3	TX-
4	GND
5	RX-
6	RX+
7	GND



Board Bottom

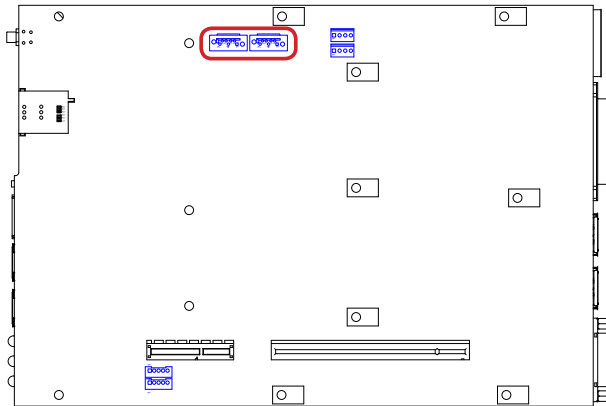

PWROUT1 and PWROUT2


Description: Power connectors for SATA storage devices

Connector Type: 2.54mm-pitch 1x4-pin DIP-type connector

Pin	Desc.
1	VCC5
2	GND
3	GND
4	+12V




Board Bottom

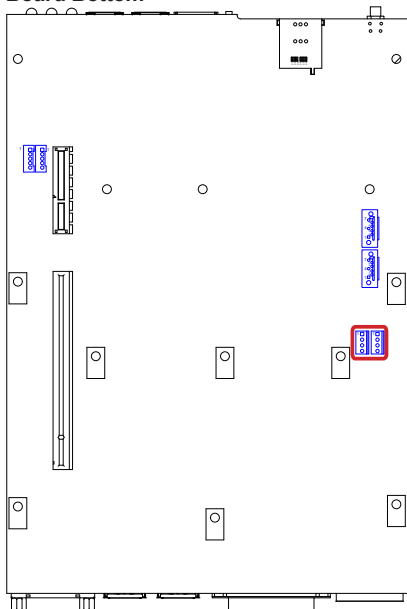


MC1

Description: PCI Express MiniCard socket
Connector Type: Onboard 0.8mm pitch 52-pin edge card connector

Pin	Desc.	Pin	Desc.	Pin	Desc.
1	Wake	20	W_Disable#	36	USB D-
2	+3.3V	21	GND	37	GND
3	COEX1	22	PERST#	38	USB D+
4	GND	23	PERn0	39	+3.3V
5	COEX2	24	+3.3V	40	GND
6	+1.5V	25	PERp0	41	+3.3V
7	CLKREQ#	26	GND	42	LED WWAN#
8	UIM_PWR	27	GND	43	GND
9	GND	28	+1.5V	44	LED WLAN#
10	UIM_DATA	29	GND	45	Reserved
11	REFCLK-	30	SMB_CLK	46	LED WPAN#
12	UIM_CLK	31	PETn0	47	Reserved
13	REFCLK+	32	SMB_DATA	48	+1.5V
14	UIM_RESET	33	PETp0	49	Reserved
15	GND	34	GND	50	GND
16	UIM_VPP	35	GND	51	Reserved
17	UIM_C8/Reserved			52	+3.3V
18	GND				
19	UIM_C4/Reserved				

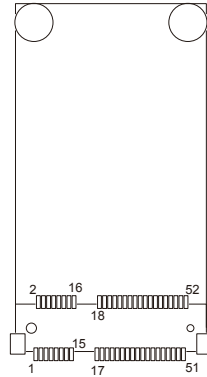

Board Top

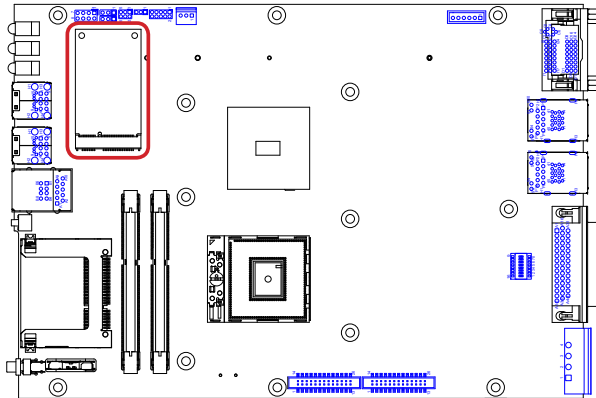


Engine of the Computer


DIO1

Description: Digital I/O connector
Connector Type: Onboard 2.00mm pitch 2x13-pin box header


Pin	Desc.	Pin	Desc.
1	DIO0	14	DIO1
2	DIO2	15	DIO3
3	DIO4	16	DIO5
4	DIO6	17	DIO7
5	DIO8	18	DIO9
6	DIO10	19	DIO11
7	DIO12	20	DIO13
8	DIO14	21	DIO15
9	VCC5	22	GND
10	VCC5	23	GND
11	N/C	24	N/C
12	N/C	25	N/C
13	N/C	26	N/C

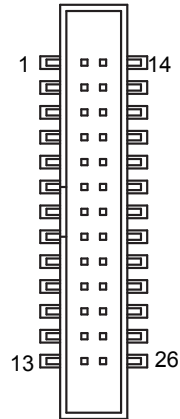

Board Top

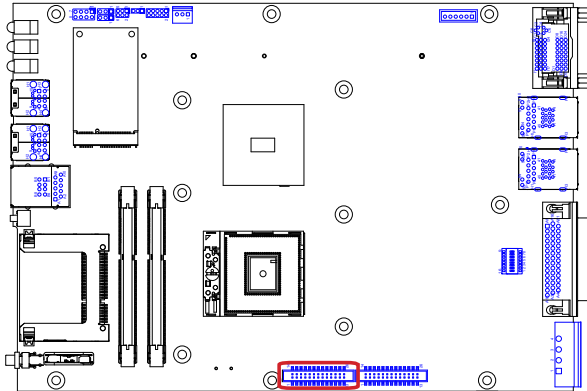


Rear Panel

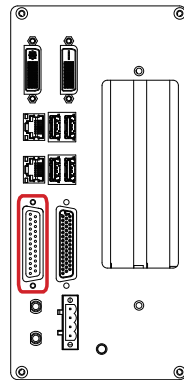


LPT1

Description: Printer/parallel port connector
Connector Type: Onboard 2.00mm pitch 2x13-pin box header


Pin	Desc.	Pin	Desc.
1	XP_STB#	14	P_AFD#
2	XP_D0	15	P_ERR#
3	XP_D1	16	P_INIT#
4	XP_D2	17	P_SLIN#
5	XP_D3	18	GND
6	XP_D4	19	GND
7	XP_D5	20	GND
8	XP_D6	21	GND
9	XP_D7	22	GND
10	P_ACK#	23	GND
11	P_BUSY	24	GND
12	P_PE	25	GND
13	P_SLCT	26	N/C

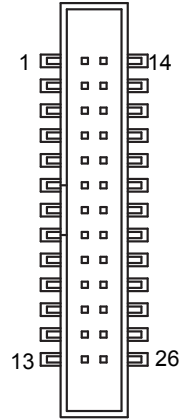

Board Top

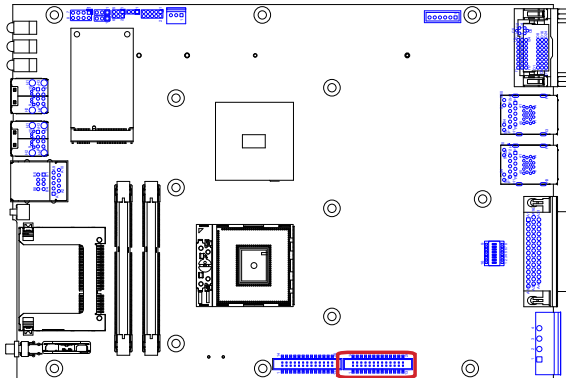


Rear Panel

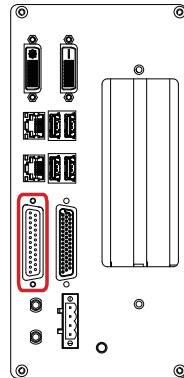

Engine of the Computer


PWRIN1

Description: DC-in power receptacle
Connector Type: 5.00mm-pitch 4-pole Euro-Type terminal block




Pin	Desc.
1	PWRINV+
2	PWRINV-
3	G-GND
4	PWR_IN_SW#

Board Top

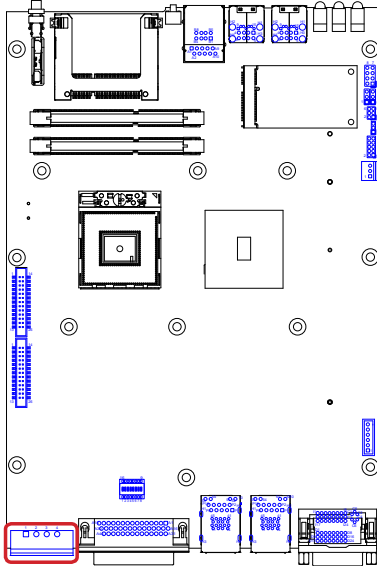


Rear Panel

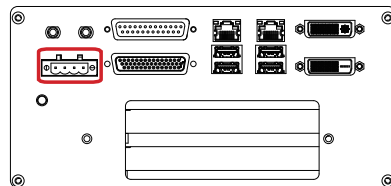

FAN1


Description: CPU fan power connector
(The fan must be a +12V fan.)

Connector Type: 2.54mm-pitch 1x3-pin wafer connector with one wall



Pin	Desc.
1	GND
2	+12V
3	Fan_Detect

Board Top

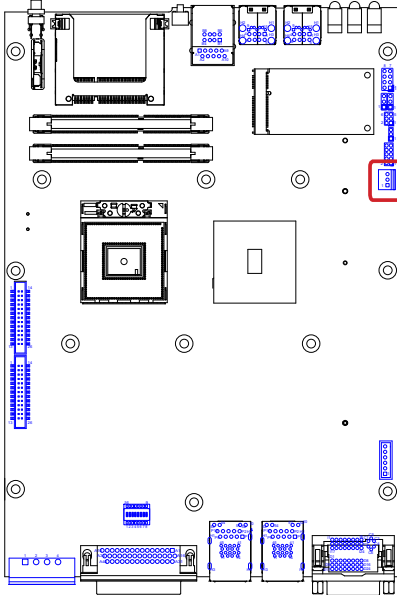

Engine of the Computer


DVI Connectors

The computer features two DVI (digital visual interface) ports, supporting both DVI-I (digital and analog) and DVI-D (analog only).


- **DVI-I**

Description: DVI-I port (digital and analog)

Connector Type: 29-pin DIP-type female connector




Pin	Desc.	Pin	Desc.	Pin	Desc.
1	T.M.D.S DATA 2-	11	T.M.D.S DATA 1/3 SHIELD	21	T.M.D.S DATA 5+
2	T.M.D.S DATA 2+	12	T.M.D.S DATA 3-	22	T.M.D.S CLOCK SHIELD
3	T.M.D.S DATA 2/4 SHIELD	13	T.M.D.S DATA 3+	23	T.M.D.S CLOCK+
4	T.M.D.S DATA 4-	14	+5V Power	24	T.M.D.S CLOCK-
5	T.M.D.S DATA 4+	15	GND	C1	ANALOG RED
6	DDC CLOCK	16	HOT PLUG DETECT	C2	ANALOG GREEN
7	DDC DATA	17	T.M.D.S DATA 0-	C3	ANALOG BLUE
8	ANALOG VERT. SYNC	18	T.M.D.S DATA 0+	C4	ANALOG HORZ SYNC
9	T.M.D.S DATA 1-	19	T.M.D.S DATA 0/5 SHIELD	C5	ANALOG GROUND
10	T.M.D.S DATA 1+	20	T.M.D.S DATA 5-		

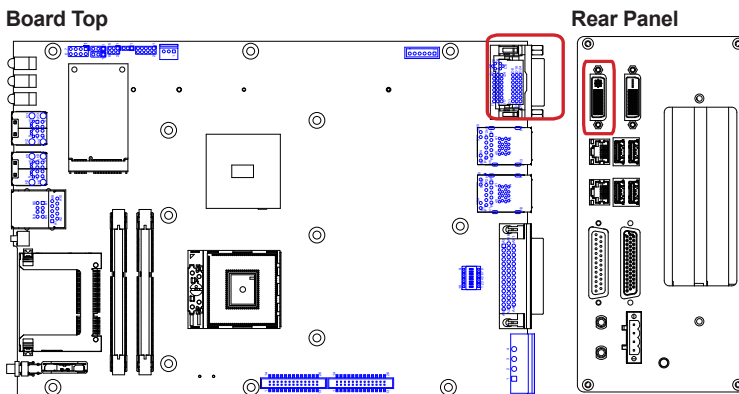

• **DVI-D**


Description: DVI-D port (analog only)

Connector Type: 24-pin DIP-type female connector



Pin	Desc.	Pin	Desc.	Pin	Desc.
1	T.M.D.S DATA 2-	11	T.M.D.S DATA 1/3 SHIELD	21	T.M.D.S DATA 5+
2	T.M.D.S DATA 2+	12	T.M.D.S DATA 3-	22	T.M.D.S CLOCK SHIELD
3	T.M.D.S DATA 2/4 SHIELD	13	T.M.D.S DATA 3+	23	T.M.D.S CLOCK+
4	T.M.D.S DATA 4-	14	+5V Power	24	T.M.D.S CLOCK-
5	T.M.D.S DATA 4+	15	GND	C1	NC
6	DDC CLOCK	16	HOT PLUG DETECT	C2	NC
7	DDC DATA	17	T.M.D.S DATA 0-	C3	NC
8	ANALOG VERT. SYNC	18	T.M.D.S DATA 0+	C4	NC
9	T.M.D.S DATA 1-	19	T.M.D.S DATA 0/5 SHIELD	C5	NC
10	T.M.D.S DATA 1+	20	T.M.D.S DATA 5-		


Board Top

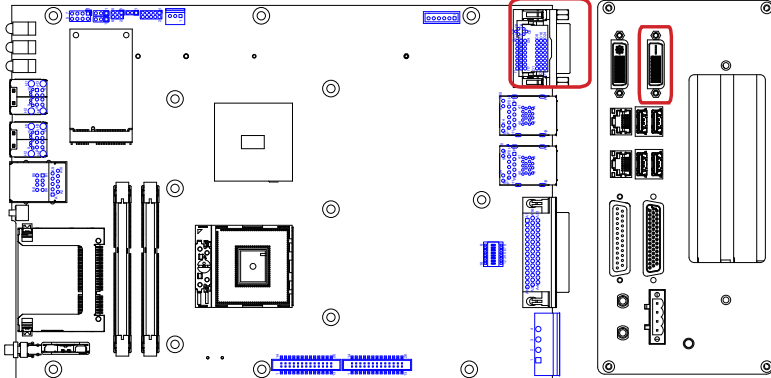

Rear Panel


EKBM1

Description: Audio connector
Connector Type: 2.54mm-pitch 4-wall 1x6-pin wafer connector




Pin	Desc.
1	MICL
2	MICR
3	MIC GND
4	Speaker(Lout)-L
5	Speaker(Lout)-R
6	Speaker GND

Board Top

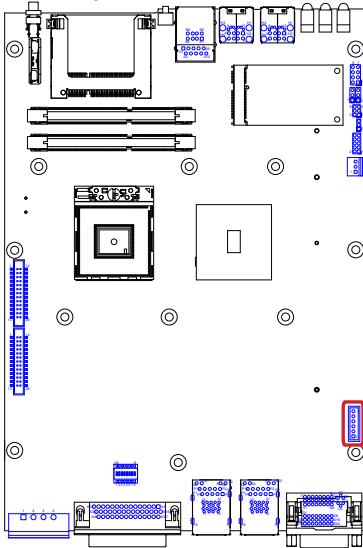

Rear Panel

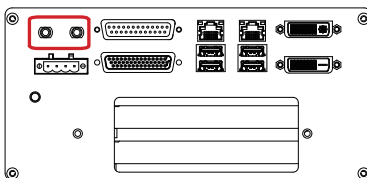


LAN1


Description: One Ethernet port over double-stacked USB 2.0 ports

Connector Type: One 8P8C RJ45 connector w/ two type-A USB connectors


LAN (RJ-45)				USB (Type-A)	
Pin	Desc.	Pin	Desc.	Pin	Desc.
1	MDI0+	5	MDI2+	1	+5V
2	MDI0-	6	MDI2-	2	USB-
3	MDI1+	7	MDI3+	3	USB+
4	MDI1-	8	MDI3-	4	GND

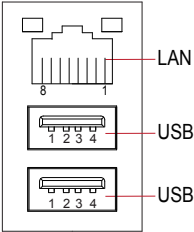

Board Top

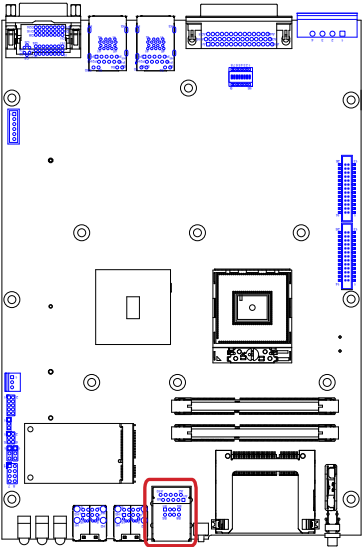


Front Panel

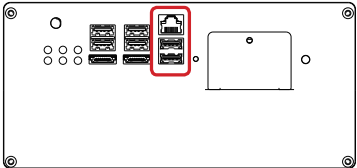

LAN2 and LAN3

Description: One Ethernet port over double-stacked USB 3.0 ports


Connector Type: One 8P8C RJ45 connector w/ two SuperSpeed type-A USB 3.0 connectors

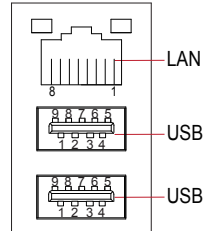


LAN (RJ-45)			
Pin	Desc.	Pin	Desc.
1	MDI0+	5	MDI2+
2	MDI0-	6	MDI2-
3	MDI1+	7	MDI3+
4	MDI1-	8	MDI3-

USB (Type-A)	
Pin	Desc.
1	VBUS
2	Data-
3	Data+
4	GND
5	StdA_SSRX-
6	StdA_SSRX+
7	GND_DRAIN
8	StdA_SSTX-
9	StdA_SSTX+

Board Top

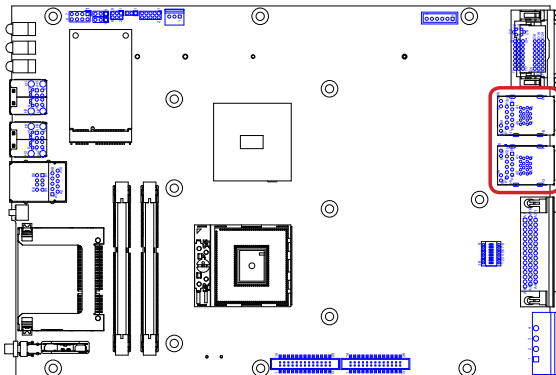


Rear Panel

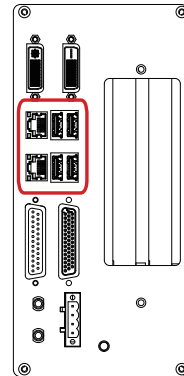


USB2

Description: Double-stacked USB 2.0 ports over one eSATA port

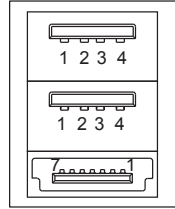


Pin	Desc.	Pin	Desc.
1	USB01_VCC	5	USB01_VCC
2	USBP_10N_CON	6	USBP_11N_CON
3	USBP_10P_CON	7	USBP_11P_CON
4	USB_GND	8	USB_GND
H1	USB_GND	H3	USB_GND
H2	USB_GND	H4	USB_GND
9	USB_GND	10	SATA_TXP4
11	SATA_TXN4	12	USB_GND
13	SATA_RXN4	14	SATA_RXP4
15	USB_GND		

Board Top

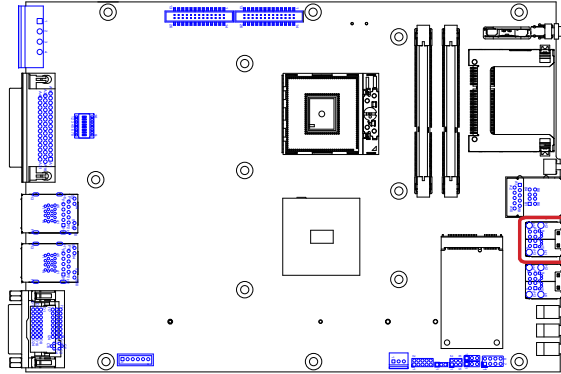

Front Panel

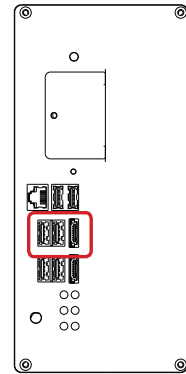


Engine of the Computer


USB3

Description: Double-stacked USB 2.0 ports over one eSATA port


Pin	Desc.	Pin	Desc.
1	USB23_VCC	5	USB23_VCC
2	USBP_12N_CON	6	USBP_13N_CON
3	USBP_12P_CON	7	USBP_13P_CON
4	USB_GND	8	USB_GND
H1	USB_GND	H3	USB_GND
H2	USB_GND	H4	USB_GND
9	USB_GND	10	SATA_TXP5
11	SATA_TXN5	12	USB_GND
13	SATA_RXN5	14	SATA_RXP5
15	USB_GND		

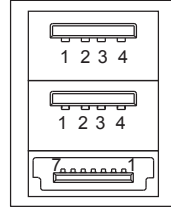

Board Top

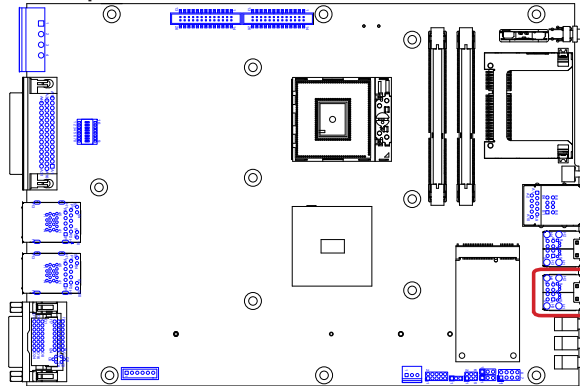


Front Panel

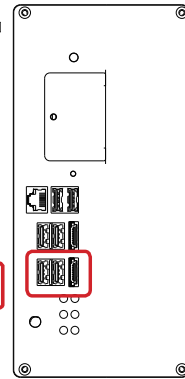

USB1 and USB4


Description: Connectors for the internal USB ports (for FPC-7701/7702 only, Configure-to-Order)

Connector Type: Type A female USB 2.0 ports compatible

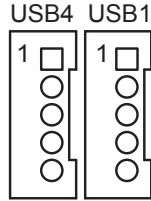

USB1		USB4	
Pin	Desc.	Pin	Desc.
1	5V	1	5V
2	USBP_4N_CON	2	USBP_5N_CON
3	USBP_4P_CON	3	USBP_5P_CON
4	GND	4	GND
5	GND	5	GND


Board Bottom

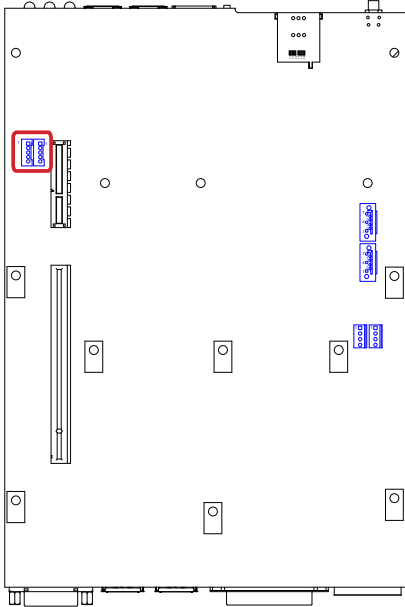

Engine of the Computer

CN1:

Description: Serial ports COM1 to COM4
(COM1/2 are RS232;
COM3/4 are RS232/422/485
selectable)




Connector type: DB44 female connector


	Pin	Desc.	Pin	Desc.		Pin	Desc.	Pin	Desc.
COM1 (RS-232)	A1	DCD	A2	RXD	COM2 (RS-232)	A11	DCD	A12	RXD
	A3	TXD	A4	DTR		A13	TXD	A14	DTR
	A5	GND2	A6	DSR		A15	GND2	A16	DSR
	A7	RTS	A8	CST		A17	RTS	A18	CTS
	A9	RI	A10	GND1		A19	RI	A20	GND1

COM3 (RS-232/422/485)				COM4 (RS-232/422/485)			
Pin	RS-232	RS-422/485 Full-Duplex	RS-485 Half-Duplex	Pin	RS-232	RS-422/485 Full-Duplex	RS-485 Half-Duplex
A21	DCD	TxD-	D-	A31	DCD	TxD-	D-
A22	RXD	TxD+	D+	A32	RXD	TxD+	D+
A23	TXD	RxD+		A33	TXD	RxD+	
A24	DTR	RxD-		A34	DTR	RxD-	
A25	GND2	GND2	GND2	A35	GND2	GND2	GND2
A26	DSR			A36	DSR		
A27	RTS			A37	RTS		
A28	CTS			A38	CTS		
A29	RI			A39	RI		
A30	GND1	GND1	GND1	A40	GND1	GND1	GND1
N/C	A41	N/C	A42	N/C			
	A43	N/C	A44	N/C			

Board Top

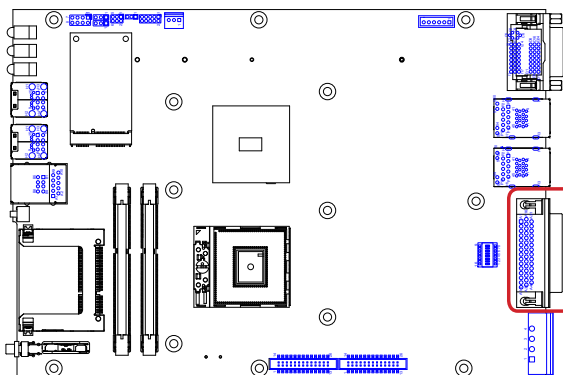


Rear Panel

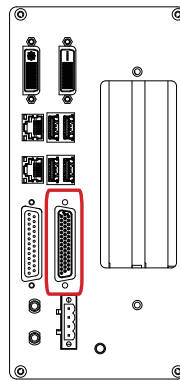

CBL-7100-COM (COM Converter Cable) (Optional)

1-to-5 COM converter cable: 4 x DB9 male and 1 x DB9 female connectors

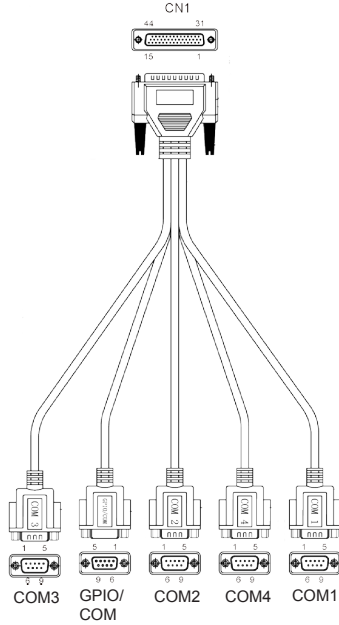

Labelled COM1 on DB9 cable controller	
DB44 Pin	COM1/DB9 Pin
A1	1
A2	2
A3	3
A4	4
A5	5
A6	6
A7	7
A8	8
A9	9
A10	Shield

Labelled COM2 on DB9 cable controller	
DB44 Pin	COM2/DB9 Pin
A11	1
A12	2
A13	3
A14	4
A15	5
A16	6
A17	7
A18	8
A19	9
A20	Shield

Labelled COM3 on DB9 cable controller	
DB44 Pin	COM3/DB9 Pin
A21	1
A22	2
A23	3
A24	4
A25	5
A26	6
A27	7
A28	8
A29	9
A30	Shield

Labelled COM4 on DB9 cable controller	
DB44 Pin	COM4/DB9 Pin
A31	1
A32	2
A33	3
A34	4
A35	5
A36	6
A37	7
A38	8
A39	9
A40	Shield

Note: GPIO/COM on the DB9 cable controller isn't used.

Chapter 4

Installation and Maintenance

4.1. Install Hardware

The FPC-7700 Series is constructed based on modular design to make it easy for users to add hardware or to maintain the computer. The following sections will guide you to the simple hardware installations for the computer.


4.1.1. Open the Computer

For the computer, removing the top and bottom covers is essential to open the computer and access the inside. Follow through the steps below to remove the top cover and bottom cover from the computer.

4.1.1.1. Remove Top Cover


All jumpers, MiniCard socket, SDRAM SO-DIMM slots, DIO port and PIO port (printer port) are built on the top side of the main board. To access these components, the computer's top cover has to go. Follow through the steps below to remove the top cover.

1. Place the computer on a flat surface. Loosen and remove the 6 screws as marked in the illustration below.

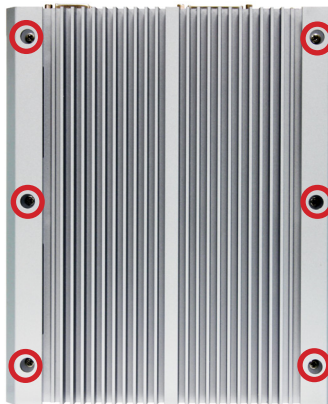


- From the front panel, loosen and remove the 2 screws as marked in the illustrations below. (And make sure the CF Card door is closed.)

FPC-7700 Front

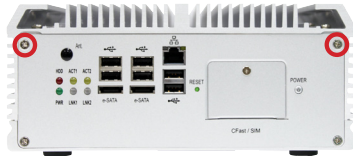


FPC-7701/7702/7703 Front

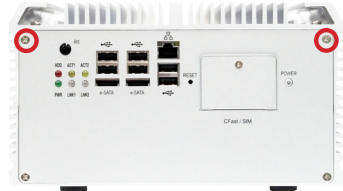


- From the rear panel, loosen and remove the 2 screws as marked in the illustrations below.

FPC-7700 Rear

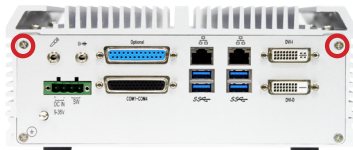

FPC-7701/7702/7703 Rear

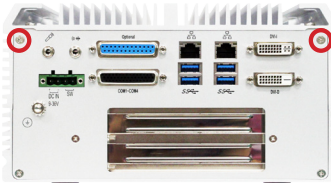

- After the said screws are removed, proceed to dismount the top cover. Carefully pry at the joint of the top cover and bottom cover, which locates at about one third of the computer's height for FPC-7701/7702/7703 and one fifth of the computer's height for FPC-7700. Then completely part the top cover from the computer.

FPC-7700



FPC-7701/7702/7703



Installation & Maintenance

The inside of the computer comes to view.



- ▶ To adjust jumpers or connect/disconnect cables to/from the main board, see [3.2. Jumpers, Connectors and DIP Switches](#) on page [22](#).
- ▶ To install memory modules, see [4.1.2. Install/uninstall Memory Modules](#) on page [56](#).
- ▶ To install MiniCard-based wireless modules, see [4.1.8. Install Wireless Modules](#) on page [72](#).

4.1.1.2. Remove the Bottom Cover

The Serial ATA connectors, the power connectors for SATA storage devices, and the internal USB ports (configure-to-order for FPC-7701/7702/7703 only), PCI and PCIe connectors are all built on the bottom side of the main board. To access these connectors, the computer's bottom cover has to go. Follow through the steps below to remove the bottom cover from the computer.

1. Place the computer upside down on a flat surface. Loosen and remove the 2 screws as marked in the illustration below.



2. From the front panel, loosen and remove the 2 screws as marked in the illustrations below.

FPC-7700 Front




FPC-7701/7702/7703 Front



Installation & Maintenance

- From the rear panel, loosen and remove the 2 screws as marked in the illustrations below.

FPC-7700 Rear

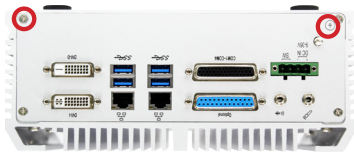

FPC-7701/7702/7703 Rear



- After the said screws are removed, proceed to dismount the bottom cover. Carefully pry at the joint of the bottom cover and top cover, which locates at about two third of the computer's height for FPC-7701/7702/7703 and about four fifth of the computer for FPC-7700. Then completely part the bottom cover from the computer.

FPC-7700




FPC-7701/7702/7703




The inside of the computer comes to view.


FPC-7701

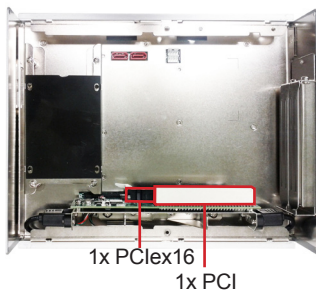

FPC-7702

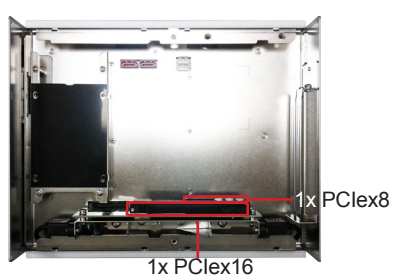


FPC-7703

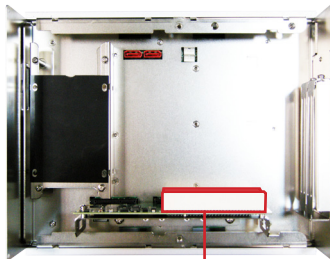

2 x PCI


FPC-7700

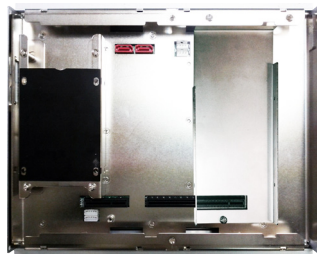

- ▶ To install internal USB drives, see [4.1.3. Install Internal USB Drives](#) on page [58](#).
- ▶ To install SATA storage devices, see [4.1.4. Install SATA Storage Devices](#) on page [59](#).
- ▶ To install PCI/PCIe cards, see [4.1.5. Install PCI and PCI Express Cards](#) on page [65](#).

4.1.2. Install/uninstall Memory Modules

The main board has two dual inline memory module (DIMM) sockets. Increase memory capacity to make programs run faster on the system. The memory module for the FPC-7700 Series' SO-DIMM sockets should be a 204-pin DDR3 with a “key notch” off the centre among the pins, which enables the memory module for particular applications. There are another two notches at each left and right side of the memory module to help fix the module in the socket.

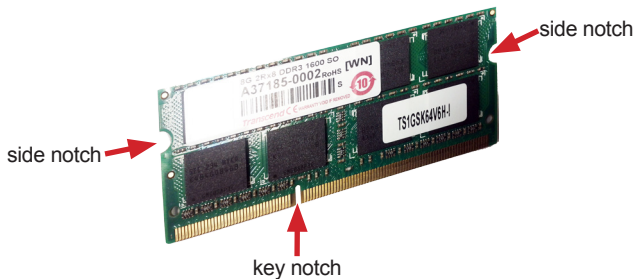


To install a DDR3 memory module:

1. Remove the top cover from the computer as described in [4.1.1.1. Remove Top Cover](#) on page [50](#).
2. Find the SO-DIMM sockets on the board as marked in the illustration below.




The SO-DIMM sockets are vertical type, and each socket has two latches for fixing the memory modules. The memory module can only be installed by one direction due to the notch.

3. Pull back both latches from the socket.

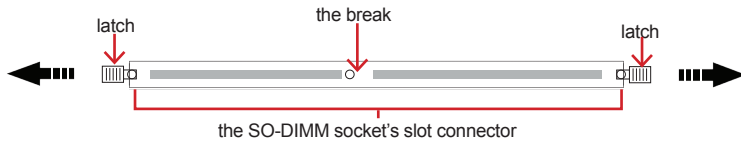

vertical-type SO-DIMM socket (overview)

4. Confront the memory module's edge connector side at the SO-DIMM socket. Position the memory module at the SO-DIMM socket, with the memory module's key notch aligned at the break of the SO-DIMM's slot connector.
5. Vertically plug the memory module to the DIMM socket. "Fully" plug the memory module until both latches auto-lock the memory module in place.

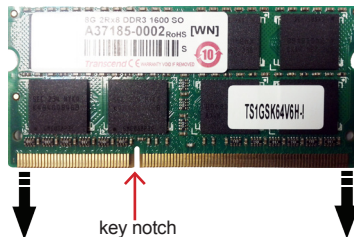

6. Restore the top cover to the computer.

To uninstall a DDR3 memory module:

1. Pull back both latches from the SO-DIMM socket.
The DDR3 memory module will be auto-released from the socket.
2. Remove the memory module.
3. Restore the top cover to the computer.


Installation & Maintenance

4.1.3. Install Internal USB Drives



Since some critical application programs rely on a USB key to run, an USB drive is necessary to store related encrypted keys and digital certificates. The FPC-7701, FPC-7702 and FPC-7703 allow building two USB ports inside the chassis to support two USB drives to work therein for reinforced protection against theft or tamper. (Configure-to-Order only)

To install the internal USB drive(s):

1. Remove the bottom cover from the computer as described in [4.1.1.2. Remove the Bottom Cover](#) on page [53](#).
2. Find the two USB ports inside the computer as marked in the picture below.

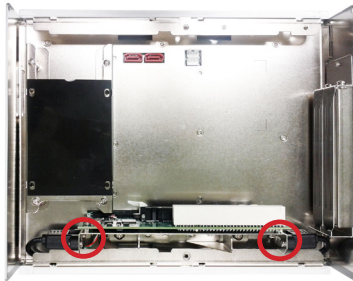

3. Install an USB drive to one of the internal USB ports.

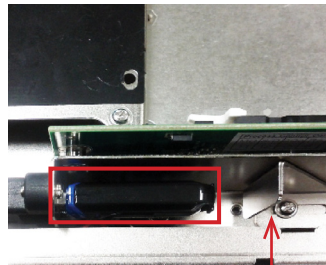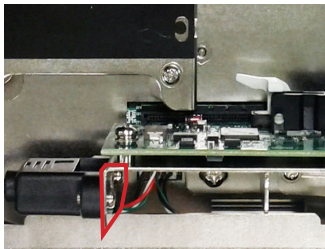

Adjust this iron to make space for the USB drive installed.

4. Restore the bottom cover to the computer.
-


4.1.4. Install SATA Storage Devices

The computer supports two 2.5" SATA storage devices to work inside the computer for RAID.


The following will guide you to install two SATA HDD or SSD.

4.1.4.1. Install SATA Storage Devices for FPC-7700

1. Remove the bottom cover from the computer as described in [4.1.1.2. Remove the Bottom Cover](#) on page [53](#).
2. Find the HDD/SSD brackets inside the computer. Loosen and remove the screws as marked in the illustration below. Then dismount the brackets from the computer.

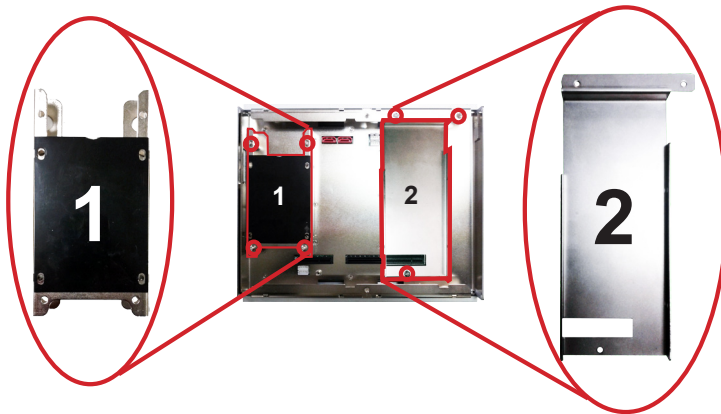


3. For the 1st storage bracket: Slide an HDD/SSD storage device into the bracket.

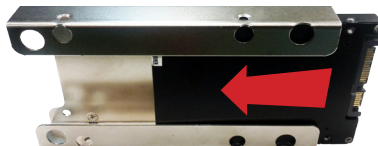


Installation & Maintenance

4. Fix the storage device in place by using screws at the four screw holes on both sides of the bracket.

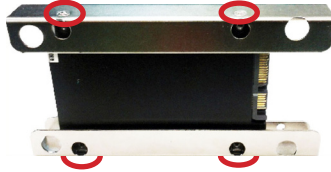


5. Install the bracket and the storage device back into the computer by refastening the four screws.

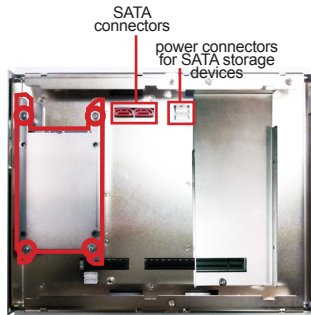

6. For the 2nd storage bracket: Assemble another HDD/SSD storage device to the storage bracket.




7. Install the bracket and the storage device back into the computer by refastening the three screws.

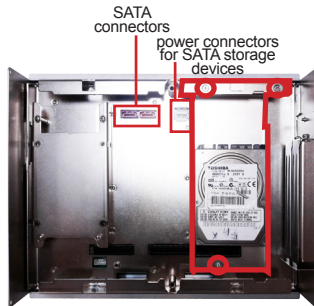

8. Restore the bottom cover to the computer.

4.1.4.2. Install SATA Storage Devices for FPC-7701, 7702 & 7703


1. Remove the bottom cover from the computer as described in [4.1.1.2. Remove the Bottom Cover](#) on page [53](#).
2. Find the HDD/SSD bracket inside the computer. Loosen and remove the four screws as marked in the picture below. Then dismount the bracket from the computer.

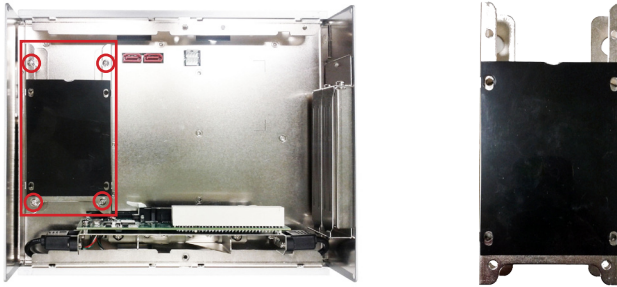


3. Place a SATA storage device on the bracket.




4. Flip them over. Use four screws to fix them together.

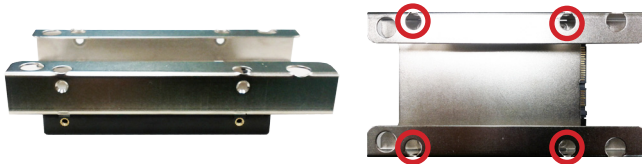


5. Slide another HDD/SSD storage device into the bracket.

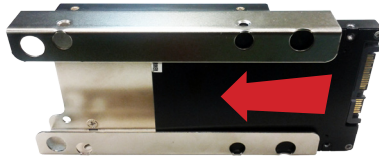

6. Fix another storage device in place by using screws at the four screw holes on both sides of the bracket.

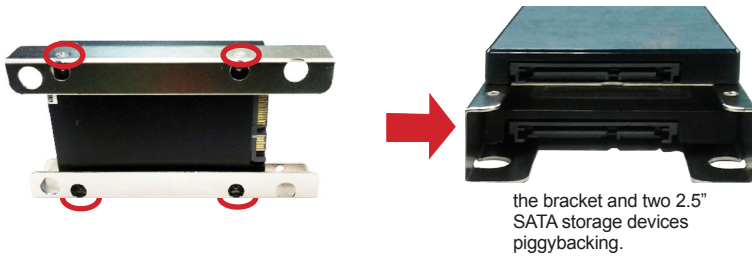


7. Reinstall the bracket (with the storage devices) to the computer.

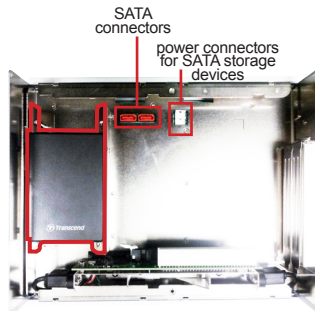

Installation & Maintenance

8. Connect the SATA signal cable(s) and power cable(s).

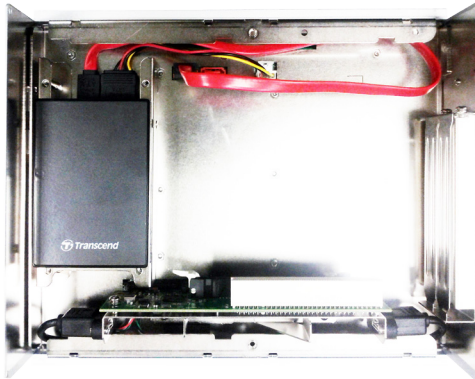

9. Restore the bottom cover to the computer.



4.1.5. Install PCI and PCI Express Cards

The FPC-7701 supports one PCIe x16 slot and one PCI slot while the FPC-7702 features each PCIe x16 slot and PCIe x8 slot. And the FPC-7703 comes with two PCI slots. Follow the guide below to install an PCI Express or PCI card to the computer.



To install a PCI or PCI Express card:

1. Remove the bottom cover from the computer as described in [4.1.1.2. Remove the Bottom Cover](#) on page [53](#).
2. Find the PCI or PCI Express slots inside the computer.



FPC-7701

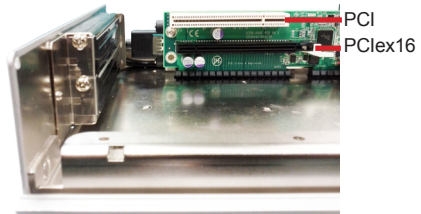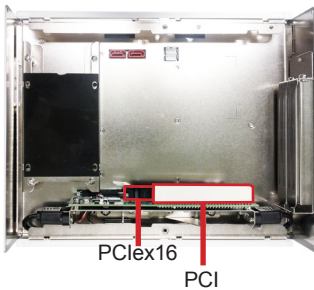

FPC-7702

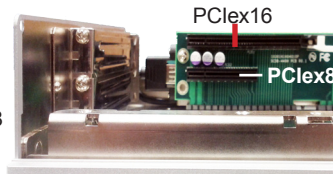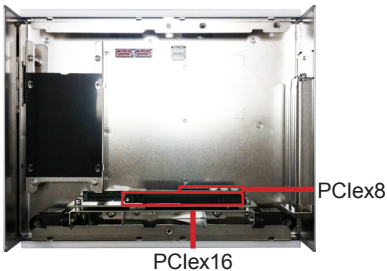


FPC-7703

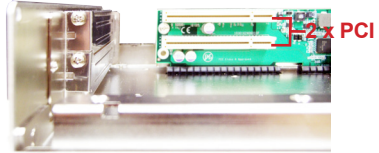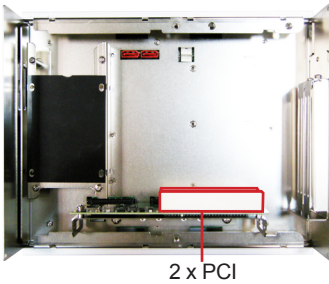


3. Loosen and remove either of the screws as marked in the illustration below depending on which card to install, a PCI or a PCI Express one.


FPC-7701

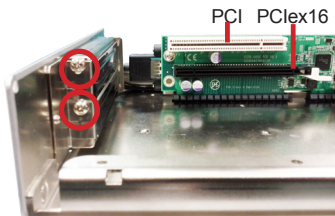




FPC-7702

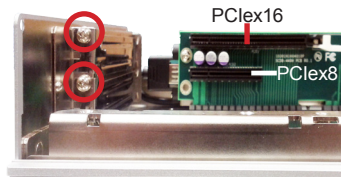




FPC-7703

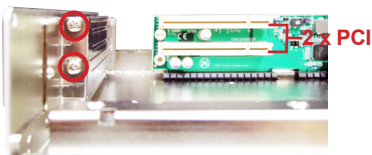

4. After the screw is removed, dismount the card door from the I/O bracket.

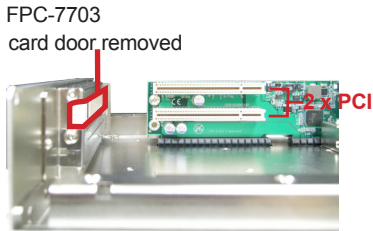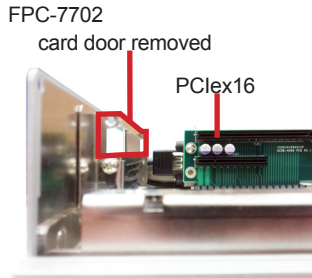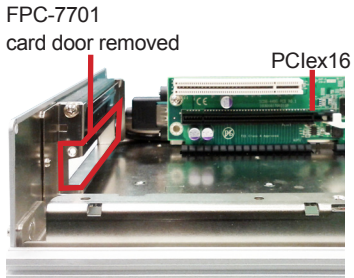

5. Plug the PCI or PCI Express card to the due slot. Re-fasten the screw to fix the card in place.

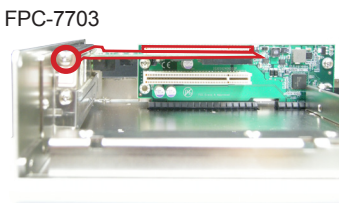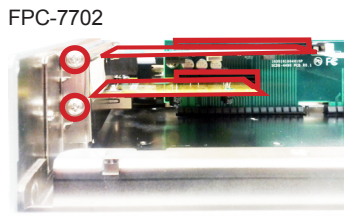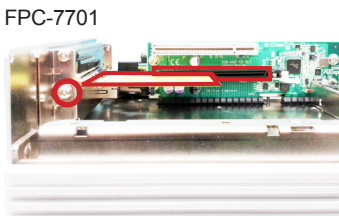

6. Restore the bottom cover to the computer.

Installation & Maintenance

4.1.6. Install/uninstall CFast Card


The computer supports a CFast card for storage and comes with an outside-accessible CFast slot. Follow through the guide below to install a CFast card to the computer.

Note: Be sure to turn off the computer before installing or uninstalling the CF card if the OS is installed on the card.


To install the CFast card:

1. From the front panel of the computer, find the door to the CFast slot. Loosen and remove the screw that locks the door.

FPC-7700 Front

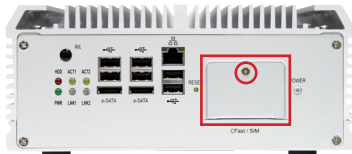

FPC-7701/7702/7703 Front

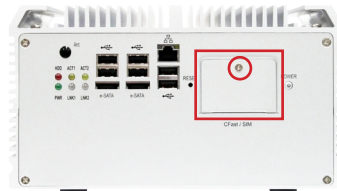


2. Once the screw is removed, open the door. The CFast slot then comes to view.



The door is a hinged door. On the inner side of the door, there are printed graphics to guide users of the direction to insert the CFast card.

3. Position the CFast card at the slot as directed by the graphic printed on the inner side of the door. Push-insert the CFast card.

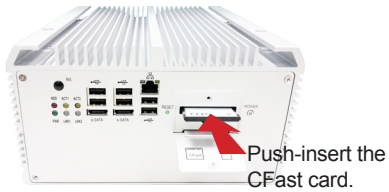

To uninstall the CFast card:

1. Loosen and remove the card door screw and open the card door.
2. Push-eject the CFast card.
3. Remove the CFast card.
4. Refasten the screw to close the card door.

Note to refasten the screw to close the card door each time the CFast card is installed or uninstalled.


4.1.7. Install/uninstall SIM Card

The computer supports a SIM card for mobile networking and comes with an outside-accessible SIM card slot. Follow through the guide below to install a SIM card to the computer.


To install the SIM card:

1. From the front panel of the computer, find the door to the SIM card slot. Loosen and remove the screw that locks the door.

FPC-7700 Front

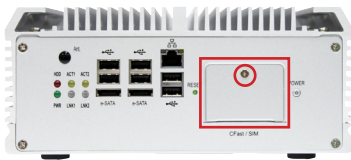

FPC-7701/7702/7703 Front

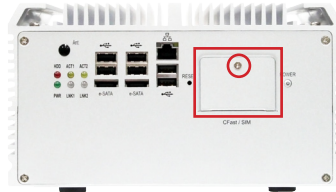

2. Once the screw is removed, open the door. The SIM card slot then comes to view.



The door is a hinged door. On the inner side of the door, there are printed graphics to guide users of the direction to insert the card.

3. Position the SIM card at the slot as directed by the graphic printed on the inner side of the door. Push-insert the SIM card.



To uninstall the SIM card:

1. Loosen and remove the card door screw and open the card door.
2. Push-eject the SIM card.
3. Remove the SIM card.
4. Refasten the screw to close the card door.

Note to refasten the screw to close the card door each time the SIM card is installed or uninstalled.

4.1.8. Install Wireless Modules

The computer comes with two **Mini-card** sockets to load the computer with the wireless modules of **PCI Express Mini-card** form factor. The configure-to-order wireless modules available with the computer are the 3G module **HSPA-SI1400** and the Wi-Fi module **WIFI-IN1300**:



HSPA-SI1400
HSUPA 3.75G module kit & internal wiring



WIFI-IN1300
Intel® Centrino® Advanced-N 6205 Wi-Fi module w/ 20cm internal wiring


(See also [1.5.2. Configure-to-Order Service](#) on page [7](#).)

- If you have ordered the 3G module **HSPA-SI1400**, see Appendix [C](#) on page [111](#) to know how to install the hardware and software for the module.
- If you have ordered the Wi-Fi module **WIFI-IN1300**, see Appendix [D](#) on page [122](#) to know how to install the hardware and software for the module.

4.2. Mount the Computer

Integrate the computer to where it works by mounting it to a wall in the surroundings. Such integration relies on a wall-mount kit, which is available on option. Follow through the guide below to assemble the kit to the computer:

1. Place the computer upside down on a flat surface. Find the eight screw holes at its bottom as marked in the red circles in the illustration below:

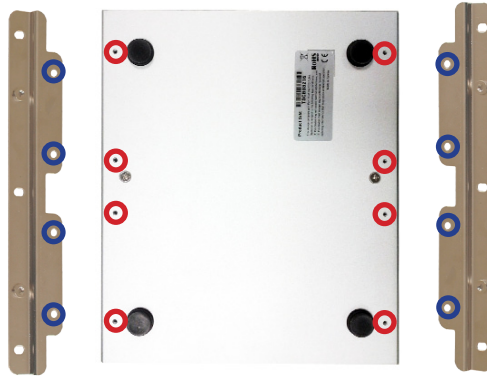

2. Have the two wall-mount brackets. Use the screws included in the wall-mount kit to assemble each of the brackets to the computer's bottom by the screw holes on them (as marked in the blue circles in the illustration above).
3. Use the other screw holes and cutouts on both wall-mount brackets to mount the computer to a wall. (See the green circles in the illustration below).



4.3. Ground the Computer


Follow the instructions below to ground the computer to land. Be sure to follow every grounding requirement in your place.




Warning Whenever the unit is installed, the ground connection must always be made first of all and disconnected lastly.

1. See the illustration below. Remove the ground screw from the rear panel.
2. Attach a ground wire to the rear panel with the screw.

FPC-7700 Rear

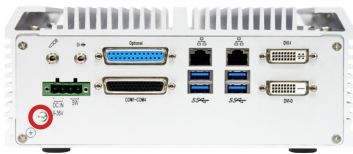

FPC-7701/7702/7703 Rear

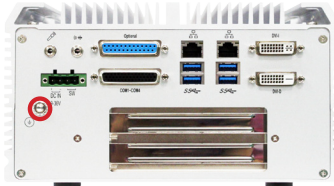

4.4. Wire DC-in Power Source



Warning Only trained and qualified personnel are allowed to install or replace this equipment.


Follow the instructions below for connecting the computer to a DC-input power source.

1. Before wiring, make sure the power source is disconnected.
2. Find the terminal block in the accessory box.
3. Use the wire-stripping tool to strip a short insulation segment from the output wires of the DC power source.
4. Identify the positive and negative feed positions for the terminal block connection. See the symbols printed on the rear panel indicating the polarities and DC-input power range in voltage.
5. Insert the exposed wires into the terminal block plugs. Only wires with insulation should extend from the terminal block plugs. Note that the polarities between the wires and the terminal block plugs must be positive and negative to negative to positive and negative to negative.
6. Use a slotted screwdriver to tighten the captive screws. Plug the terminal block firmly, which wired, into the receptacle on the rear panel.

FPC-7700 Rear



FPC-7701/7702/7703 Rear

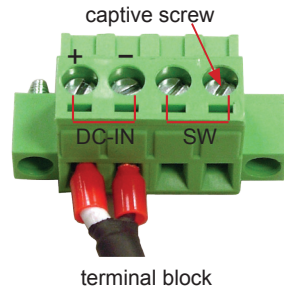

This page is intentionally left blank.


Chapter 5

BIOS

BIOS

The BIOS Setup utility for the FPC-7700 Series is featured by American Megatrends Inc to configure the system settings stored in the system's BIOS ROM. The BIOS is activated once the computer powers on. When the computer is off, the battery on the main board supplies power to BIOS RAM.

To enter the BIOS Setup utility, keep hitting the "Delete" key upon powering on the computer.

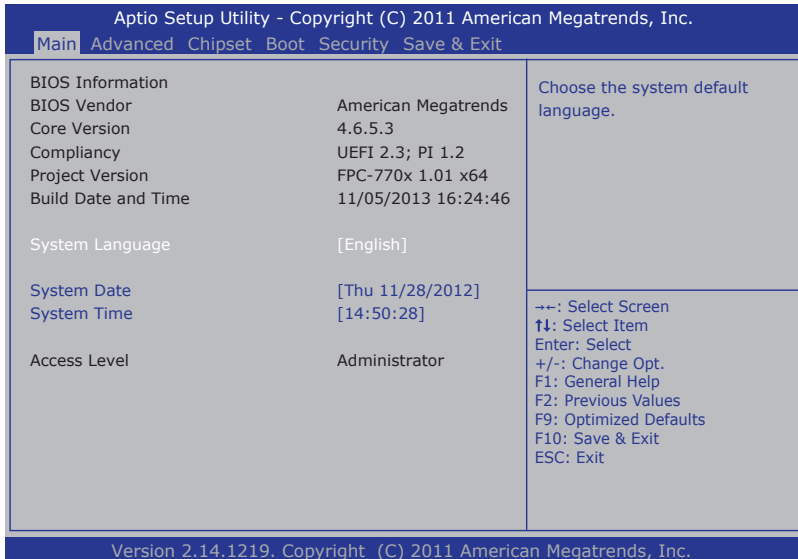

The featured settings are:

Menu	Description
Main	See 5.1. Main on page 80 .
Advanced	See 5.2. Advanced on page 81 .
Chipset	See 5.3. Chipset on page 96 .
Boot	See 5.4. Boot on page 101 .
Security	See 5.5. Security on page 105 .
Save & Exit	See 5.6. Save & Exit on page 106 .

Key Commands

The BIOS Setup utility relies on a keyboard to receive user's instructions. Hit the following keys to navigate within the utility and use the utility.

Keystroke	Function
← →	Moves left/right between the top menus.
↓ ↑	Moves up/down between highlight items.
Enter	Selects an highlighted item/field.
Esc	<ul style="list-style-type: none"> ▶ On the top menus: Use Esc to quit the utility without saving changes to CMOS. (The screen will prompt a message asking you to select OK or Cancel to exit discarding changes. ▶ On the submenus: Use Esc to quit current screen and return to the top menu.
Page Up / +	Increases current value to the next higher value or switches between available options.
Page Down / -	Decreases current value to the next lower value or switches between available options.
F1	Opens the Help of the BIOS Setup utility.
F10	Exits the utility saving the changes that have been made. (The screen then prompts a message asking you to select OK or Cancel to exit saving changes.)

Note: Pay attention to the "WARNING" that shows at the left pane onscreen when making any change to the BIOS settings.

This BIOS Setup utility is updated from time to time to improve system performance and hence the screenshots hereinafter may not fully comply with what you actually have onscreen.

BIOS

5.1. Main

The **Main** menu features the settings of **System Date** and **System Time** and displays some BIOS info.

The BIOS info displayed are:


Info	Description
BIOS Vendor	Delivers the provider of the BIOS Setup utility.
Core Version	Delivers the version info of the core.
Compliancy	Delivers the UEFI support.
Project Version	Delivers the computer's BIOS version.
Build Date and Time	Delivers the date and time when the BIOS Setup utility was made/updated.
Access Level	Delivers the level that the BIOS is being accessed at the moment.

The featured settings are:

Setting	Description
Language	The system language is set to English and cannot be changed.
System Time	Sets system time.
System Date	Sets system date.

5.2. Advanced

Access the **Advanced** menu to manage the computer's system configuration including the Super IO chip, Fintek 81866.

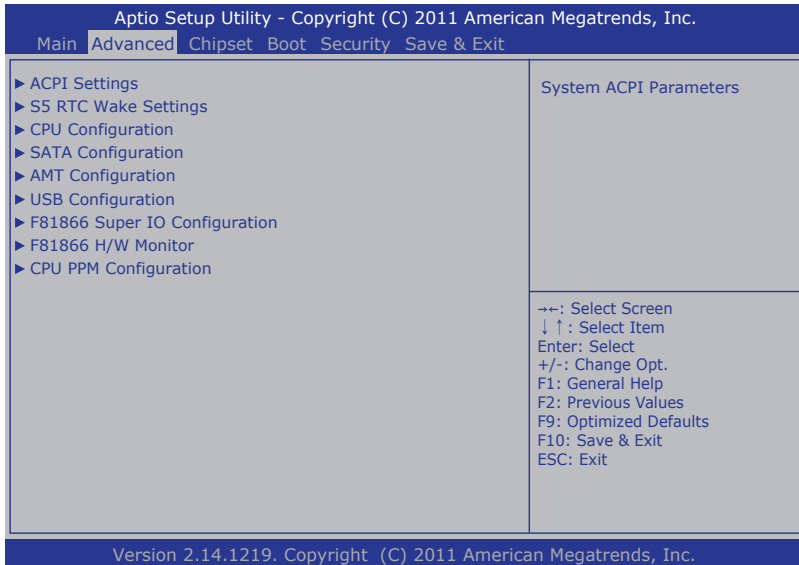

The featured settings and submenus are:

Setting	Description
ACPI Settings	See 5.2.1. ACPI Settings on page 82 .
SS RTC Wake Settings	See 5.2.2. SS RTC Wake Settings on page 83 .
CPU Configuration	See 5.2.3. CPU Configuration on page 85 .
SATA Configuration	See 5.2.4. SATA Configuration on page 86 .
AMT Configuration	See 5.2.5. AMT Configuration on page 87 .
USB Configuration	See 5.2.6. USB Configuration on page 89 .
F81866 Second Super IO Configuration	See 5.2.7. F81866 Super IO Configuration on page 90 .
F81866 H/W Monitor	See 5.2.8. F81866 H/W Monitor on page 94 .
CPU PPM Configuration	See 5.2.9. CPU PPM Configuration on page 95 .

BIOS

5.2.1. ACPI Settings

The submenu **ACPI Settings** enable users to change the system's ACPI (Advanced Configuration and Power Interface) configuration by the following settings:

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.

Main **Advanced** Chipset Boot Security Save & Exit

ACPI Settings		Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may be not effective with some OS.
Enable Hibernation	[Enabled]	
ACPI Sleep State	[S1 only(CPU Stop C...)]	
AMT Configuration	[ATX]	


←+: Select Screen
↓↑: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Setting	Description
Enable Hibernation	Enables/disables the system to/from hibernation (OS/S4 Sleep State). <ul style="list-style-type: none">▶ This option may not be effective with some OS.▶ Options available are Enabled (default) and Disabled.
ACPI Sleep State	Sets the ACPI sleep state for the system to enter when the suspend button is hit. <ul style="list-style-type: none">▶ Options available are Suspend Disabled, S1 only (CPU Stop Clock) and S3 only (Suspend to RAM).▶ S1 only (CPU Stop Clock) is the default.
Power-Supply Type	Sets the power-supply type. <ul style="list-style-type: none">▶ Options available are AT and ATX (default).▶ Note this setting should be consistent with jumper J1 to prevent possible conflict. See 3.2.1. Jumpers on page 22 for J1 jumper setting.

5.2.2. SS RTC Wake Settings

Access this submenu to configure whether and when to awake the system.

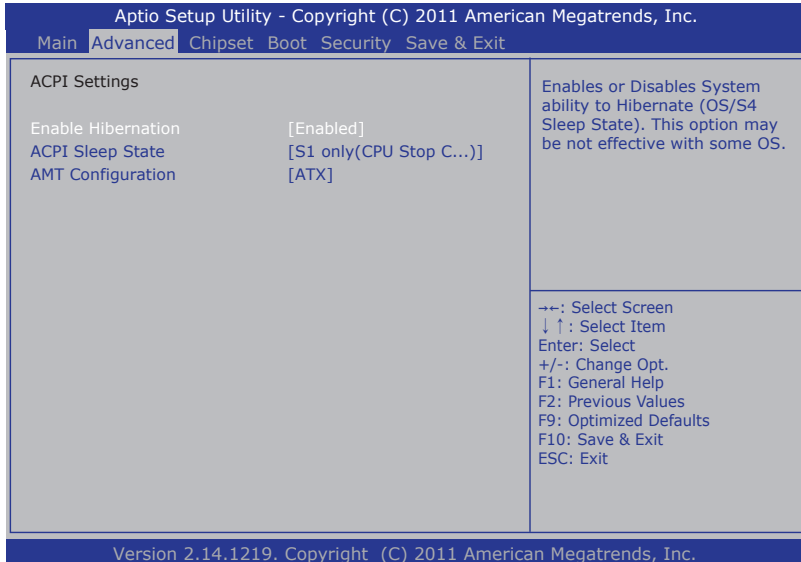

The featured settings are:

Setting	Description								
Wake System with Fixed Time	Sets if to awake the system at a defined moment. <ul style="list-style-type: none"> ▶ Options available are Enabled and Disabled (default). ▶ Enable this feature to awake the system at a defined moment in time. When enabled, the following settings become available: 								
	<table border="1"> <thead> <tr> <th>Setting</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Wake up hour</td> <td>Defines the (hour) time to awake the system. <ul style="list-style-type: none"> ▶ 0 to 23 configurable. </td> </tr> <tr> <td>Wake up minute</td> <td>Defines the (minute) time to awake the system. <ul style="list-style-type: none"> ▶ 0 to 59 configurable. </td> </tr> <tr> <td>Wake up second</td> <td>Defines the (second) time to awake the system. <ul style="list-style-type: none"> ▶ 0 to 59 configurable. </td> </tr> </tbody> </table>	Setting	Description	Wake up hour	Defines the (hour) time to awake the system. <ul style="list-style-type: none"> ▶ 0 to 23 configurable. 	Wake up minute	Defines the (minute) time to awake the system. <ul style="list-style-type: none"> ▶ 0 to 59 configurable. 	Wake up second	Defines the (second) time to awake the system. <ul style="list-style-type: none"> ▶ 0 to 59 configurable.
	Setting	Description							
	Wake up hour	Defines the (hour) time to awake the system. <ul style="list-style-type: none"> ▶ 0 to 23 configurable. 							
Wake up minute	Defines the (minute) time to awake the system. <ul style="list-style-type: none"> ▶ 0 to 59 configurable. 								
Wake up second	Defines the (second) time to awake the system. <ul style="list-style-type: none"> ▶ 0 to 59 configurable. 								

Wake System with Dynamic Time	Sets if to awake the system some time in the future.	
	<ul style="list-style-type: none">▶ Options available are Enabled and Disabled (default).▶ Enable this feature to awake the system some time from now. When enabled, the following setting becomes available:	
	Setting	Description

Wake up minute increase	Defines how long from now to awake the system. <ul style="list-style-type: none">▶ 1 to 5 minutes configurable.
--------------------------------	---

5.2.3. CPU Configuration

Select **CPU Configuration** to run a report of the CPU's details including: model name, processor speed, microcode revision, max./min. processor speeds, the amount of processor core(s), Intel® Hyper-Threading Technology support, Intel® virtualization technology (VT-x) support, Intel® Safer Mode Extensions (SMX) support and CPU caches. See the depiction below:

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.		
Main Advanced Chipset Boot Security Save & Exit		
CPU Configuration		
Intel(R) Core(TM) i5-3610ME CPU @ 270GHz		
CPU Signature	306a9	
Microcode Patch	2700 MHz	
Max CPU Speed	1200 MHz	
Min CPU Speed	2700 MHz	
Processor Cores	2	
Intel HT Technology	Supported	
Intel VT-x Technology	Supported	
Intel SMX Technology	Supported	
64-bit	Supported	
L1 Data Cache	32 kB x 2	
L1 Code Cache	32 kB x 2	
L2 Cache	256 kB x 2	
L3 Cache	3072 kB	
		+-: Select Screen ↓ ↑ : Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit
Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.		

BIOS

5.2.4. SATA Configuration

SATA Configuration manages the system's SATA configuration and also delivers its status.

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.

Advanced

SATA Controller(s) SATA Mode Selection SATA Controller Speed Serial ATA Port 1 Software Preserve Serial ATA Port 2 Software Preserve Serial ATA Port 3 Software Preserve Serial ATA Port 4 Software Preserve Serial ATA Port 5 Software Preserve	[Enabled] [AHCI] [Gen3] MRSAJ5D016GC12 (16.0G) Supported Empty Unknown Empty Unknown Empty Unknown Empty Unknown	Enable or disable SATA Device. ←→: Select Screen ↓ ↑: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit
--	--	--

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

The featured settings are:

Setting	Description
SATA Controller(s)	Enables/disables SATA device(s). ▶ Enabled is the default.
SATA Mode Selection	Configures how SATA controller(s) operate. ▶ Options available are IDE , AHCI (default) and RAID .
SATA Controller Speed	Sets the maximum speed for the SATA controller to support. ▶ Options available are: Gen1 , Gen2 and Gen3 (default). ▶ This setting is available only when SATA Mode Selection is set to AHCI or RAID .
Alternate ID	Enables/disables the SATA controller reporting its alternate device ID. ▶ Disabled is the default. ▶ This setting is only available when SATA Mode Selection is set to RAID .

5.2.5. AMT Configuration

Intel® Active Management Technology (Intel® AMT) is a hardware-based solution that uses out-of-band communication for system administrators to monitor and manage the computers and other network equipment by remote control even if the hard drive is crashed, the system is turned off or the operating system is locked.

This submenu features the settings of iAMT's BIOS extension, which are required to make use of iAMT.

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.

Advanced

Intel AMT [Enabled] Activate Remote Assistance Process [Disabled] AMT CIRA Timeout 0	Enable/Disable Intel (R) Active Management Technology BIOS Extension. Note: iAMT H/W is always enabled. This option just controls the BIOS extension execution. If enabled, this requires additional firmware in the SPI device.
++: Select Screen ↓ ↑: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit	

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Setting	Description
Intel AMT	Enables/disables Intel® Active Management Technology BIOS extensions. <ul style="list-style-type: none"> ▶ Note iAMT hardware is always enabled. ▶ This setting only controls the execution of BIOS extension execution. ▶ Enabled is the default. ▶ When enabled, additional firmware is required in the SPI device.

BIOS

Activate Remote Assistance Process	Enables/disables CIRA (Client-Initiated Remote Access) boot. <ul style="list-style-type: none">▶ Disabled is the default.
AMT CIRA Timeout	Customizes the timeout for the establishment of MPS connection. <ul style="list-style-type: none">▶ This setting is only available when Activate Remote Assistance Process is enabled.▶ Set it to 0 to use the default timeout value of 60 seconds.▶ Set it to 255 to have MEBx (Management Engine BIOS extension) wait until the connection succeeds.▶ CIRA means "Client Initiated Remote Access".

5.2.6. USB Configuration

Select this submenu to view the status of the USB devices and configure USB features.

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.

Advanced

<p>USB Configuration</p> <p>USB Devices: 1 Keyboard, 3 Hubs</p> <p>Legacy USB Support [Enabled] USB3.0 Support [Enabled]</p>	<p>Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.</p> <p>→+: Select Screen ↓↑: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit</p>
--	--


Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

The featured settings are:

Setting	Description
Legacy USB Support	<p>Enables/disables legacy USB support.</p> <ul style="list-style-type: none"> ▶ Options available are Enabled (default), Disabled and Auto. ▶ Select Auto to disable legacy support if no USB device are connected. ▶ Select Disabled to keep USB devices available only for EFI applications.
USB 3.0 Support	<p>Enables/disables USB 3.0 (xHCI) controller support.</p> <ul style="list-style-type: none"> ▶ Enabled is the default. ▶ "xHCI" means "Extensible Host Controller Interface", the specification that describes the register-level host controller interface for Universal Serial Bus 2.0 and above.

5.2.7. F81866 Super IO Configuration

This submenu configures the Super IO chip (Fintek F81866) for the computer's serial ports 1~4 and the parallel port. The featured submenus are:

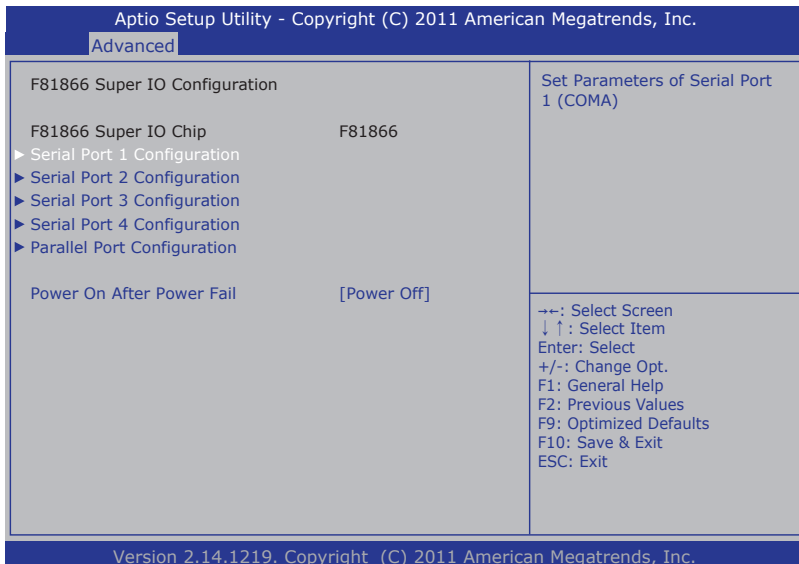

Submenu	Description	
Serial Port 1 Configuration	Configures the computer's COM1, which is fixed to RS232 and cannot be changed. The featured settings are:	
	Setting	Description
	Serial Port	Enables/disables the serial port. ▶ Enabled is the default.
Change Settings	Sets the optimal IO address and IRQ info for the serial port. ▶ Options available are: IO=3F8h; IRQ=4; (default) IO=3F8h; IRQ=3,4,5,6,7,10,11,12; IO=2F8h; IRQ=3,4,5,6,7,10,11,12; IO=3E8h; IRQ=3,4,5,6,7,10,11,12; IO=2E8h; IRQ=3,4,5,6,7,10,11,12; ▶ This setting is only available when the serial port is enabled.	

Serial Port 2 Configuration	Configures the computer's COM2, which is fixed to RS232 and cannot be changed. The featured settings are:	
	Setting	Description
	Serial Port	Enables/disables the serial port. ▶ Enabled is the default.
Serial Port 3 Configuration	Change Settings	Sets the optimal IO address and IRQ info for the serial port. ▶ Options available are: IO=2F8h; IRQ=3; (default) IO=3F8h; IRQ=3,4,5,6,7,10,11,12; IO=2F8h; IRQ=3,4,5,6,7,10,11,12; IO=3E8h; IRQ=3,4,5,6,7,10,11,12; IO=2E8h; IRQ=3,4,5,6,7,10,11,12; ▶ This setting is only available when the serial port is enabled.
	Serial Port	Enables/disables the serial port. ▶ Enabled is the default.
	Change Settings	Sets the optimal IO address and IRQ info for the serial port. ▶ Options available are: IO=3E8h; IRQ=10; (default) IO=3E8h; IRQ=3,4,5,6,7,10,11,12; IO=2E8h; IRQ=3,4,5,6,7,10,11,12; IO=2F0h; IRQ=3,4,5,6,7,10,11,12; IO=2E0h; IRQ=3,4,5,6,7,10,11,12; ▶ This setting is only available when the serial port is enabled.
	RS485 Mode	Enables/disables RS485 mode. ▶ Disabled is the default. ▶ Note this setting needs to be consistent with the DIP switch SW9 to prevent possible conflict. See also 3.2.2. DIP Switch SW9 on page 26

Serial Port 4 Configuration	Configures the computer's COM4, which is RS232/RS422/RS485 selectable. The featured settings are:	
	Setting	Description
	Serial Port	Enables/disables the serial port. ▶ Enabled is the default.
	Change Settings	Sets the optimal IO address and IRQ info for the serial port. ▶ Options available are: IO=2E8h; IRQ=11; (default) IO=3E8h; IRQ=3,4,5,6,7,10,11,12; IO=2E8h; IRQ=3,4,5,6,7,10,11,12; IO=2F0h; IRQ=3,4,5,6,7,10,11,12; IO=2E0h; IRQ=3,4,5,6,7,10,11,12; ▶ This setting is only available when the serial port is enabled.
RS485 Mode	Enables/disables RS485 mode. ▶ Disabled is the default. ▶ Note this setting needs to be consistent with the DIP switch SW9 to prevent possible conflict. See also 3.2.2. DIP Switch SW9 on page 26	

Parallel Port Configuration	Configures the computer's parallel port (printer port). The featured settings are:	
	Setting	Description
	Parallel Port	Enables/disables the parallel port. ▶ Enabled is the default.
	Change Settings	Sets the optimal IO address and IRQ info for the parallel port ▶ Options available are: IO=378h; IRQ=7; (default) IO=378h; IRQ=5,7; IO=278h; IRQ=5,7; OR When the Device Mode (see the next setting) is set to ECP Mode, ECP & EPP 1.9 Mode or ECP and EPP 1.7 Mode , the options available become the following: IO=378h; IRQ=7; DMA=3; (default) IO=378h; IRQ=5,6,7,10,11,12; DMA=1,3; IO=278h; IRQ=5,6,7,10,11,12; DMA=1,3; ▶ This setting is only available when the parallel port is enabled.
Device Mode	Sets the parallel port mode. ▶ Options available are: STD Printer Mode (default) SPP Mode EPP-1.9 and SPP Mode EPP-1.7 and SPP Mode ECP Mode ECP and EPP 1.9 Mode ECP and EPP 1.7 Mode ▶ This setting is only available when the parallel port is enabled.	
Power On After Power Fail	Sets whether the system should power on or power off when the power supply resumes after a power failure. ▶ Options are Power off (default) and Power on .	

BIOS

5.2.8. F81866 H/W Monitor

Select this submenu to view the main board's hardware status. Select it to run a report of various info as depicted below:


The screenshot shows the Aptio Setup Utility interface with the following components:

- Title Bar:** Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.
- Navigation Bar:** Main | **Advanced** | Chipset | Boot | Security | Save & Exit
- Main Content Area:**
 - PC Health Status**
 - CPU temperature : +34%
 - System temperature : +37%
 - CPU Fan Speed : N/A
 - VCORE : +1.048 V
 - 5VSB : +5.087 V
 - +5V : +5.045 V
 - +12V : +12.320 V
 - Configuration Menu:**
 - CCUSB Configuration
 - F81866 Super IO Configuration
 - F81866 H/W Monitor**
 - CPU PPM Configuration
- Help/Navigation Legend:**
 - ←: Select Screen
 - ↓↑: Select Item
 - Enter: Select
 - +/-: Change Opt.
 - F1: General Help
 - F2: Previous Values
 - F9: Optimized Defaults
 - F10: Save & Exit
 - ESC: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

5.2.9. CPU PPM Configuration

Select this submenu to configure the PPM (processor power module) for the CPU.

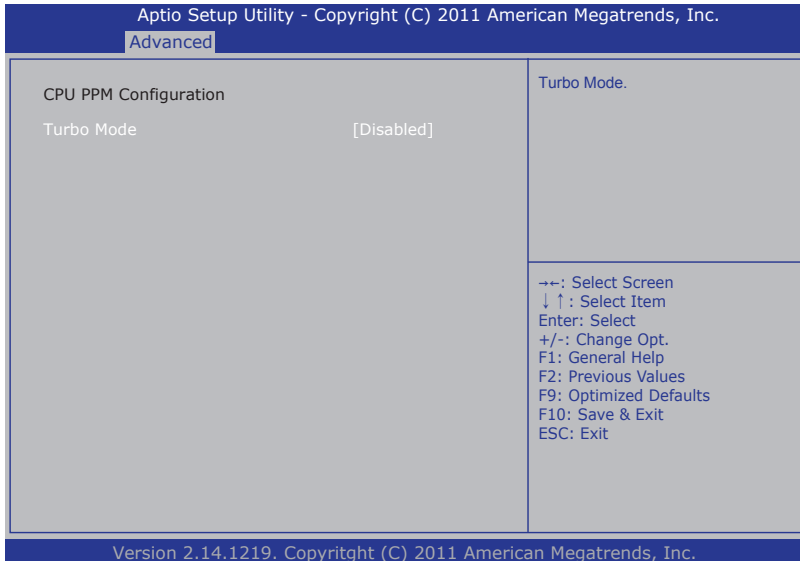


The featured setting is:

Setting	Description
Turbo Mode	Enables/disables the turbo mode, which can boost CPU performance without generating extra heat. ▶ Disabled is the default.

BIOS

5.3. Chipset

The **Chipset** menu controls the system's chipset.

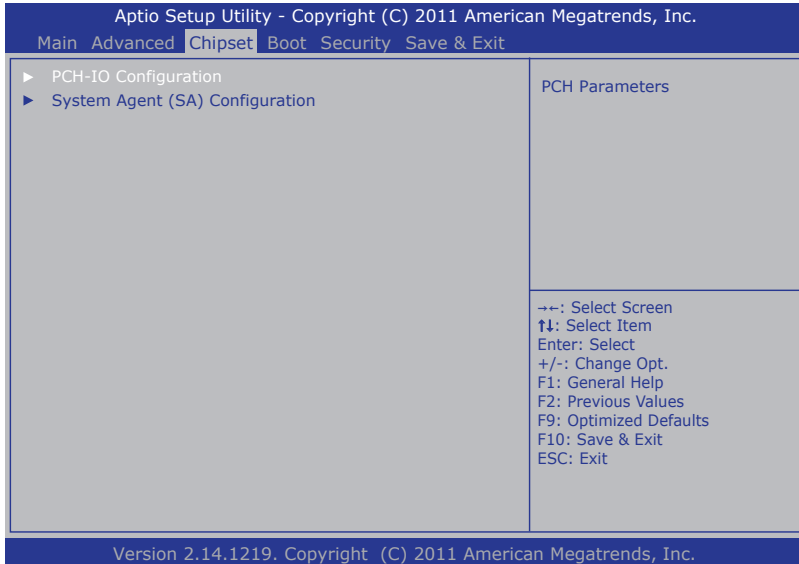


The featured submenus are **PCH-IO Configuration** and **System Agent (SA) Configuration**, which are explicated in the following of this section.

Submenu overview:

Submenu	Description
PCH-IO Configuration	Configures the PCH (Platform Controller Hub). See 5.3.1. PCH-IO Configuration on page 97 for the settings.
System Agent (SA) Configuration	Configures the System Agent (SA), i.e. the north bridge. See 5.3.2. System Agent (SA) Configuration on page 99 for the settings.

5.3.1. PCH-IO Configuration

Select this submenu to view the RC version, SKU name and revision ID of the Intel® PCH. Select this submenu also to configure the PCH:

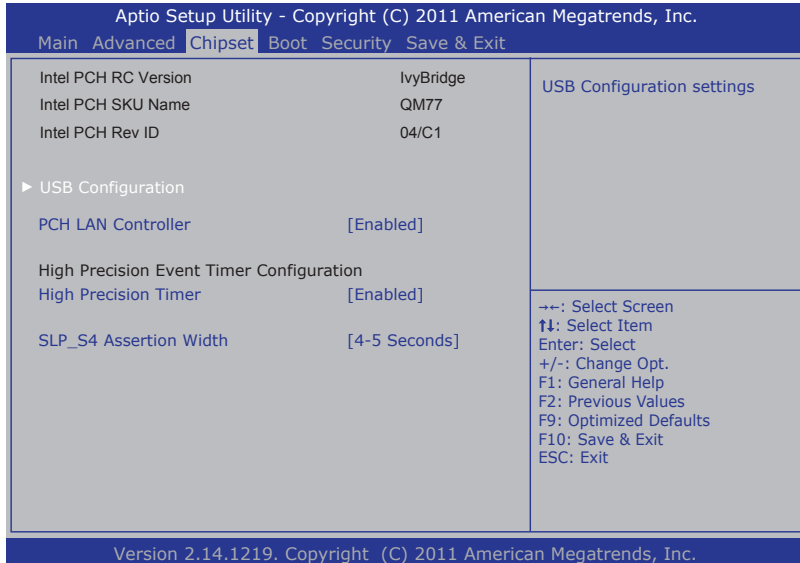

The featured settings/submenus are:


Setting / Submenu	Description						
USB Configuration	Configures the computer's USB (2.0) features by the following settings:						
	<table border="1"> <thead> <tr> <th>Setting</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>EHCI1</td> <td>Control the USB EHCI (USB2.0) function.</td> </tr> <tr> <td>EHCI2</td> <td> <ul style="list-style-type: none"> ▶ Both EHCI are enabled by default. ▶ One EHCI must always be enabled. </td> </tr> </tbody> </table>	Setting	Description	EHCI1	Control the USB EHCI (USB2.0) function.	EHCI2	<ul style="list-style-type: none"> ▶ Both EHCI are enabled by default. ▶ One EHCI must always be enabled.
	Setting	Description					
EHCI1	Control the USB EHCI (USB2.0) function.						
EHCI2	<ul style="list-style-type: none"> ▶ Both EHCI are enabled by default. ▶ One EHCI must always be enabled. 						
PCH LAN Controller	Enables/disables the onboard NIC (network interface controller). <ul style="list-style-type: none"> ▶ Enabled is the default. 						
High Precision Timer	Enables/disables the "High Precision Timer", which delivers more accurate controls for multimedia events. <ul style="list-style-type: none"> ▶ Enabled is the default. 						

BIOS

SLP_S4 Assertion Width	<p>Sets the minimum assertion width of the SLP_S4# signal to ensure the DRAMs have been safely power-cycled, or disables it.</p> <ul style="list-style-type: none">▶ Options available are:<ul style="list-style-type: none">Disabled1 to 2 seconds2 to 3 seconds3 to 4 seconds4 to 5 seconds (default)
-------------------------------	--

5.3.2. System Agent (SA) Configuration

Select this submenu to view the name and RC version of the **System Agent (SA)**, i.e. the north bridge. Select this submenu also to configure the **System Agent (SA)** by the following setting and submenus:

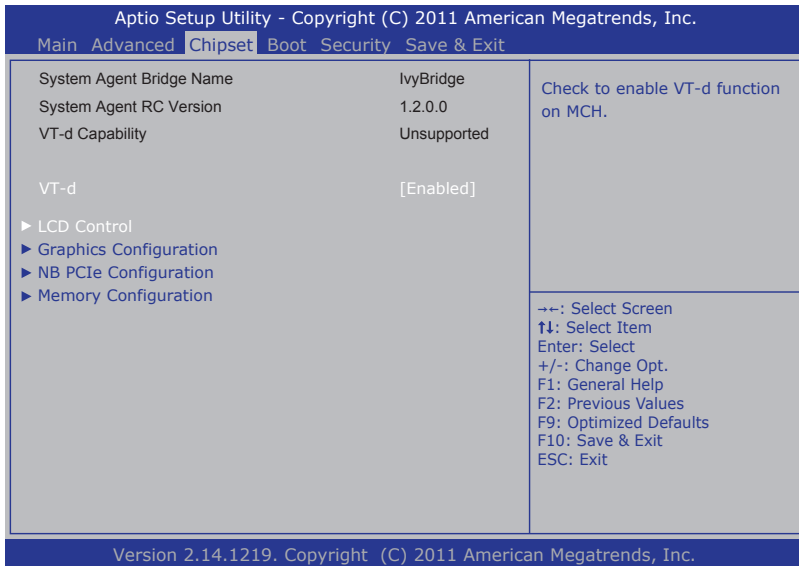


Setting / Submenu	Description			
VT-d	Enables/disables Intel® virtualization technology for directed I/O on the MCH (memory controller hub). ▶ Enabled is the default.			
LCD Control	Configures LCD feature by the following setting:			
	<table border="1"> <thead> <tr> <th>Setting</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Boot Display</td> <td>Sets which video device to activate during POST (Power-on Self Test). ▶ DVI-I is the default. ▶ This setting has no effect if an external graphicse is present.</td> </tr> </tbody> </table>	Setting	Description	Boot Display
Setting	Description			
Boot Display	Sets which video device to activate during POST (Power-on Self Test). ▶ DVI-I is the default. ▶ This setting has no effect if an external graphicse is present.			

Graphics Configuration	Displays the graphics information including IGFX VBIOS (internal graphics video BIOS) version and frequency. It also configures the graphics devices by the following settings:	
	Setting	Description
	Graphics Turbo IMON Current	Sets the supported values for graphics turbo IMON (CPU load current monitor) current. <ul style="list-style-type: none"> ▶ Options available are 14 to 31. ▶ 31 is the default.
	Primary Display	Sets the primary display, the IGFX (internal graphics) or the PEG (PCI Express Graphics), or leaves it on BIOS auto-configuration. <ul style="list-style-type: none"> ▶ Options available are Auto (default), IGFX and PEG.
Internal Graphics	Enables/disables the internal graphics, or leaves it on BIOS auto-configuration. <ul style="list-style-type: none"> ▶ Options available are Auto (default), Enabled and Disabled. 	
NB PCIe Configuration	Delivers the status and configures the north bridge PEG (PCI Express Graphics) by the following settings:	
	Setting	Description
	PEG - Gen X	Configures PEG0 B0:D1:F0 Gen1-Gen3, or leaves it on BIOS auto-configuration. <ul style="list-style-type: none"> ▶ Options available are Auto, Gen1, Gen2 and Gen3 (default).
	PEG0 ASPM	Configures the ASPM (Active State Power Management) support for the PEG device, or leaves it on BIOS auto-configuration. <ul style="list-style-type: none"> ▶ This setting has no effect if the PEG isn't the active device at the moment. ▶ Options available are: Disabled, Auto (default), ASPM L0s, ASPM L1 and ASPM L0sL1. ▶ When set to ASPM L0s or ASPM L0sL1, the setting ASPM L0s becomes available.
ASPM L0s	Enables/disables PCI Express ASPM L0s. <ul style="list-style-type: none"> ▶ Options available are Disabled, Root Port Only, Endpoint Port Only and Both Root and Endpoint Ports (default). ▶ This setting is only available when PEG0 ASPM is set to ASPM L0s or ASPM L0sL1. 	
Memory Configuration	Delivers the information/configuration of the computer's system memory such as RC version, frequency, total memory, the presence/absence of memory module(s) at SO-DIMM sockets and so on.	

5.4. Boot

The **Boot** menu configures how to boot up the system such as the configuration of boot device priority.

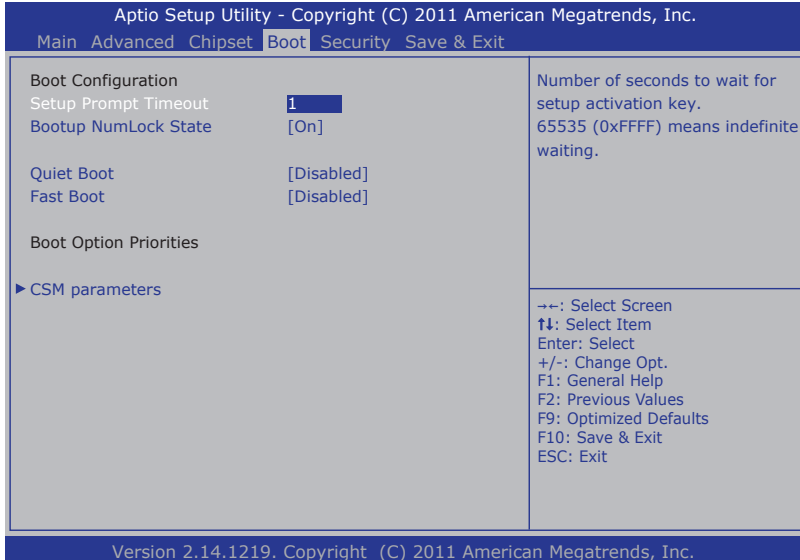


The featured settings and submenu are:

Setting	Description
Setup Prompt Timeout	Set how long to wait for the prompt to show for entering BIOS Setup. <ul style="list-style-type: none"> ▶ The default setting is 1 (sec). ▶ Set it to 65535 to wait indefinitely.
Bootup NumLock State	Sets whether to enable or disable the keyboard's NumLock state when the system starts up. <ul style="list-style-type: none"> ▶ Options available are On (default) and Off.
Quiet Boot	Sets whether to display the POST (Power-on Self Tests) messages or the system manufacturer's full screen logo during booting. <ul style="list-style-type: none"> ▶ Select Disabled to display the normal POST message, which is the default.

Fast Boot		<p>Enables/disables initializing only a minimal set of devices required to launch the active boot options when booting up the system.</p> <ul style="list-style-type: none"> ▶ Disabled is the default. ▶ This setting has no effect for BBS (BIOS Boot Specification) options. ▶ When enabled, the following settings become available: 								
		<table border="1" style="width: 100%;"> <thead> <tr> <th style="text-align: left;">Setting</th> <th style="text-align: left;">Description</th> </tr> </thead> <tbody> <tr> <td>Skip VGA</td> <td> <p>Enables/disables skipping EFI VGA driver when booting up the system.</p> <ul style="list-style-type: none"> ▶ Disabled is the default. </td> </tr> <tr> <td>Skip USB</td> <td> <p>Enables/disables skipping USB devices when booting up the system.</p> <ul style="list-style-type: none"> ▶ When enabled, the USB devices won't be available until OS startup. ▶ When disabled, the USB devices are available before OS startup. This is the default. </td> </tr> <tr> <td>Skip PS2</td> <td> <p>Enables/disables skipping PS2 (keyboard and mouse) devices when booting up the system.</p> <ul style="list-style-type: none"> ▶ Disabled is the default. </td> </tr> </tbody> </table>	Setting	Description	Skip VGA	<p>Enables/disables skipping EFI VGA driver when booting up the system.</p> <ul style="list-style-type: none"> ▶ Disabled is the default. 	Skip USB	<p>Enables/disables skipping USB devices when booting up the system.</p> <ul style="list-style-type: none"> ▶ When enabled, the USB devices won't be available until OS startup. ▶ When disabled, the USB devices are available before OS startup. This is the default. 	Skip PS2	<p>Enables/disables skipping PS2 (keyboard and mouse) devices when booting up the system.</p> <ul style="list-style-type: none"> ▶ Disabled is the default.
		Setting	Description							
		Skip VGA	<p>Enables/disables skipping EFI VGA driver when booting up the system.</p> <ul style="list-style-type: none"> ▶ Disabled is the default. 							
Skip USB	<p>Enables/disables skipping USB devices when booting up the system.</p> <ul style="list-style-type: none"> ▶ When enabled, the USB devices won't be available until OS startup. ▶ When disabled, the USB devices are available before OS startup. This is the default. 									
Skip PS2	<p>Enables/disables skipping PS2 (keyboard and mouse) devices when booting up the system.</p> <ul style="list-style-type: none"> ▶ Disabled is the default. 									
<table border="1" style="width: 100%;"> <thead> <tr> <th style="text-align: left;">Setting</th> <th style="text-align: left;">Description</th> </tr> </thead> <tbody> <tr> <td>Skip VGA</td> <td> <p>Enables/disables skipping EFI VGA driver when booting up the system.</p> <ul style="list-style-type: none"> ▶ Disabled is the default. </td> </tr> <tr> <td>Skip USB</td> <td> <p>Enables/disables skipping USB devices when booting up the system.</p> <ul style="list-style-type: none"> ▶ When enabled, the USB devices won't be available until OS startup. ▶ When disabled, the USB devices are available before OS startup. This is the default. </td> </tr> <tr> <td>Skip PS2</td> <td> <p>Enables/disables skipping PS2 (keyboard and mouse) devices when booting up the system.</p> <ul style="list-style-type: none"> ▶ Disabled is the default. </td> </tr> </tbody> </table>	Setting	Description	Skip VGA	<p>Enables/disables skipping EFI VGA driver when booting up the system.</p> <ul style="list-style-type: none"> ▶ Disabled is the default. 	Skip USB	<p>Enables/disables skipping USB devices when booting up the system.</p> <ul style="list-style-type: none"> ▶ When enabled, the USB devices won't be available until OS startup. ▶ When disabled, the USB devices are available before OS startup. This is the default. 	Skip PS2	<p>Enables/disables skipping PS2 (keyboard and mouse) devices when booting up the system.</p> <ul style="list-style-type: none"> ▶ Disabled is the default. 		
Setting	Description									
Skip VGA	<p>Enables/disables skipping EFI VGA driver when booting up the system.</p> <ul style="list-style-type: none"> ▶ Disabled is the default. 									
Skip USB	<p>Enables/disables skipping USB devices when booting up the system.</p> <ul style="list-style-type: none"> ▶ When enabled, the USB devices won't be available until OS startup. ▶ When disabled, the USB devices are available before OS startup. This is the default. 									
Skip PS2	<p>Enables/disables skipping PS2 (keyboard and mouse) devices when booting up the system.</p> <ul style="list-style-type: none"> ▶ Disabled is the default. 									
Boot Option Priority	CSM parameters	<p>Configures whether to launch the UEFI/legacy OpROM, boot options, filters, etc. See the full settings at 5.4.1. CSM Parameters on page 103.</p>								

5.4.1. CSM Paramenters

Access this submenu to configure the execution of OpROM, boot options filter and so on.

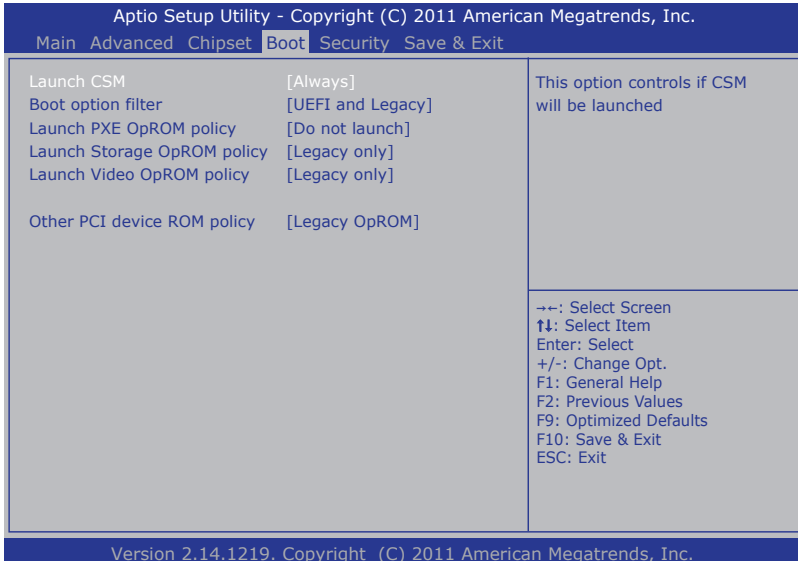

The featured settings are:


Setting	Description
Launch CSM	Enables/disables launching CSM (capability support module), which provides UEFI with the additional functionality to allow loading a traditional OS or using a traditional OpROM. <ul style="list-style-type: none"> Options available are: Always (default) and Never.
Boot Option Filter	Defines the devices to boot the system to. <ul style="list-style-type: none"> Options available are UEFI and Legacy (default), Legacy only and UEFI only. This setting is only available when Launch CSM is enabled (set to Always).
Launch PXE OpROM policy	Configures whether to launch the UEFI or legacy OpROM of PXE (Preboot eXecution Environment). <ul style="list-style-type: none"> Options available are Do not launch (default), UEFI only and Legacy only. This setting is only available when Launch CSM is enabled (set to Always).

BIOS

Launch Storage OpROM policy	<p>Configures whether to launch the UEFI or legacy OpROM of storage.</p> <ul style="list-style-type: none">▶ Options available are Do not launch, UEFI only and Legacy only (default).▶ This setting is only available when Launch CSM is enabled (set to Always).
Launch Video OpROM policy	<p>Configures whether to launch the UEFI or legacy OpROM of video.</p> <ul style="list-style-type: none">▶ Options available are Do not launch, UEFI only and Legacy only (default).▶ This setting is only available when Launch CSM is enabled (set to Always).
Other PCI device ROM priority	<p>Configures which OpROM to run for the PCI devices other than network, mass storage, or video.</p> <ul style="list-style-type: none">▶ Options available are UEFI OpROM and Legacy OpROM (default).

5.5. Security

The **Security** menu sets up the password for the system's administrator account. Once the administrator password is set up, this BIOS Setup utility is limited to access and will ask for the password each time any access is attempted.

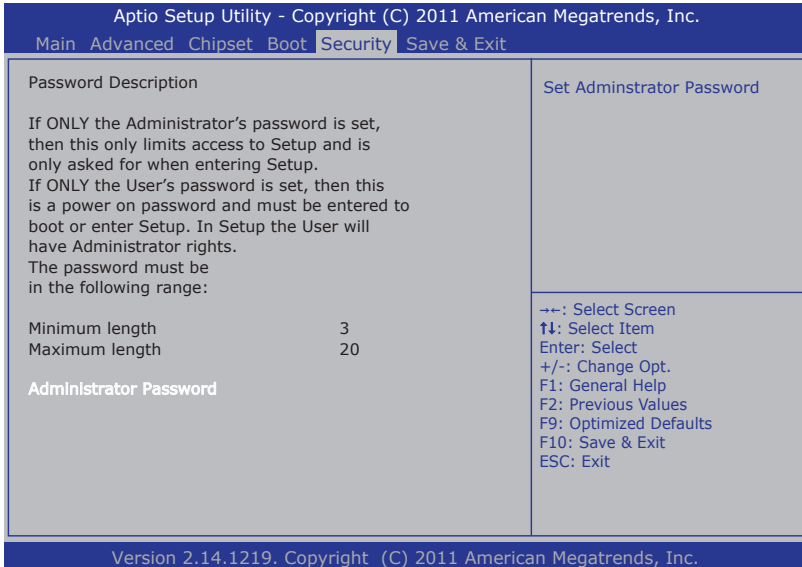


The featured setting is:

Setting	Description
Administrator Password	<p>To set up an administrator password:</p> <ol style="list-style-type: none"> 1. Select Administrator Password. An Create New Password dialog then pops up onscreen. 2. Enter your desired password that is no less than 3 characters and no more than 20 characters. 3. Hit [Enter] key to submit.

5.6. Save & Exit

The **Save & Exit** menu features a handful of commands to launch actions from the BIOS Setup utility regarding saving changes, quitting the utility and recovering defaults.

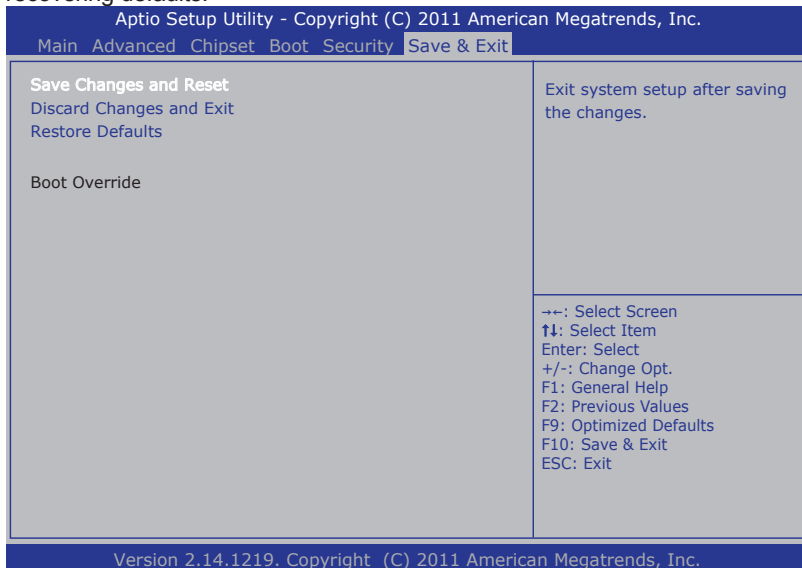

The features settings are:

Setting	Description
Save Changes and Reset	Saves the changes and quits the BIOS Setup utility.
Discard Changes and Exit	Quits the BIOS Setup utility without saving the change(s).
Restore Defaults	Restores all settings to defaults. <ul style="list-style-type: none"> ▶ This is a command to launch an action from the BIOS Setup utility.
Boot Override	Boot Override presents a list in context with the boot devices in the system. Select the device to boot up the system regardless of the currently configured boot priority. <ul style="list-style-type: none"> ▶ This is a command to launch an action from the BIOS Setup utility.

Appendices

Appendices

A: Digital I/O Setting

Digital I/O can read from or write to a line or an entire digital port, which is a collection of lines. This mechanism helps users achieve various applications such as industrial automation, customized circuit, and laboratory testing. Take the source code below that is written in C for the digital I/O application example.

Sample Codes:

```
/*----- Include Header Area -----*/
#include "math.h"
#include "stdio.h"
#include "dos.h"

int SMB_PORT_AD    = 0xF040;
int SMB_DEVICE_ADD = 0x6e;          /* 75111R's
Add=6eh */

/*----- routing, sub-routing -----*/
void main()
{
    DIO_Set(0xFFFF,0xFFFF);
    delay(2000);

    DIO_Set(0xFFFF,0x0000);
    delay(2000);

    DIO_Set(0xFFFF,0x5555);
    delay(2000);

    DIO_Set(0xFFFF,0xAAAA);
    delay(2000);
}

unsigned int DIO_Set(unsigned int oMode, unsigned int oData)
{
    unsigned int iData;
    unsigned int iTemp;

    /* GPIO10~17 control */
    SMB_Byte_WRITE(SMB_PORT_AD,SMB_DEVICE_ADD,0x10,oMode & 0x00FF);
    delay(10);

    /* GPIO20~27 control */
    SMB_Byte_WRITE(SMB_PORT_AD,SMB_DEVICE_ADD,0x20,(oMode & 0xFF00)
>> 8 );
    delay(10);

    /* GPIO10~17 Data */
    SMB_Byte_WRITE(SMB_PORT_AD,SMB_DEVICE_ADD,0x11,oData & 0x00FF);
```



```

        delay(10);

        /* GPIO20~27 Data */
        SMB_Byte_WRITE(SMB_PORT_AD, SMB_DEVICE_ADD, 0x21, (oData & 0xFF00)
>> 8 );
        delay(10);

        /* GPIO10~17 Status */
        iTemp = SMB_Byte_READ(SMB_PORT_AD, SMB_DEVICE_ADD, 0x12);
        iData = iTemp;
        delay(10);

        /* GPIO20~27 Status */
        iTemp = SMB_Byte_READ(SMB_PORT_AD, SMB_DEVICE_ADD, 0x22);
        iData = ( iTemp << 8 ) + iData;
        delay(10);

        return iData;
    }

unsigned char SMB_Byte_READ(int SMPORT, int DeviceID, int iREG_INDEX)
{
    unsigned char iData;

    outportb(SMPORT+02, 0x00);
    outportb(SMPORT+00, 0xff);
    delay(10);
    outportb(SMPORT+04, DeviceID+1);
    outportb(SMPORT+03, iREG_INDEX);
    outportb(SMPORT+02, 0x48);
    delay(10);

    iData = inportb(SMPORT+05);

    return iData;
}

void SMB_Byte_WRITE(int SMPORT, int DeviceID, int oREG_INDEX, int oREG_
DATA)
{
    outportb(SMPORT+02, 0x00);
    outportb(SMPORT+00, 0xff);
    delay(10);
    outportb(SMPORT+04, DeviceID);
    outportb(SMPORT+03, oREG_INDEX);
    outportb(SMPORT+05, oREG_DATA);
    outportb(SMPORT+02, 0x48);
    delay(10);
}

```

B: Watchdog Timer (WDT) Setting

WDT is widely used for industry application to monitor the activity of CPU. Application software depends on its requirement to trigger WDT with adequate timer setting. Before WDT time out, the functional normal system will reload the WDT. The WDT never time out for a normal system. The WDT will not be reloaded by an abnormal system, then WDT will time out and auto-reset the system to avoid abnormal operation.

This computer supports 255 levels watchdog timer by software programming I/O ports.

Below is an assembly program example to disable and load WDT.

Sample Codes:

```
/*----- Include Header Area -----*/
#include "math.h"
#include "stdio.h"
#include "dos.h"

#define SIO_INDEX      0x4E          /* or index = 0x2E */
#define SIO_DATA      0x4F          /* or data = 0x2F */

/*----- routing, sub-routing -----*/
void main()
{
    outportb(SIO_INDEX, 0x87);      /* SIO - Enable */
    outportb(SIO_INDEX, 0x87);

    outportb(SIO_INDEX, 0x07);      /* LDN - WDT */
    outportb(SIO_DATA, 0x07);

    outportb(SIO_INDEX, 0x30);      /* WDT - Enable */
    outportb(SIO_DATA, 0x01);

5sec */
    outportb(SIO_INDEX, 0xF6);      /* WDT - Timeout Value :
    outportb(SIO_DATA, 0x05);

    outportb(SIO_INDEX, 0xFA);      /* WDOUT - Enable */
    outportb(SIO_DATA, 0x01);

    outportb(SIO_INDEX, 0xF5);      /* WDT - Configuration */
    outportb(SIO_DATA, 0x31);

    outportb(SIO_INDEX, 0xAA);      /* SIO - Disable */
}
```


C: 3G Module HSPA-SI1400 Hardware/Software Installation

To be able to network with 3G, hardware-wise the computer needs a 3G module installed and a SIM card inserted (as described in [4.1.7. Install/uninstall SIM Card](#) on page 70) and software-wise the computer needs the device driver and an application program. This appendix will guide you to install the 3G module **HSPA-SI1400** and the device driver. (To have a copy of the device driver, please contact ARBOR customer service as described in [Technical Support](#) on page viii.)

C.1. Install HSPA-SI1400


1. Remove the top cover from the computer as described in [4.1.1.1. Remove Top Cover](#) on page 50.

The inside of the computer comes to view.

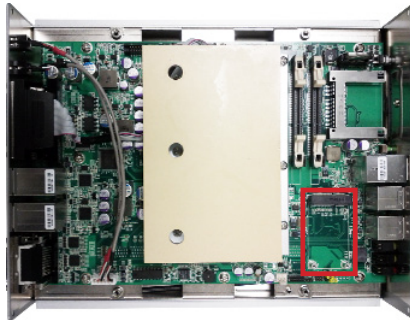

2. Find the **PCI Express Mini-card** socket for wireless modules as the illustration above shows.


The socket has a break among the connector .

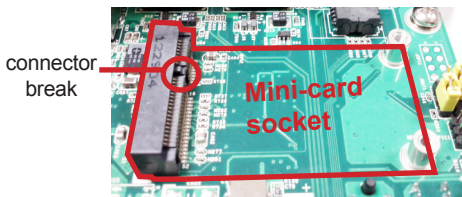


Appendices

3. Have the **HSPA-SI1400** 3G module kit. The 3G module is a full-size module of **PCI Express Mini-card** form factor, with two U.FL connectors, one is "MAIN", and the other is "AUX".


Two U.FL connectors, one is "MAIN", the other is "AUX".

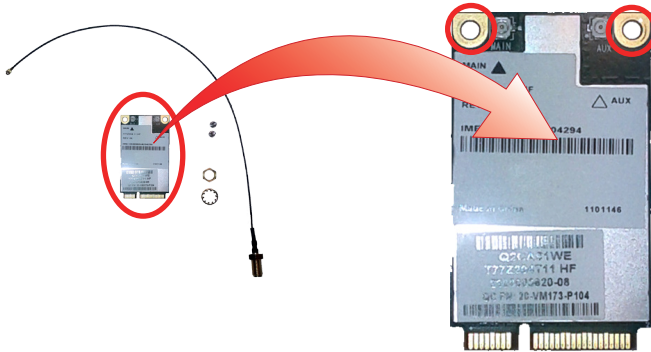


4. Plug the 3G module to the socket's connector by a slanted angle. Fully plug the module, and note the notch on the wireless module should meet the break of the connector.

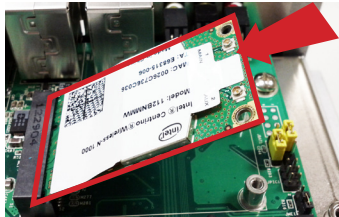


5. Press down the module and fix the module in place using two screws.

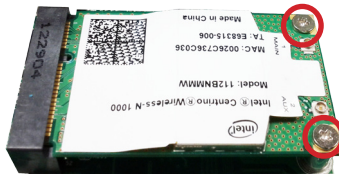

6. Remove the plastic plug from the enclosure's front panel to make an antenna hole. Keep the plastic plug for any possible restoration in the future.

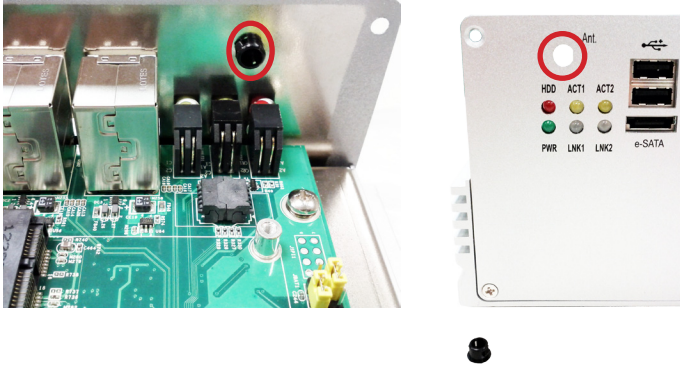


7. Have the RF antenna. The antenna has an SMA connector on one end and an MHF connector on the other.

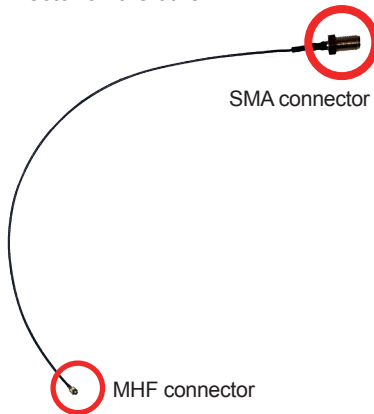


Appendices

8. Connect the RF antenna's MHF connector to the 3G module's "MAIN" connector.

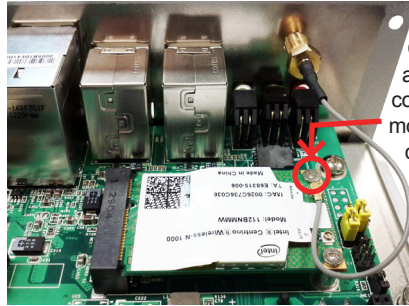


Connect the RF antenna's MHF connector to the 3G module's "MAIN" connector.

9. From the other end of the RF antenna, which is an SMA connector, remove the washer and the nut. Save the washer and nut for later use. Note the SMA connector has the form of a threaded bolt, with one flattened side.


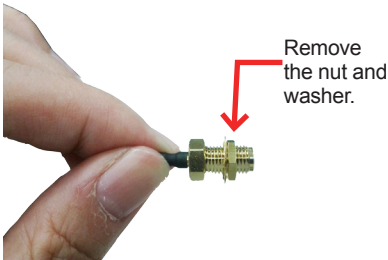


Remove the nut and washer.

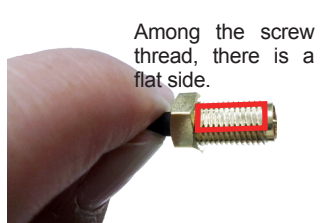


Among the screw thread, there is a flat side.

10. Pull the SMA connector through the above mentioned antenna hole. Note to meet the aforesaid flattened side with the antenna hole's flat side.

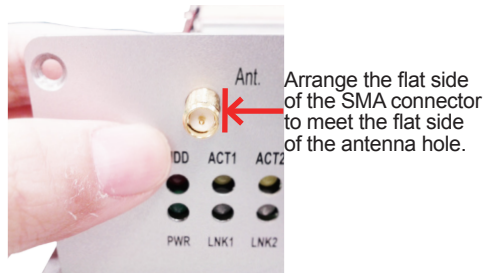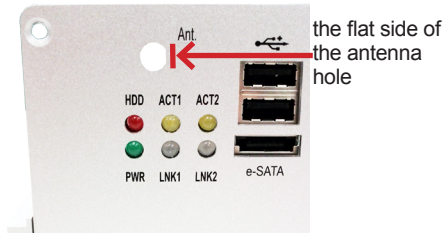


11. Mount the washer first and then the nut to the SMA connector. Make sure the nut is tightened.

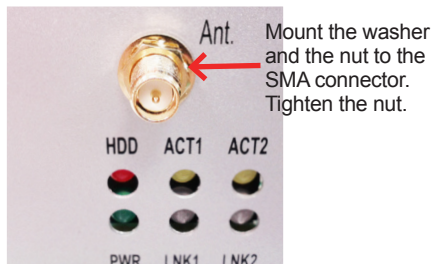


12. Restore the computer's top cover.

Appendices

13. Have an external antenna. Screw and tightly fasten the antenna to the SMA connector.

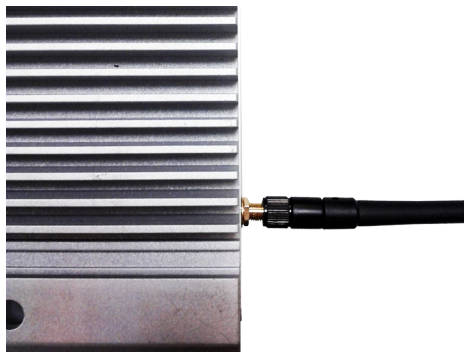

14. Swivel the antenna to an angle of best signals.

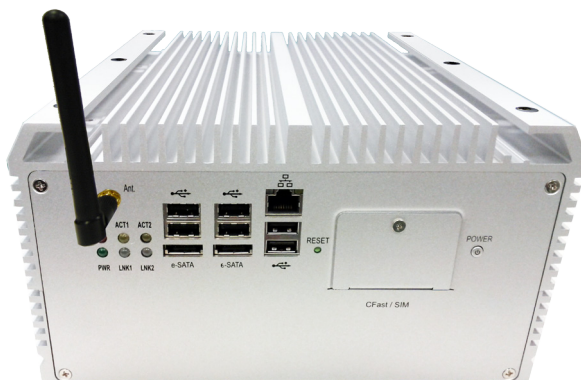

C.2. Install Device Driver

As described in [2.3. Driver Installation Notes](#) on page 17, after the drivers for the chipset, .NET Framework, audio and Ethernet are installed, you can proceed to install the driver for the wireless modules such as 3G module or Wi-Fi module.

To install the driver for the 3G module **HSPA-SI1400**:

1. Request a copy of the device driver from ARBOR customer service by the contact info as described in [Technical Support](#) on page viii.
2. Run the executable file **SWIQMISetup.exe**.


The installer then opens.



Appendices

3. Click the **Next** button to proceed.

The driver installation then starts, progresses and finishes.

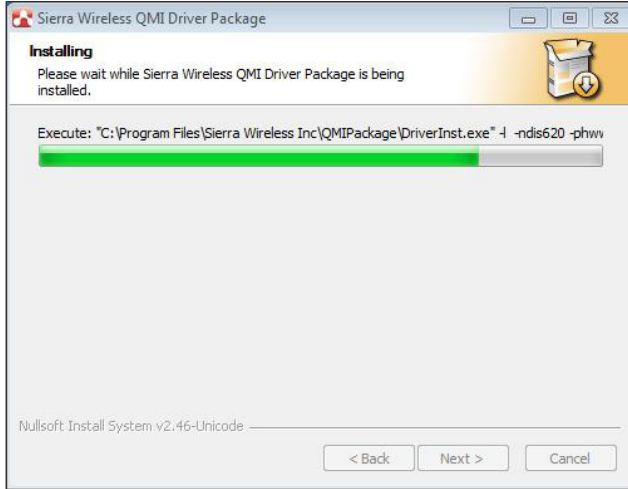

4. Click the **Finish** button to quit the driver installation.

C.3. Install Application Program

1. Request a copy of the application program from ARBOR customer service by the contact info as described in [Technical Support](#) on page [viii](#).
2. Run the Windows Installer file **Watcher_Generic.msi**.

The installer opens and prepares to install.



Once the preparation finishes, the installer prompts to install **Sierra Wireless AirCard Watcher** on the computer.



Appendices


3. Click the **Next** button to proceed.

The installer then prompts the license agreement.




4. Select **I accept the terms in the license agreement**. Click the **Change...** button to browse for an alternate folder to install the application program to, or simply click the **Next** button to install the application program to the suggested folder.

The installation then starts, progresses and finishes.

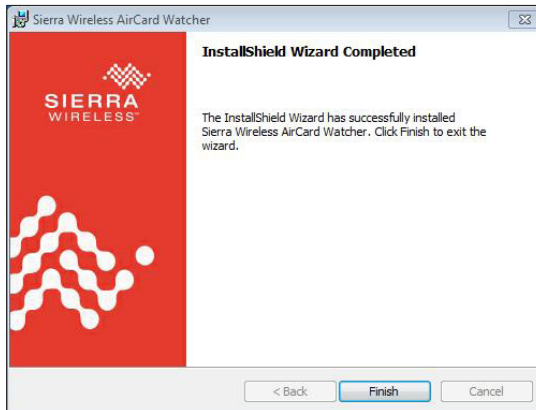

5. Click the **Finish** button to quit the installation.

An **AirCard Watcher** icon  then shows up on the desktop.

6. Double-click the **AirCard Watcher** icon  to launch the application program.

The **AirCard Watcher** opens.



7. See the document of the **AirCard Watcher** to know how to use the application program.


D: Wi-Fi Module WIFI-IN1300 Hardware/Software Installation

To use Wi-Fi, hardware-wise the computer needs a Wi-Fi module installed, and software-wise the computer needs the device driver and an application program. This appendix will guide you to install the Wi-Fi module **WIFI-IN1300** and the device driver. (To have a copy of the device driver, please contact ARBOR customer service by the contact info described in [Technical Support](#) on page [viii](#).)

D.1. Install WIFI-IN1300


1. Remove the computer's top cover as described in [4.1.1.1. Remove Top Cover](#) on page [50](#).

The inside of the computer comes to view.

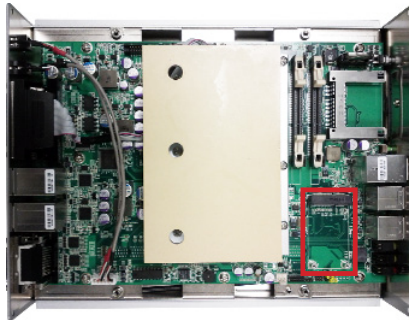


2. Find the **Mini-card** socket for wireless modules on the board as the illustration above shows.

The socket has a break among the connector.

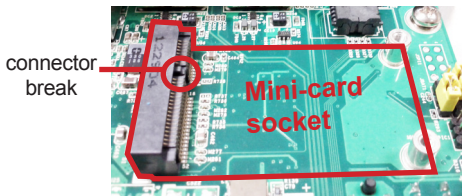

3. Prepare the **WiFi-IN1300** Wi-Fi module kit. The module is a half-size module of **PCI Express Mini-card** form factor, with two U.FL connectors, one is "MAIN", and the other is "AUX".

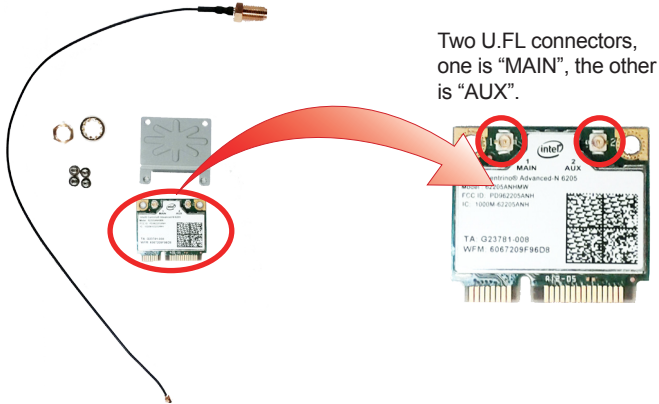

4. In order to make the half-size Wi-Fi module compatible with the **Mini-card** socket, extend the WiFi module with a "mini half bracket". Join them together by using two screws.




Position the WiFi module and the "mini half bracket" exactly as shown.



Join the WiFi module and the "mini half bracket" by using two screws.

Appendices


5. Plug the Wi-Fi module to the socket's connector by a slanted angle. Fully plug the module, and note the notch on the wireless module should meet the break of the connector.

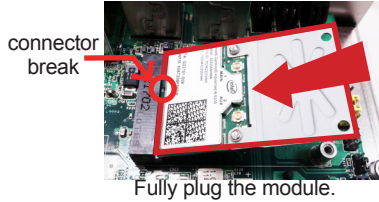


6. Press down the module and fix the module in place using two screws.




7. Remove the plastic plug from the computer's rear (or front) panel to make an antenna hole. Keep the plastic plug for any possible restoration in the future.

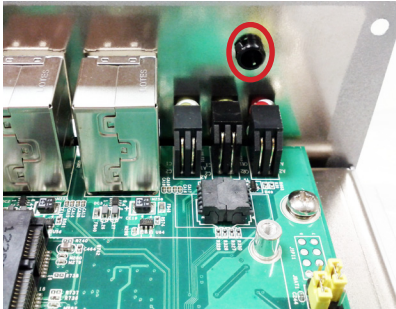

8. Have the RF antenna. The antenna has an SMA connector on one end and an MHF connector on the other.


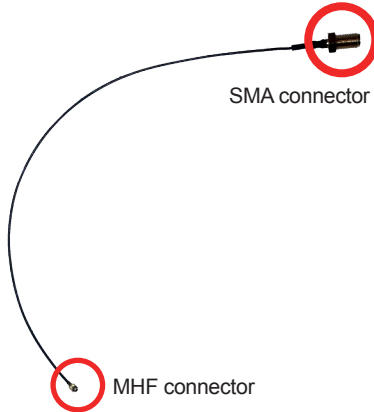


9. Connect the RF antenna's MHF connector to the Wi-Fi module's "MAIN" connector.

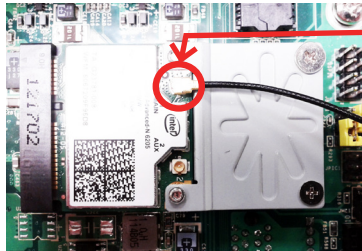



Connect the RF antenna's MHF connector to the Wi-Fi module's "MAIN" connector

10. From the other end of the RF antenna, which is an SMA connector, remove the washer and the nut. Save the washer and nut for later use. Note the SMA connector has the form of a threaded bolt, with one flat side.

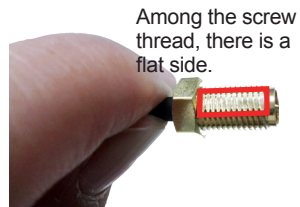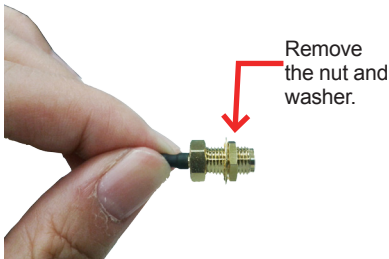


Appendices

11. Pull the SMA connector through the above mentioned antenna hole. Note to meet the aforesaid flat side with the antenna hole's flat side.

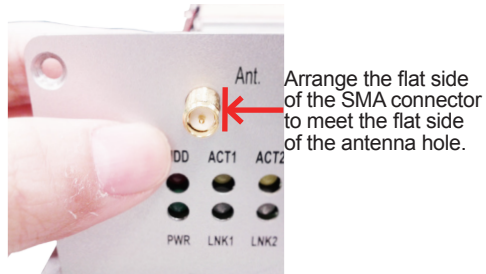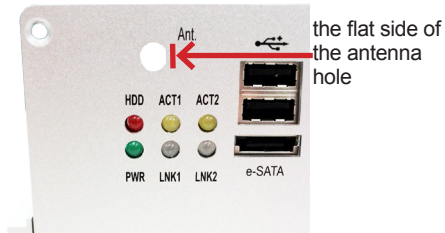


12. Mount the washer first and then the nut to the SMA connector. Make sure the nut is tightened.

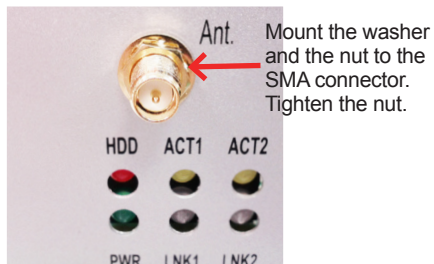

13. Restore the computer's top cover.

14. Have an external antenna. Screw and tightly fasten the antenna to the SMA connector.

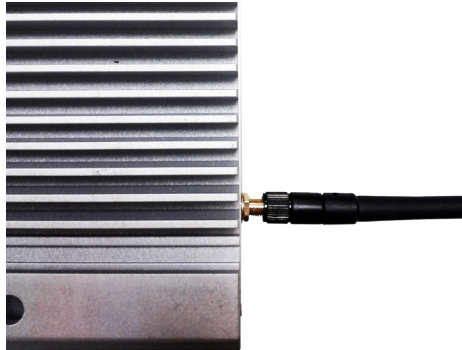

15. Swivel the antenna to an angle of best signals.




D.2. Install Device Driver & Application Program

As described in [2.3. Driver Installation Notes](#) on page 17, after the drivers for the chipset, .NET Framework, audio and Ethernet are installed, you can proceed to install the driver for the wireless modules such as 3G module or Wi-Fi module.

The device driver of **WIFI-IN1300** will install the application program (the utility) as well. Follow the guide below to install **WIFI-IN1300** driver (and the application program):


1. Request a copy of the device driver from ARBOR customer service by the contact info as described in [Technical Support](#) on page viii.
2. Run the executable file of the device driver, for example **Advanced-N 6205 WinXP_14.2.0.10_x32.exe**.

The installer then opens.

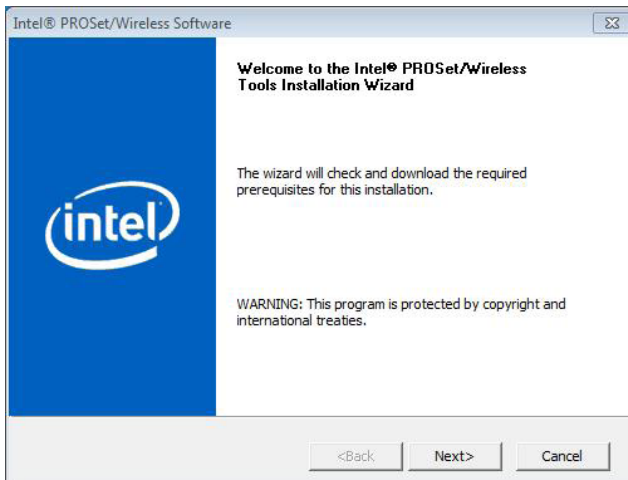


3. Click the **Next** button to proceed.

The installer then starts to prepare for the setup.

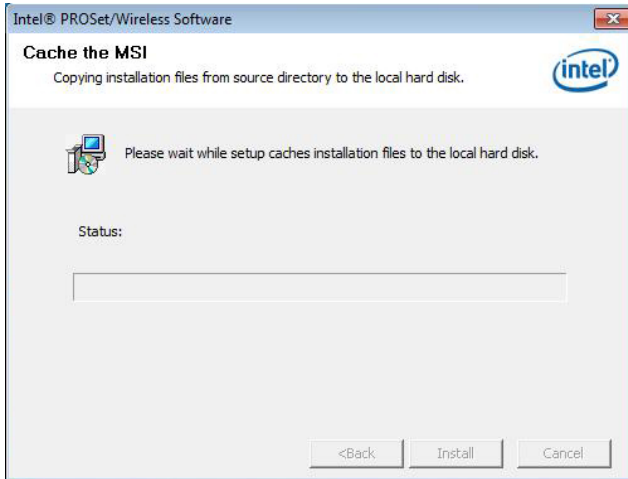

When the preparation finishes, the installer prompts to install **Intel(R) PROSet/Wireless WiFi Software** on the computer.

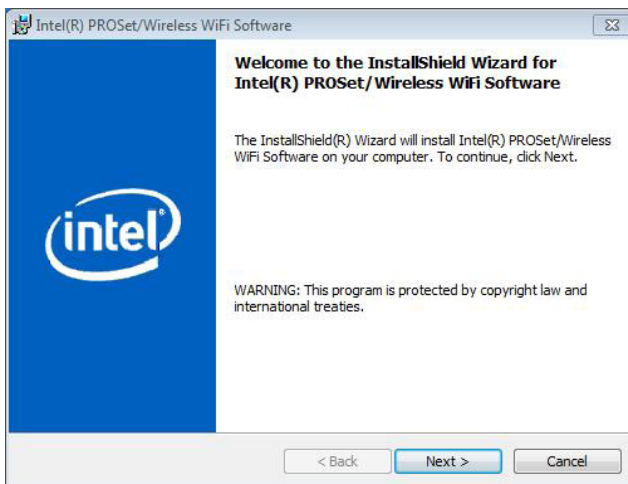

Appendices


4. Click the **Next** button to proceed.

The installer then prompts the license agreement.




5. Select **I accept the terms in the license agreement** and click the **Next** button to proceed.

The installer then asks where to install the software.

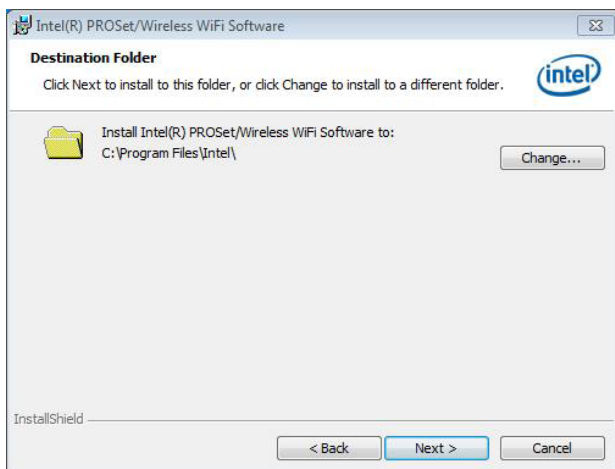


- Click the **Change...** button to browse for an alternate folder to install the software to, or simply click the **Next** button to install the software to the suggested folder.

The installer then opens a **Setup Type** selection.

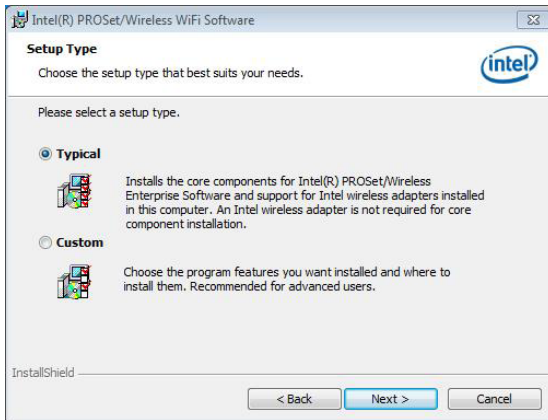


- Select **Typical** to install both the driver and the application program (recommended) or select **Custom** to choose the features to install. Then click the **Next** button to proceed.

The software installation then starts, progresses and finishes.

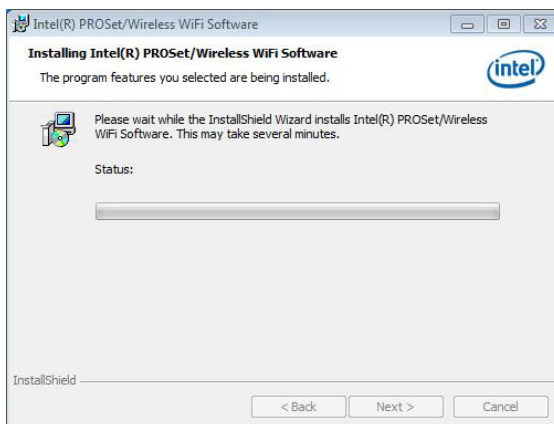

8. Click the **Finish** button to quit the software installation.

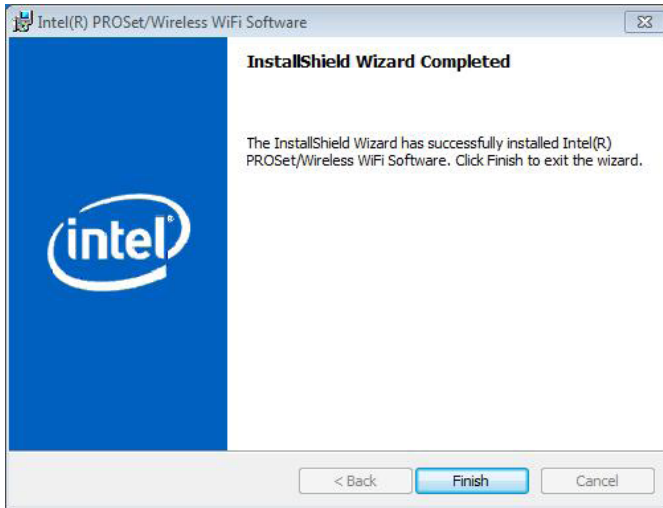

9. The computer's Wi-Fi feature is ready-to-use, see the document of the application program to know how to connect the computer to a Wi-Fi hotspot.

This page is intentionally left blank.